




Assembly instructions

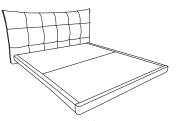


BD8098 Installation
The number of people needed for installation; 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

screwed in, tighten them all together.					
Serial number	Shape	Name	Quantity required for installation	Spare quantity	
A	S	Socket Head Cap Screw(M8*20mm)	52	0	
В	9	Socket Head Cap Screw(M8*60mm)	8	0	
С	()	Corner connector	4	0	
D		Long vertical rod	2	0	
Е		Long vertical rod (2)	2	0	
F		Support leg	2	0	
G		Pine squares	2	0	
Н	0	Gasket	60	0	
I		Double-sided tap	12	0	
J	<i>41111111</i> €	Chipboard screws	2	0	
K	B	Plastic buckle	2	0	
L		Sensors	2	0	
M		Power supply	1	0	
N					

TotaL 2 page; page 1

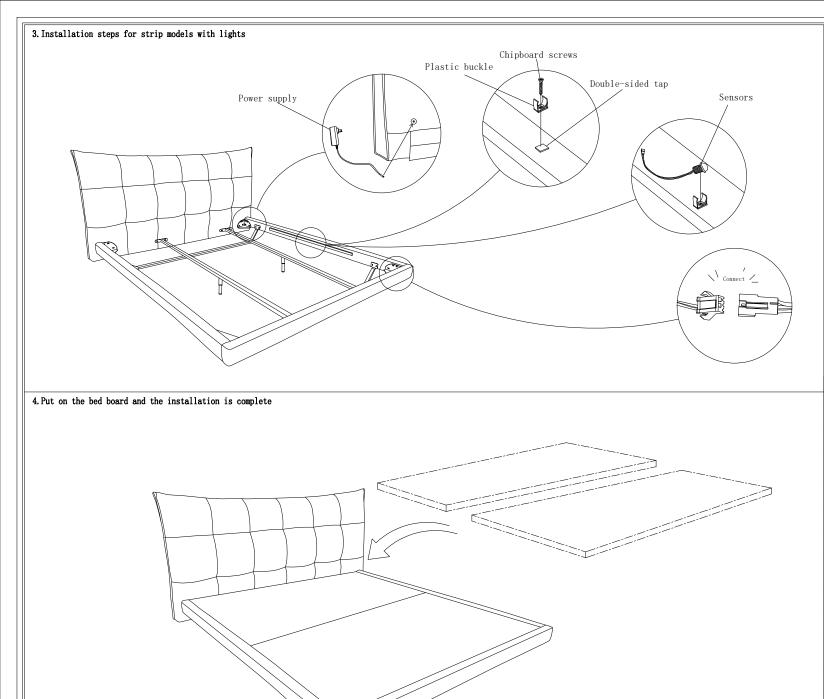



Assembly instructions



BD8098 Installation
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

screwed in, tighten them all together.						
Serial number	Shape	Name	Quantity required for installation	Spare quantity		
A	E	Socket Head Cap Screw(M8*20mm)	52	0		
В	S	Socket Head Cap Screw(M8*60mm)	8	0		
C		Corner connector	4	0		
D		Long vertical rod (1)	2	0		
E		Long vertical rod (2)	2	0		
F		Support leg	2	0		
G		Pine squares	2	0		
Н	0	Gasket	60	0		
Ι		Double-sided tap	12	0		
J	<i>€⁄шшт</i>	Chipboard screws	2	0		
K	B	Plastic buckle	2	0		
L		Sensors	2	0		
M		Power supply	1	0		
N						