


CINÈST

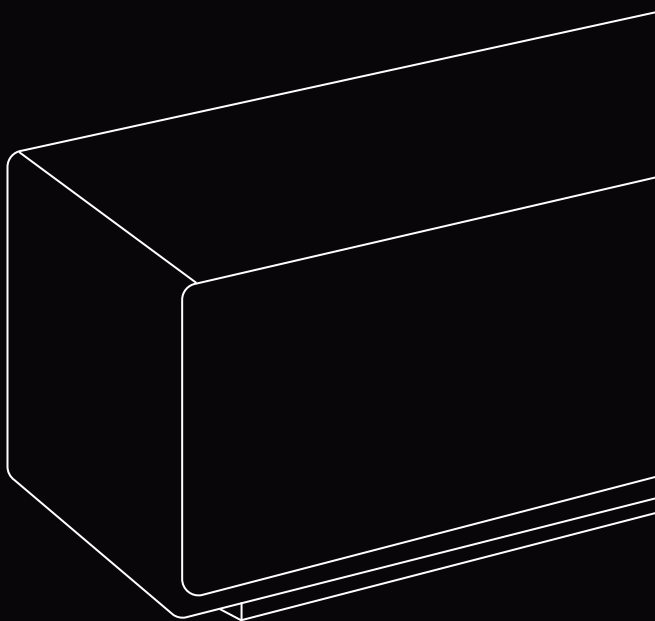

Electric


Media Console for UST Projector

- Visit us at cinest.com
- Scan the QR code for setup guides
- Contact us at support@cinest.com




Media Console Assembly Instructions


1. Check the accessories and media console sections against the parts list, then arrange them as shown before assembly.

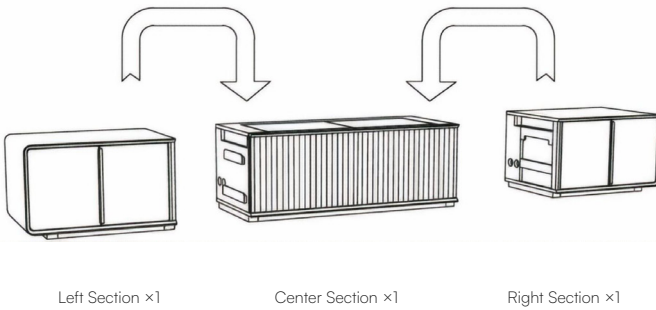


2. Lift the side section and align it with the center section.

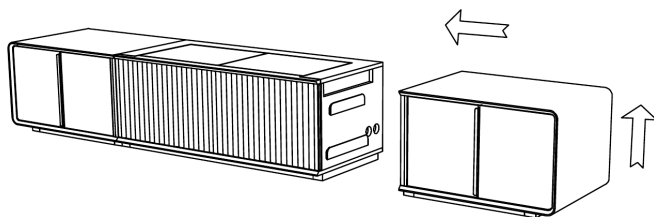

3. Align the wooden dowels, then lower the side section vertically until fully seated.

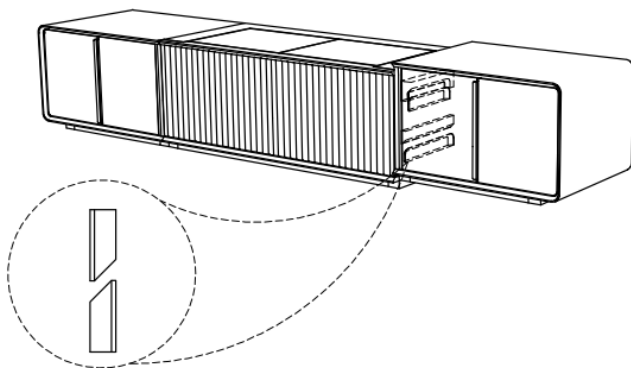


4. Assembly is complete.

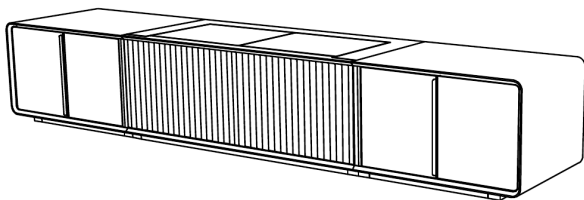


Remove the Transport Support Blocks


1. Do not connect the media console to power immediately after unpacking. Read the instructions on the front of the media console and complete the installation steps before use.

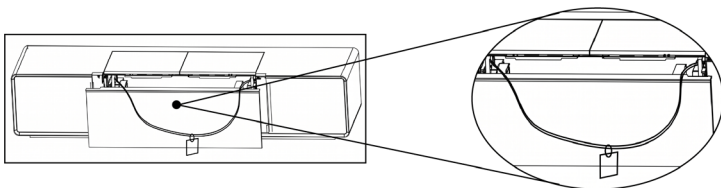


2. Pull out the center drawer of the media console.

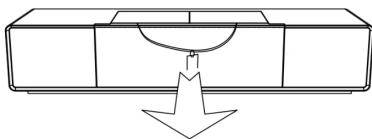

3. Follow the cords to locate the two floating-panel support blocks, one on each side.

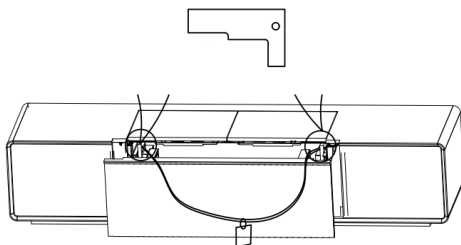


4. Lift the floating panel slightly while pulling both support blocks outward to remove them.

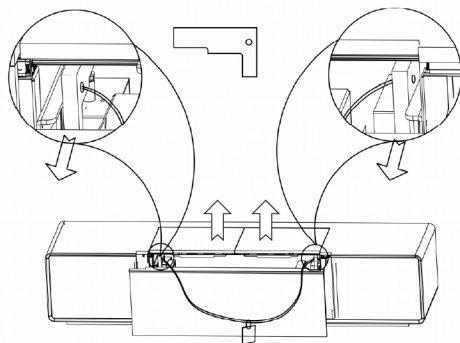

Power On the Media Console, Reset It, and Install the Projector



1. After removing both support blocks, connect the media console to a power outlet using the power input on the rear panel.

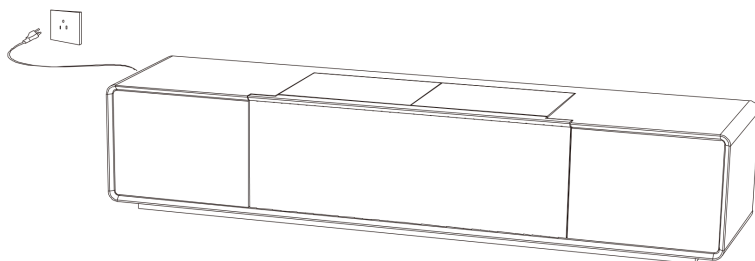

2. Once the media console is connected to power, press the Reset Button underneath the console. The console will automatically open and close. The reset is complete when the console closes.




3. Press the On/Off Button on the remote control to open the media console, then place the projector inside. Secure the projector's power cable with the supplied hook-and-loop strap to prevent it from hanging down or interfering with the platform's movement.

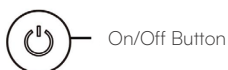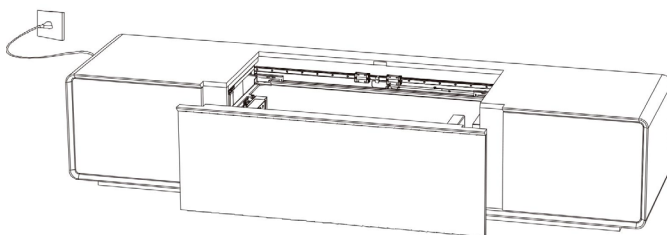

Remote Control Instructions

1. Remove the battery insulation tab from the remote control.

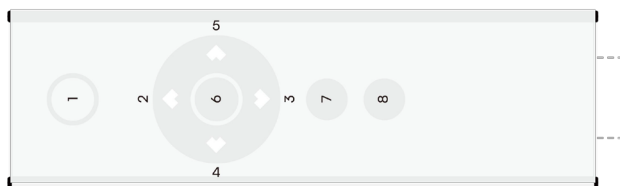


2. Once the media console is connected to power, press the On/Off Button on the remote control to turn it on.


Note: If the media console does not respond when you press the On/Off Button, check the indicator light on the remote control. If the indicator does not light up, replace the battery. If the indicator lights up, quickly press the On/Off Button twice to pair the remote control with the media console.

Remote-control battery replacement:

- (1) Remove the battery cover.

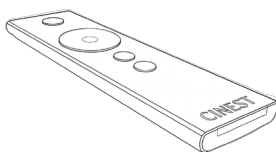


- (2) Install a new CR2032 coin-cell battery.

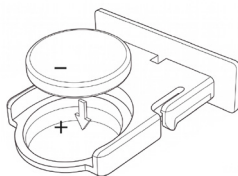

Keep the remote control within 98.43" of the media console during operation to ensure a stable signal connection.

Remote Control Operation Guide

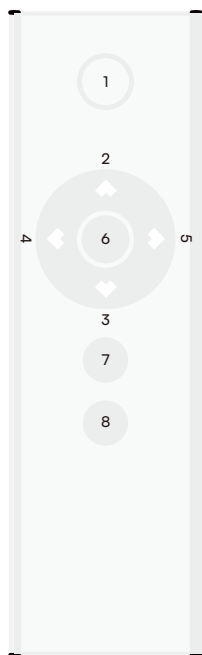


1. **Power** — On/Off Button
2. **Raise** — Moves the projector platform upward.
3. **Lower** — Moves the projector platform downward.
4. **Inward** — Moves the projector platform inward.
5. **Outward** — Moves the projector platform outward.
6. **Save Position** — Press and hold for 2 seconds to save the current position. The next time the media console is powered on, the projector platform will automatically return to the last saved position.
7. **Left Fan Control** — The fan operates in Auto Mode by default. It turns on at 95°F and turns off at 86°F.
8. **Right Fan Control** — The fan operates in Auto Mode by default. It turns on at 95°F and turns off at 86°F.

Note: When the fan is turned off, temperature-based fan control is disabled and the fan will not operate.

When the fan is turned on, automatic temperature control is enabled and the fan will operate according to the preset temperature thresholds.


UST Projector Setup & Operation

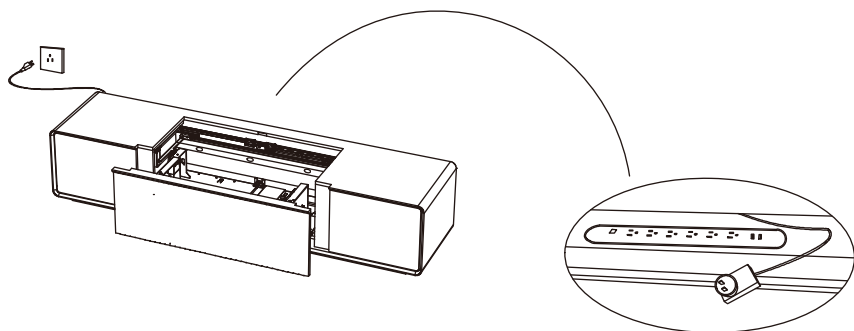

1. Connect the USB Cable: once the projector is in place, plug in the power cord and connect the projector to the media console's USB port.



Once the USB cable is connected, the media console will operate in sync with the projector when you use the projector's remote control.

The media console remote control is not required for normal operation. Use it only when you need to adjust the projector's position.

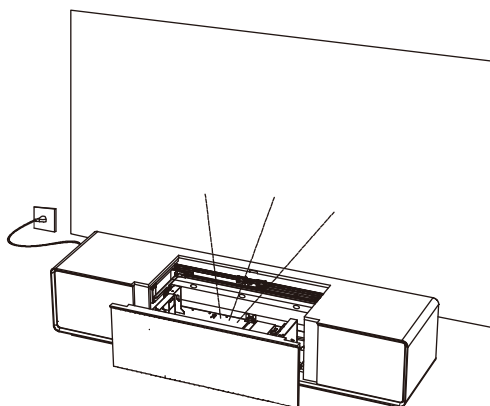

2. If your projector uses an infrared (IR) remote control, attach the IR emitter to the projector.

aim the remote directly at the IR receiver to turn the projector on or off. The location of the IR receiver is shown in the figure.

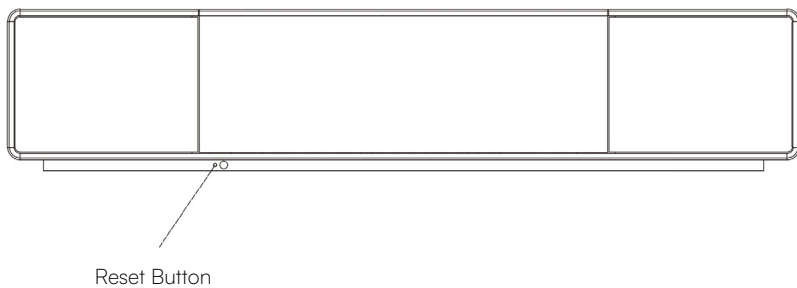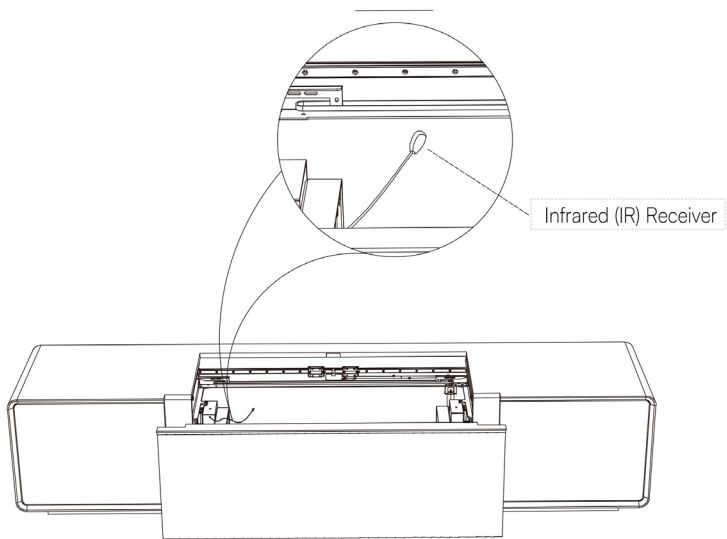

Note: If the media console does not operate properly, press the Reset Button to reset the system and resume normal operation. The location of the Reset Button is shown in the figure.

Core A1

Media Console Dimensions

All dimensions are in inches.

Dimension	90.5" Model	102.5" Model	118" Model
Overall Width	90.5	102.5	118
Overall Depth	21	21	21
Overall Height	18	18	18
Side Section Interior Width	19.5	25.5	33
Side Section Interior Depth	18.5	18.5	18.5
Side Section Interior Height	13	13	13

Core C1

Media Console Dimensions

All dimensions are in inches.

Dimension	90.5" Model	102.5" Model	118" Model
Overall Width	90.5	102.5	118
Overall Depth	21.5	21.5	21.5
Overall Height	18.5	18.5	18.5
Side Section Interior Width	19.5	25.5	33.5
Side Section Interior Depth	19	19	19
Side Section Interior Height	13	13	13



Core E1

Media Console Dimensions

All dimensions are in inches.

Dimension	90.5" Model	102.5" Model	118" Model
Overall Width	90.5	102.5	118
Overall Depth	21	21	21
Overall Height	18	18	18
Side Section Interior Width	19.5	25.5	33
Side Section Interior Depth	18.5	18.5	18.5
Side Section Interior Height	13	13	13

Projector Placement & Throw Distance

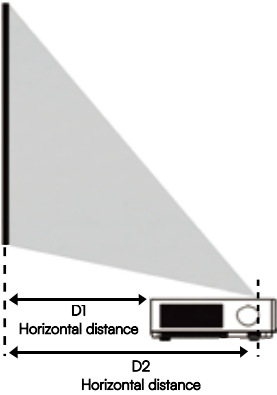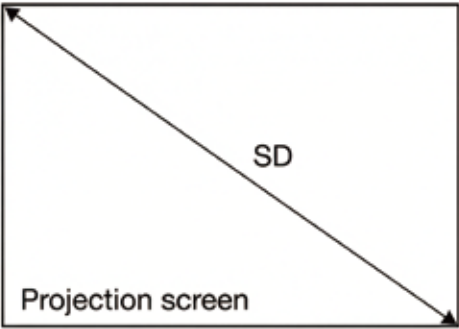

- 1. Position the projector according to its specified throw ratio for optimal image quality.
- 2. Throw ratios vary by projector brand and model. Refer to the projector manufacturer's specifications for the recommended screen-to-projector distance.

- 3. Manufacturers typically specify two projection distances: D1 (from the screen to the front of the projector) and D2 (from the screen to the projector's light source). Follow the distances specified in your projector's user manual for optimal results.

Image Size Diagonal	80"	100"	110"	120"	130"	150"
D1	6"	9.8"	12.4"	13.6"	17.9"	17.9"
D2	19.9"	23.7"	26.6"	27.5"	32.1"	34.1"

Example: For a 100-inch screen, the example above shows D1 = 9.8 in and D2 = 23.7 in.
Actual distances vary by projector model.

Precautions

1. Safety Precautions

Do not sit or lean on the floating panel, or place any objects on it. Keep the panel clear to prevent interference with its movement or damage to the media console.

2. Reset & Recovery

Avoid pressing buttons repeatedly or in rapid succession while the media console is starting up or operating. If the media console does not respond to the remote control, press the Reset Button located at the bottom left of the media console to reset the system.

3. Remote Control Usage

Operation: Press each button once and wait approximately 1 second for the media console to respond before pressing another button.

Remote Control Selection: After adjusting the projector platform to the desired position, use the projector's remote control for normal operation. Keep the media console remote control as a backup.

Troubleshooting: If the remote control does not work, check the battery and restart the media console by disconnecting and reconnecting the power.

4. Projection & Compatibility

Projection Issues: If the projected image is cut off, adjust the projector's angle and distance from the screen. Some projector models may not be compatible with the media console. Visit cinest.com for compatibility information.

5. Projector Platform Status Check

Self-Test: The projector platform automatically performs a self-check when the media console is powered on.

Manual Test: Disconnect the media console from power and manually extend the projector platform. Reconnect the power. If the projector platform moves automatically, it is functioning properly.

Note: If the issue persists, contact CINÉST Customer Support at support@cinest.com

Frequently Asked Questions

Q1. What should I do if the media console does not start, open, or close properly?

- A. Press the Reset Button on the lower-left side of the media console. The console will automatically close, open, and close again as part of the reset cycle. Wait until it is fully closed before resuming operation with the remote control.
-

Q2. For daily use, should I use the media console remote control or the projector's remote control?

- A. During initial setup, use the media console remote control to adjust the projector's position. Once the projector is connected to the media console via USB, synchronized operation is enabled. For daily use, use the projector's remote control to operate both the projector and the media console.
-

Q3. What should I keep in mind when installing the projector?

- A. Secure all cables carefully. Fasten the projector's power cable with the supplied hook-and-loop strap. Make sure the USB cable and all other cables are routed no higher than the projector platform to prevent them from snagging or interfering with platform movement.
-

Q4. How do the media console fans operate?

- A. The fan in the center section operates in sync with the projector. The fans in the side sections are temperature-controlled and operate in Auto Mode by default. They turn on at 95°F and turn off at 86°F. The side fans can also be turned off manually using the media console remote control.
-

Q5. What should I keep in mind when assembling or moving the media console?

- A. The media console consists of left, center, and right sections and features a screw-free, modular assembly. Before moving the media console, make sure it is fully closed to prevent damage to the floating panel.

CINEST.COM

Cinest

SEE MORE.
FEEL MORE.