



POVISON

Modern Electric TV Stand for Projector

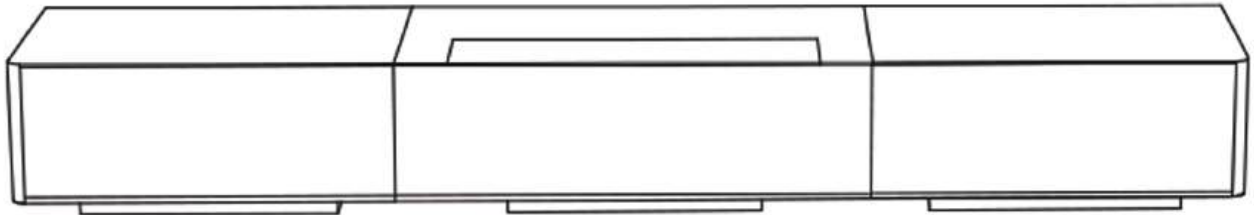


- Batteries not included (shipping safety regulations)
- Follow us on YouTube (scan QR code) for setup guides

1.Power On

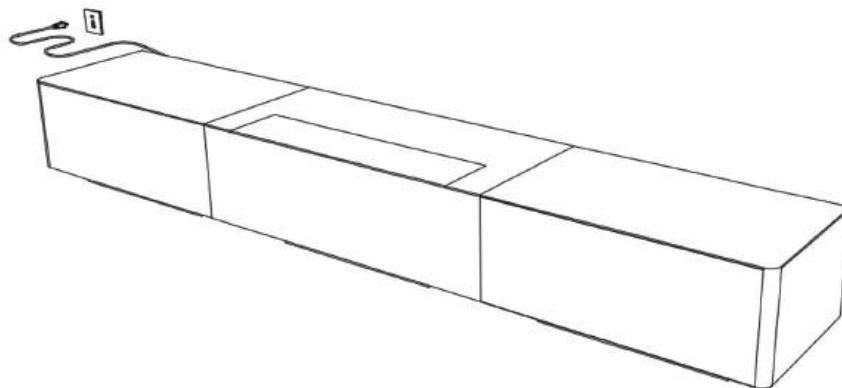

2.Turn On

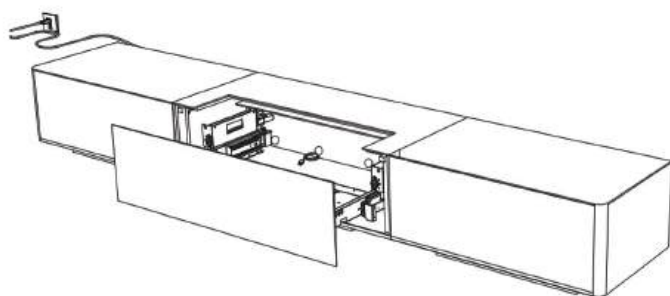

On-Off Key




Forward key

Backward key


Press the "Power Button"
on the remote to activate the console.

3. Connect Cables


Once the projector is placed, plug in the power cord and connect the projector to the console's USB port.

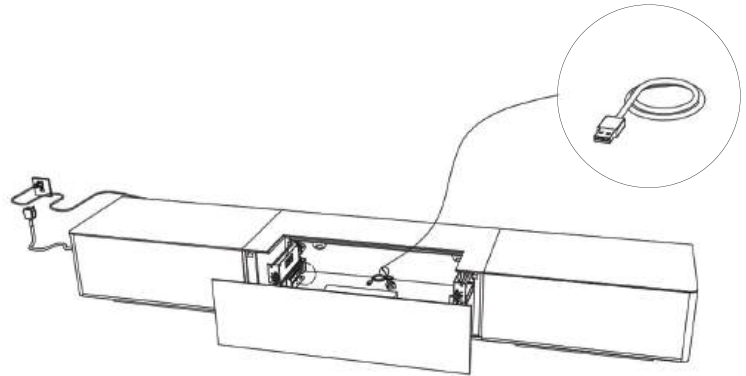


4. Focus

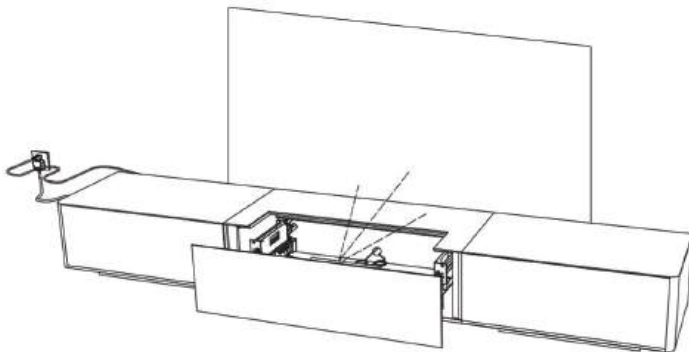

Use the front/back buttons to adjust the cabinet extension until the projection is clear. Hold for 10 seconds to save position (auto-memorized for next startup).

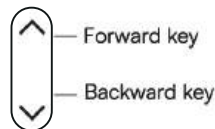


Battery installation instructions

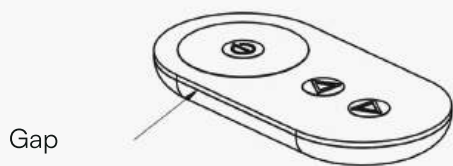


1. Open the panel of the remote along the gap in the surface.

2. Unscrew the set screws on the circuit board.

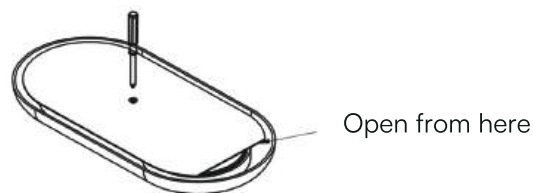

3. The button cell is placed in the groove with the positive terminal faces down. (Make sure to clearly identify the positive and negative terminals of the battery.)

4. Install the board in the directions shown until the board is properly seated.

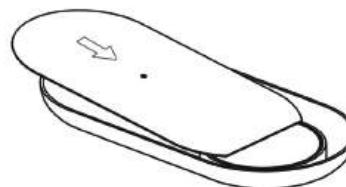

5. Screw in the screws and cover back into the panel.

Precautions

1) Safety Precautions

Please do not lift the floating panel directly.

Do not place objects on the floating panel to avoid interference with operation or damage.

2) Auto-reset

Power-On Note:

Avoid rapid remote commands during startup/operation. If the remote is unresponsive, power off for 10 seconds to reset.

3) Remote Control Usage

- Operation: Press the button once and wait approximately 5 seconds for sensor response. Do not press repeatedly.
- Switching Remotes: After adjusting the drawer, use the projector's remote for console control (original remote can be kept a spare.).
- Troubleshooting:

Remote not working? Check batteries and power cycle the unit.

Press ▲/▼ buttons; if the drawer moves, the remote is functional.

4) Projection & Floating Panel Issues

- Projection Issues:

Adjust the projector's angle/distance if the image is cut off. Some models may not be compatible—see website for details.

5) Gimbal Status Check

- Self-Test:

The gimbal performs self-check when powered on.

- Manual Test:

With power off, extend the drawer. After reconnecting power, if the gimbal moves, it's functioning properly.

For unresolved issues, contact customer support.



9:00AM-6:00PM
(CST) Mon-Fri

For product issues, scan to contact PT TV Stand VIP customer service.

POVISON

✉ supportingcenter@povison.com

🌐 www.povison.com

Actual product may differ. Read and retain this manual.

PT8002 Compatible Projector Models List

Projector Brand	Model	80/90-inch Screen		100-inch Screen		120-inch Screen		150-inch Screen	
		Throw Distance	Match	Throw Distance	Match	Throw Distance	Match	Throw Distance	Match
Epson	LS800	12.2"	✓	13.8"	✓	20.2"	✓	21.26"	☐ 5.5"
	LS300-White	20.5"	✓	22.8"	✓	27.6"	✓	/	/
	LS300-Black	20.5"	✓	22.8"	✓	27.6"	✓	/	/
Hisense	PL1	10.2"	✓	12.2"	✓	16.5"	✓	/	/
	PL2	4.6"	✗	/	/	12.2"	✓	18"	✓
	PX3-PRO	17.3"	✓	19.3"	✓	22.8"	✗	28.7"	✗
	100L9GU	19.7"	✓	21.7"	✓	/	/	/	/
Optoma	CinemaX P1	5.7"	✓	10.1"	✓	14.5"	✓	/	/
AWOL VISION	LTV-2500	6"	✓	9.8"	✓	13.6"	✓	20.2"	☐ 4.3"
	LTV-3000 PRO	6"	✓	9.8"	✓	13.6"	✓	20.2"	☐ 4.3"
	LTV-3500 Pro	6"	✓	9.8"	✓	13.6"	✓	20.2"	☐ 4.3"
Formovie	Theater Premium	16.5"	✓	18.1"	✓	22"	✗	27.6"	✗
LG	HU85LA	15.7"	✓	17.3"	✓	20.9"	☐ 5.1"	/	/
	HU915QB	15"	✓	16.5"	✓	19.7"	✓	/	/
	HU915QE	15"	✓	16.5"	✓	19.7"	✓	/	/
	HU715QW	17.3"	✓	19.3"	✓	22.8"	✗	/	/
	HF65LA	24.4"	✓	27.2"	✓	/	/	/	/
	HF85JA	17.7"	✓	19.3"	✓	22.4"	✓	/	/
	HU85LS	15"	✓	16.5"	✓	19.7"	✓	/	/
NextGo	Aurora Pro	5.9"	✓	7.8"	✓	11.5"	✓	17.3"	✓
	Aurora Lite	5.9"	✓	7.8"	✓	11.5"	✓	17.3"	✓
	Aurora PJ90	18.1"	✓	20.1"	✓	24"	✗	29.9"	✗
SAMSUNG	SP-LSP7TFAXZA	9.8"	✓	11.8"	✓	16.1"	✓	/	/
	-E99SAMSPLPU9D	/	/	4.4"	✓	7.7"	✓	/	/
ViewSonic	PX749-4K	/	/	8.2"	✗	9.8"	✓	12.1"	✓
	X1000-4K	19.7"	✓	21.7"	✓	26"	✓	32.7"	✗
CASIRIS	A6	6"	✓	10"	✓	15"	✓	21"	☐ 5.2"
	H6	/	/	9.8"	✓	13.6"	✓	20.2"	✓
XGIMI	AURA	6.1"	✓	8.2"	✓	11.7"	✓	17.4"	✓
	AURA 2	5.4"	✗	7"	✗	10.3"	✓	15.3"	✓
Elite Projector	MosaicGO	/	/	14.5"	✓	19"	✓	/	/
WEMAX	Nova	18.1"	✓	20.5"	✓	24.4"	✗	30.3"	✗
BenQ	V7050i	7.1"	✓	9.1"	✓	13"	✓	/	/

☑ "Fully Compatible"

☐ "Recommended Clearance from Wall for Outward-Adjusting Cabinet"

✗ "Incompatible"

This table was last updated on July 18, 2025(Designed by POVISION SMART)