



POVISON

# Modern Electric TV Stand for Projector

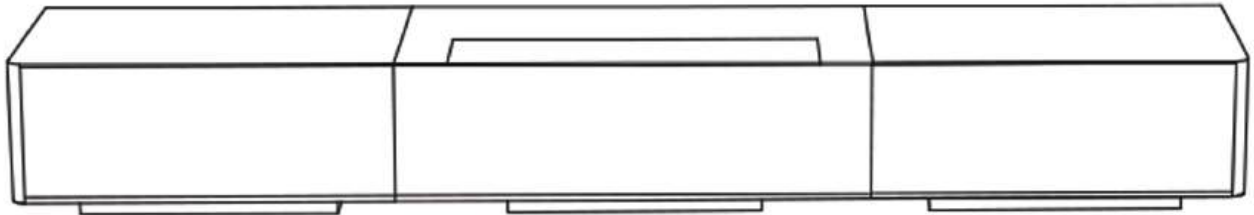


- Batteries not included (shipping safety regulations)
- Follow us on YouTube (scan QR code) for setup guides

## 1.Power On

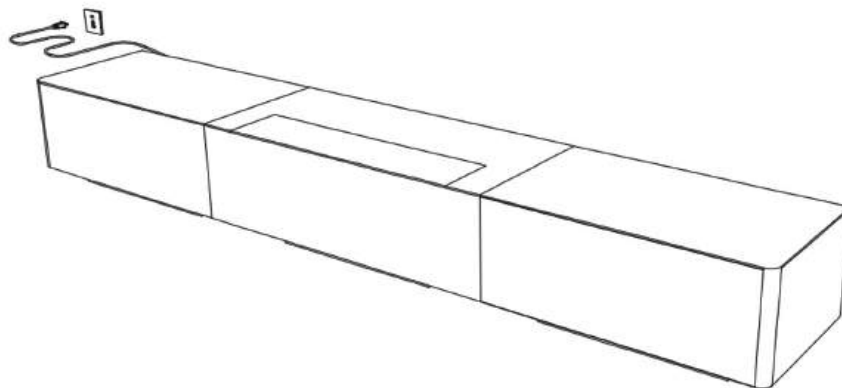

## 2.Turn On

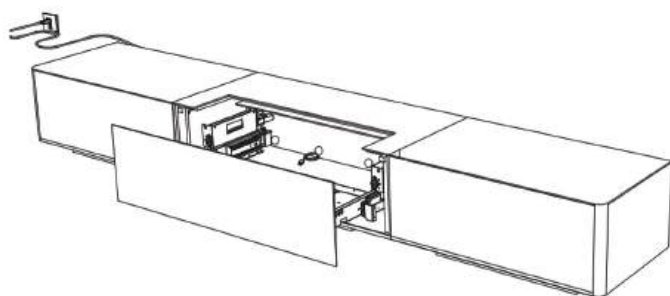

On-Off Key




Forward key

Backward key


Press the "Power Button"  
on the remote to activate the console.

### 3. Connect Cables


Once the projector is placed, plug in the power cord and connect the projector to the console's USB port.

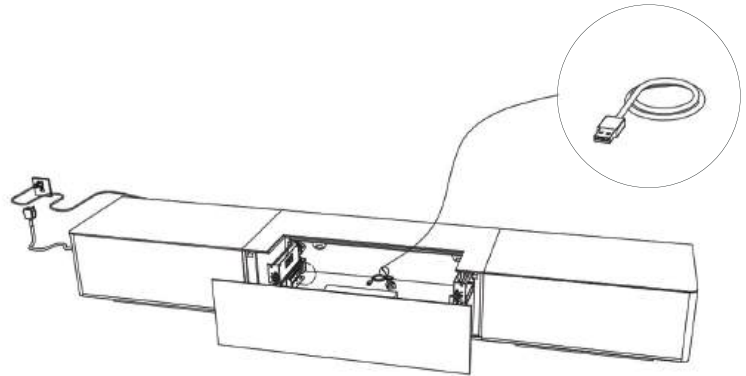


### 4. Focus

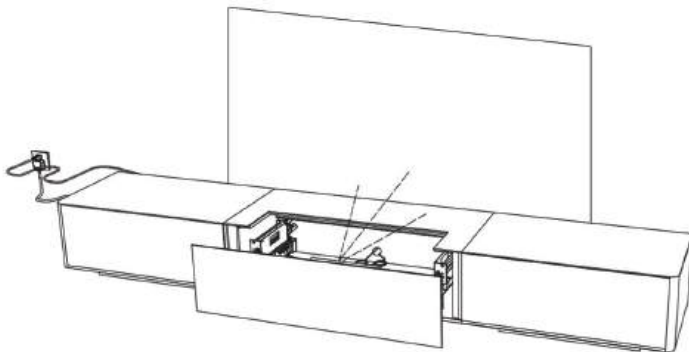

Use the front/back buttons to adjust the cabinet extension until the projection is clear. Hold for 10 seconds to save position (auto-memorized for next startup).

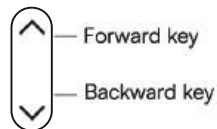


## Battery installation instructions

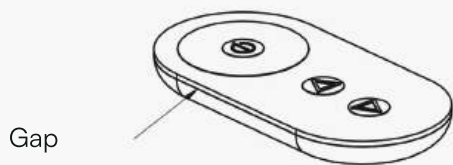


Gap

**1.** Open the panel of the remote along the gap in the surface.

**2.** Unscrew the set screws on the circuit board.

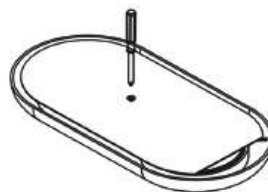


Open from here

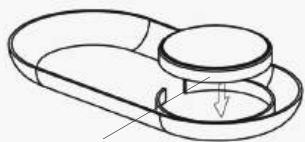

Battery Type: CR2025

**3.** The button cell is placed in the groove with the positive terminal faces down. (Make sure to clearly identify the positive and negative terminals of the battery.)

**4.** Install the board in the directions shown until the board is properly seated.

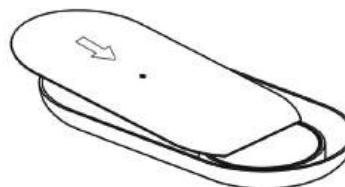

**5.** Screw in the screws and cover back into the panel.

## Precautions

### 1) Safety Precautions

Please do not lift the floating panel directly.

Do not place objects on the floating panel to avoid interference with operation or damage.

### 2) Auto-reset

Power-On Note:

Avoid rapid remote commands during startup/operation. If the remote is unresponsive, power off for 10 seconds to reset.

### 3) Remote Control Usage

- Operation: Press the button once and wait approximately 5 seconds for sensor response. Do not press repeatedly.
- Switching Remotes: After adjusting the drawer, use the projector's remote for console control (original remote can be kept a spare.).
- Troubleshooting:

Remote not working? Check batteries and power cycle the unit.

Press ▲/▼ buttons; if the drawer moves, the remote is functional.

#### 4) Projection & Floating Panel Issues

- Projection Issues:

Adjust the projector's angle/distance if the image is cut off. Some models may not be compatible—see website for details.

#### 5) Gimbal Status Check

- Self-Test:

The gimbal performs self-check when powered on.

- Manual Test:

With power off, extend the drawer. After reconnecting power, if the gimbal moves, it's functioning properly.

For unresolved issues, contact customer support.



9:00AM-6:00PM  
(CST) Mon-Fri

For product issues, scan to contact PT TV Stand VIP customer service.

# POVISON

✉ [supportingcenter@povison.com](mailto:supportingcenter@povison.com)

🌐 [www.povison.com](http://www.povison.com)

Actual product may differ. Read and retain this manual.

PT8136 Compatible Projector Models List									
Projector Brand	Model	80"/90" Screen		100" Screen		120" Screen		160" Screen	
		Throw Distance	Match	Throw Distance	Match	Throw Distance	Match	Throw Distance	Match
Epson	LS800	12.2"	✓	13.8"	✓	20.2"	☐ 4.3"	21.26"	☐ 5.5"
	LS300-White	20.5"	✓	22.8"	✓	27.6"	✗	/	/
	LS300-Black	20.5"	✓	22.8"	✓	27.6"	✗	/	/
Hisense	PL1	10.2"	✓	12.2"	✓	16.5"	✓	/	/
	PL2	4.6"	✓	/	/	12.2"	✓	18"	☐ 2.4"
	100L9GU	19.7"	✓	21.7"	✓	/	/	/	/
Optoma	CinemaX P1	5.7"	✓	10.1"	✓	14.5"	✓	/	/
AWOL VISION	LTV-2500	6"	✓	9.8"	✓	13.6"	✓	20.2"	☐ 4.3"
	LTV-3000 PRO	6"	✓	9.8"	✓	13.6"	✓	20.2"	☐ 4.3"
	LTV-3500 Pro	6"	✓	9.8"	✓	13.6"	✓	20.2"	☐ 4.3"
LG	HU915QB	15"	✓	16.5"	✓	19.7"	☐ 3.9"	/	/
	HU915QE	15"	✓	16.5"	✓	19.7"	☐ 3.9"	/	/
	HF85JA	17.7"	✓	19.3"	✓	22.4"	✓	/	/
	HU85LS	15"	✓	16.5"	✓	19.7"	☐ 3.9"	/	/
NextGo	Aurora Pro	5.9"	✓	7.8"	✓	11.5"	✓	17.3"	☐ 1.6"
	Aurora Lite	5.9"	✓	7.8"	✓	11.5"	✓	17.3"	☐ 1.6"
SAMSUNG	SP-LSP7TFAXZA	9.8"	✓	11.8"	✓	16.1"	✓	/	/
	-E99SAMSPLPU9D	/	/	4.4"	✓	7.7"	✓	/	/
ViewSonic	PX749-4K	/	/	8.2"	✓	9.8"	✓	12.1"	✓
	X1000-4K	19.7"	✓	21.7"	✓	26"	✗	32.7"	✗
CASIRIS	A6	6"	✓	10"	✓	15"	✓	21"	☐ 5.1"
	H6	/	/	9.8"	✓	13.6"	✓	20.2"	☐ 4.3"
XGIMI	AURA	6.1"	✓	8.2"	✓	11.7"	✓	17.4"	☐ 1.6"
	AURA 2	5.4"	✗	7"	✓	10.3"	✓	15.3"	✓
BenQ	V7050i	7.1"	✓	9.1"	✓	13"	✗	/	/

☑ "Fully Compatible"

☐ "Recommended Clearance from Wall for Outward-Adjusting Cabinet"

✗ "Incompatible"

This table was last updated on July 18, 2025(Designed by POVISON SMART)