




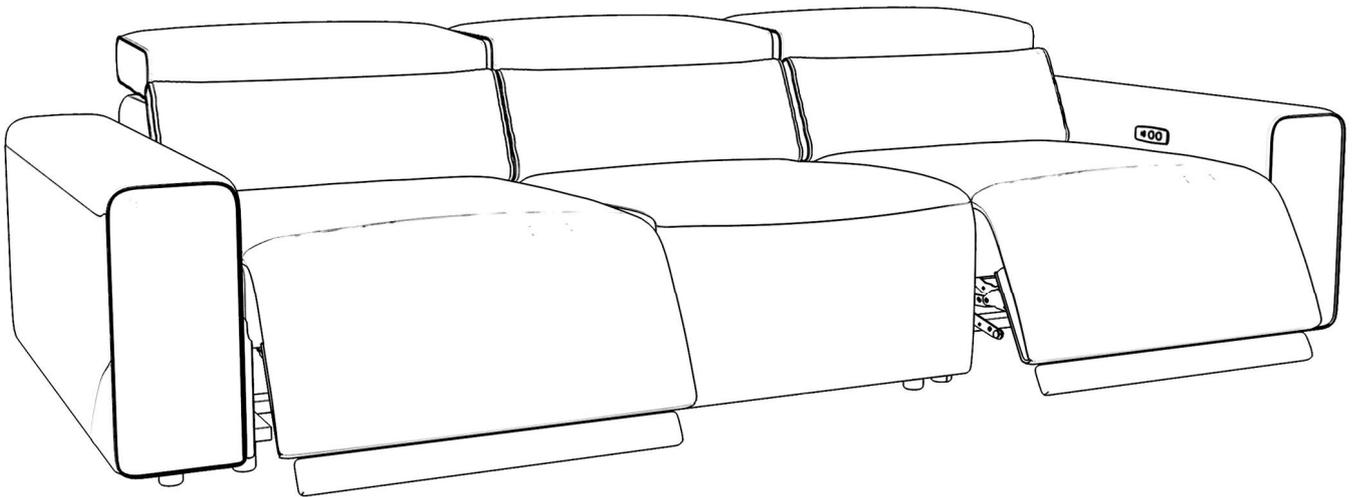


# Power Loveseat Sofa Reclining Couch Sofa


INSTRUCTION MANUAL



# 1. Accessory List

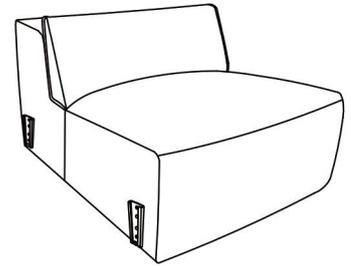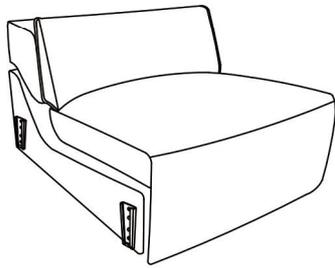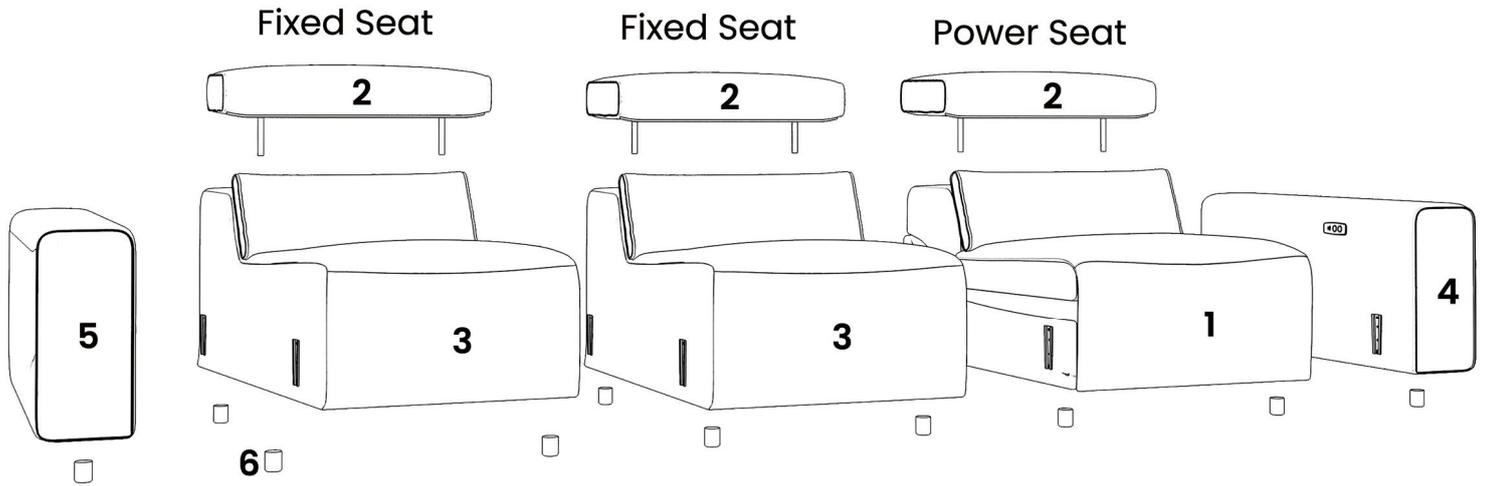


1: Power Seat Cushion + Backrest    2: Headrest    3: Fixed Seat Cushion + Backrest

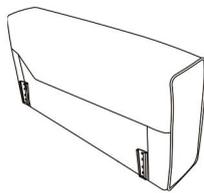


4: Power Seat Armrest    5: Fixed Seat Armrest    6: Leg    7: Power cord

## 2. Assembly Instructions



### Power Side Seat

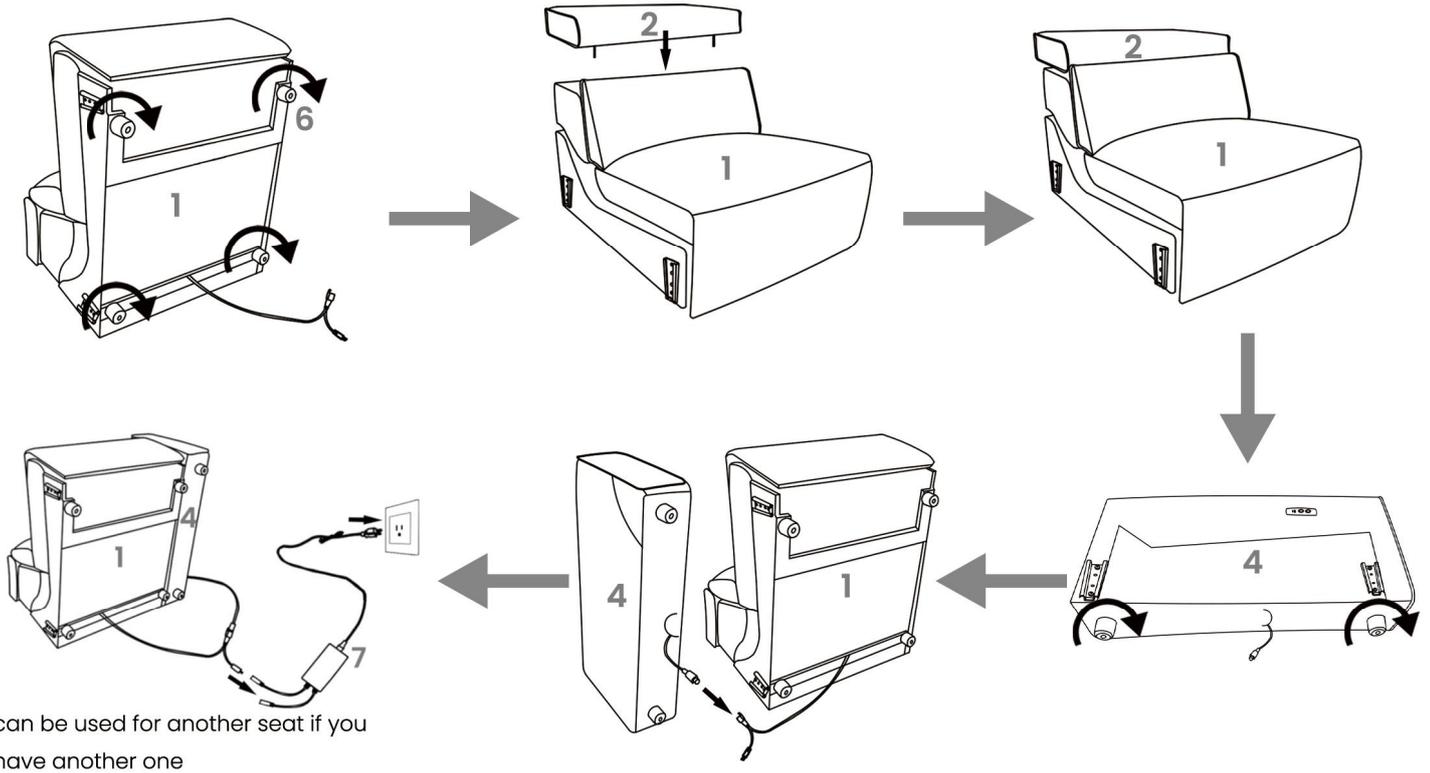


### Fixed Center Seat

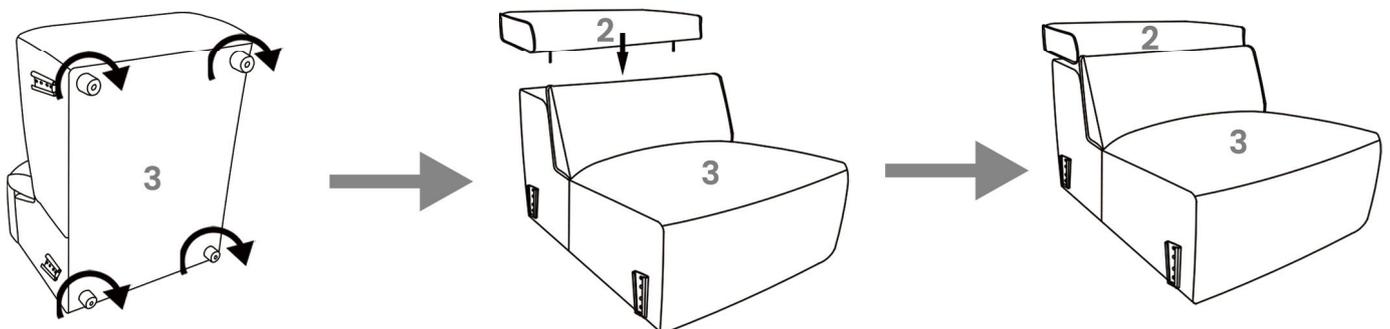

# Fixed Side Seat

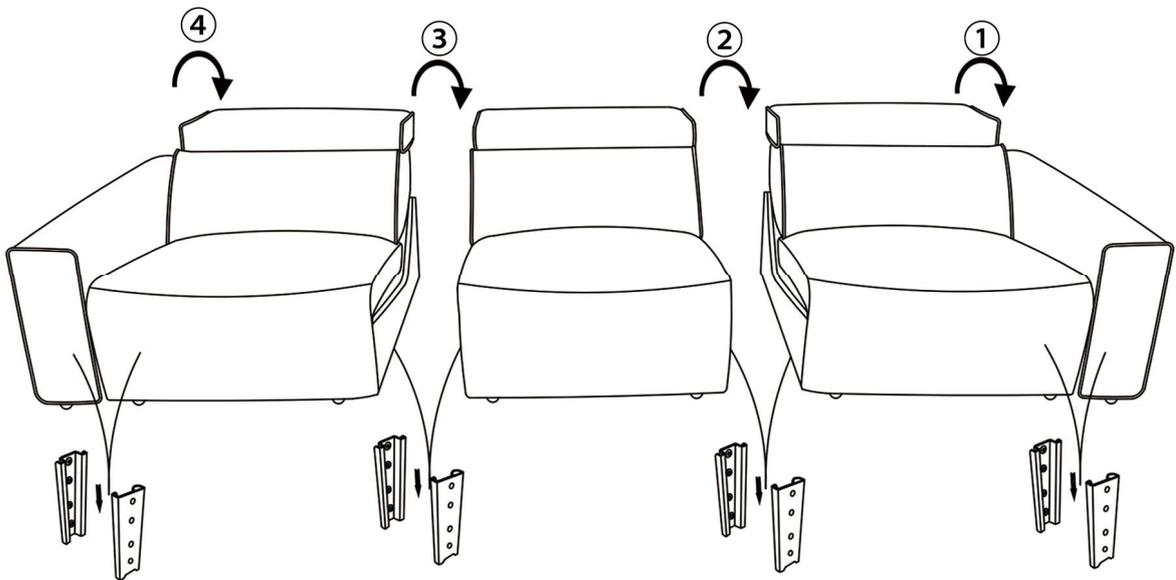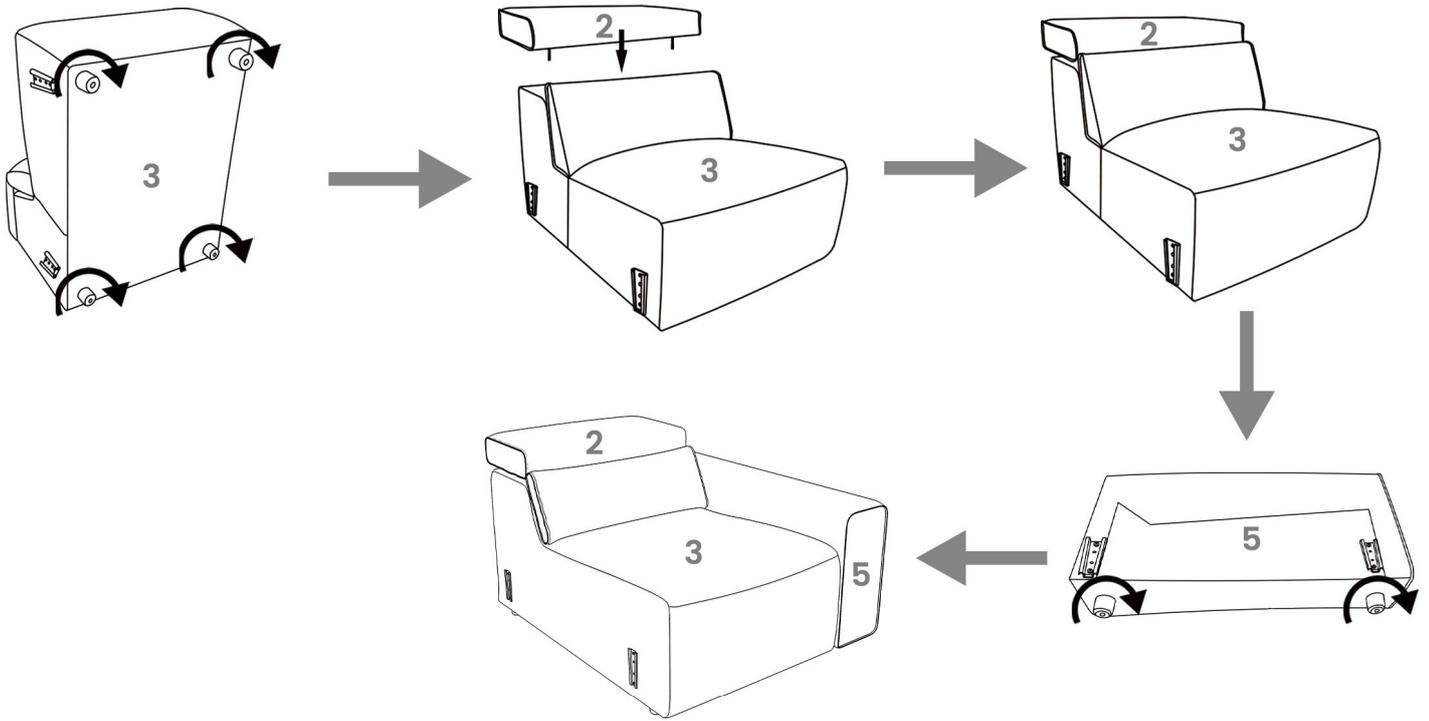



### 3. Operating Instructions

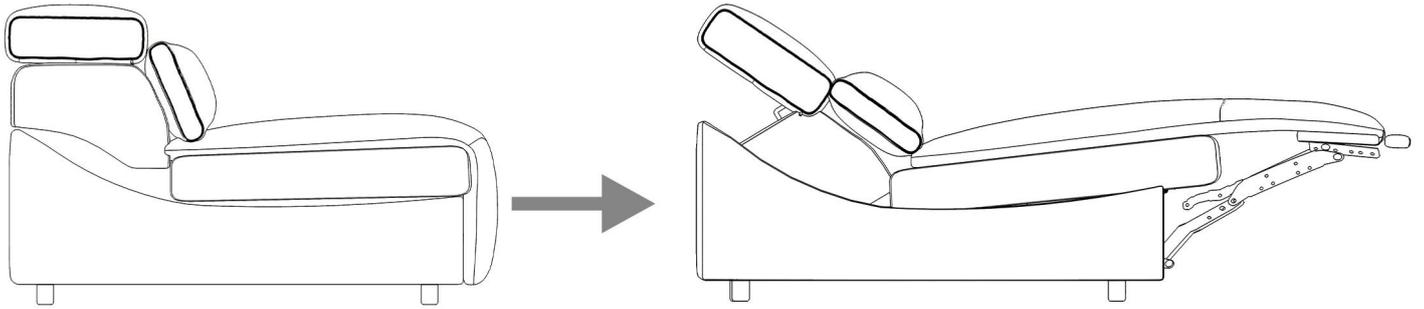

The control button is located on the inner side of the power armrest.

Press → to start reclining the sofa, press any button to stop.

press ← to start retracting the sofa, press any button to stop.

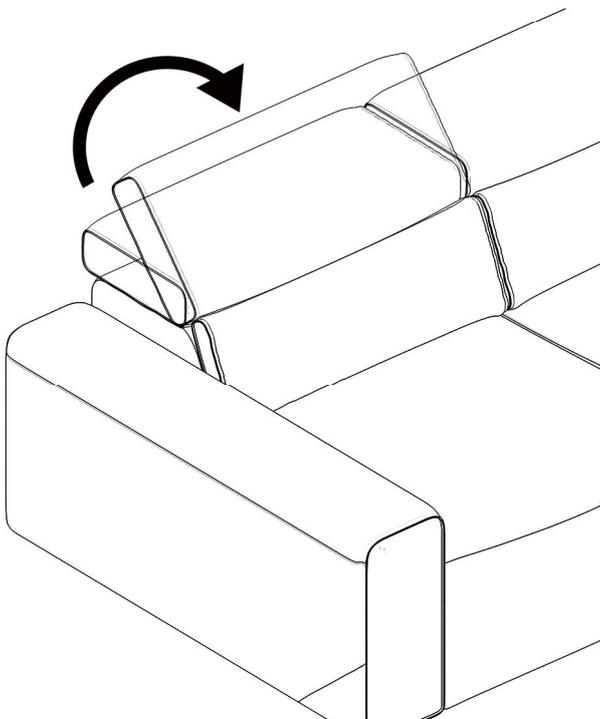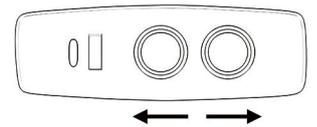

Manually raise or lower the headrest to adjust the angle.

## 4. Warnings

- 1) Sit down on the sofa gently. To avoid tipping over, do not throw yourself onto the sofa. Adjust the sofa to the reclined position slowly, ensuring that no children or pets are nearby. Do not allow children to play on or around the sofa, especially when it is reclined.
- 2) Fully close the reclining seat before getting up.
- 3) Do not sit on the armrest or footrest when it is reclined. This applies to both adults and children.
- 4) This sofa is designed for use by one adult at a seating.
- 5) Maximum weight capacity is 350 lbs per seat.
- 6) To fully recline the sofa, please ensure a minimum clearance of 15 inches from the wall or any obstacle.
- 7) Do not allow individuals with the following conditions to use this sofa: severe heart disease, high blood pressure, cerebral thrombosis, sensitivity or insensitivity to heat, brittle bones, or issues with waist support. This also includes pregnant women, children, and anyone advised by a doctor not to use this product.
- 8) Keep the product away from water, fire, and sharp objects (such as knives, nails, etc.).

## 5. Maintenance Manual Instructions

- 1) To avoid dropping, you should carry the sofa carefully.
- 2) If you find dirt or stains on the sofa, use a sofa-specific cleaner. Spray the cleaner onto the affected area, then gently wipe with a sponge or cloth. Do not use water, soapy water, or cleaners on waxed wooden areas. Always clean the sofa carefully and gently.
- 3) Do not place the sofa in direct sunlight or directly in front of an air conditioner, this will fade the upholstery and make it brittle.

## 6. Specification

Model: SSF0005

USB-A Output: 5V=2A

USB-C Output: 5V=2A

Power Adapter

Input: AC 110V~240V, 50~60Hz 1.5A

Output: DC 29V=2A

Motor

Input: DC 29V=2A

Duty Cycle: on 2 min off 18 min

**POVISON SMART**

Furniture Made with Heart and Soul