
Product specification

1. The technical parameters

Function	Voltage(V)	Frequency(Hz)	Power(W)	Noise(dB)	Energy efficiency grade
Decorative fumace core	110V	50-60HZ	12W-36W	≤20dB	Three

2. Remote contelo operating instructions

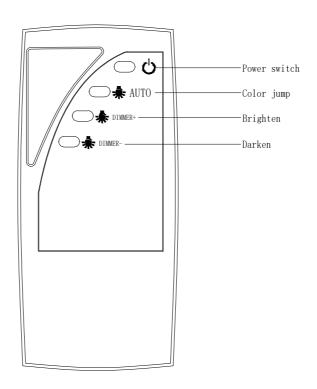

3, Maintenance

- 1: Before the product is cleaned, the power must be cut off.
- 2: Prohibition of direct water washing the fuselage.
- 3: Do nor use any abrasive tools or solvenrs that can damage the surface
- 4: Prohibited to open the product for transformation, the proposed regular inspection of the product and clean with a dry cloth to extend its service life.

4. Troubleshooting

- 1: Arter the power is inserted, the hose will emit a "drop" sound as a reference for power-on.
- 2: The flame light and then go out, check the box is wet, ventilated and and driedand restart the power.