




1. Flip the TV on its side, align the cabinet legs with the screw holes and tighten the screws.

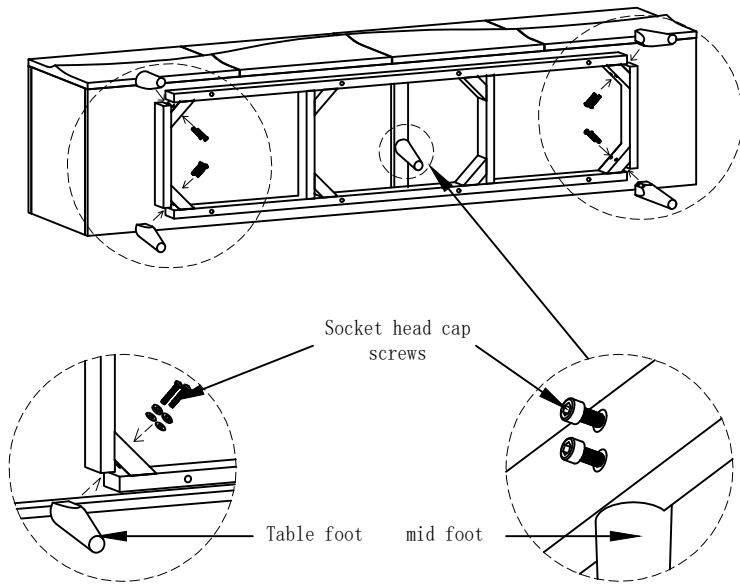


3. installation is complete

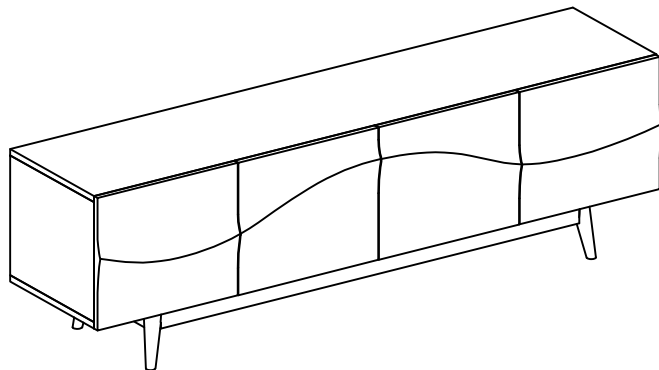

2. Installation of Anti -tipping device

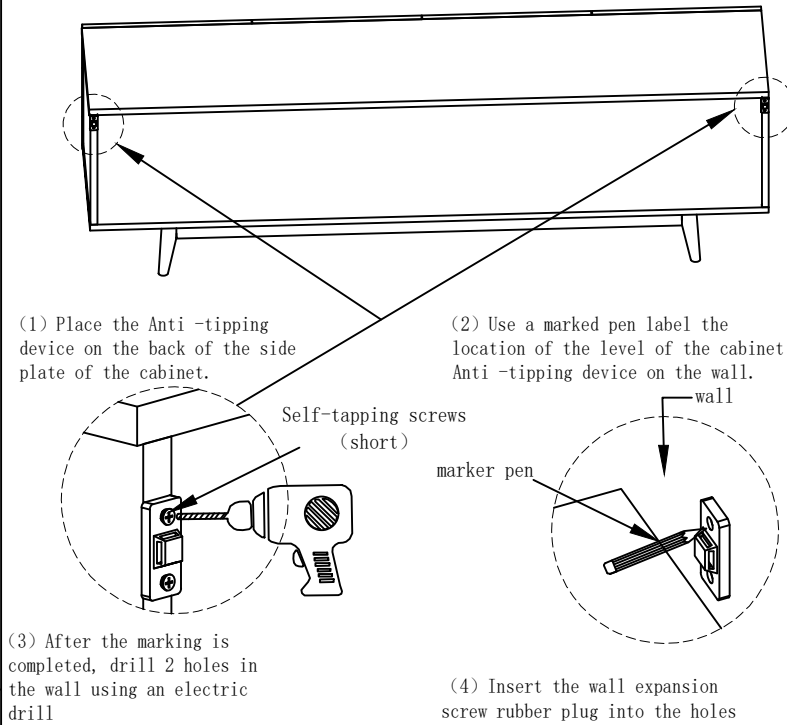

## Installation instruction

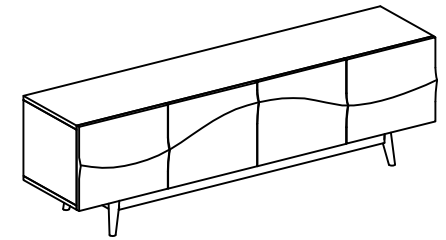

TS1028WD24 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

### Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Socket head cap screws (M8*60mm)	10	1
B		Gasket(1)	10	1
C		Gasket(2)	10	1
D		wrench	1	0
E		Anti -tilt device	4	0
F		Self-tapping screws (short)	4	0
G		Self-tapping screws (long)	4	0
H		Entering the wall expansion screw rubber plug	4	0
I		Strap	2	0
J				
K				