




1. Install the screw and the foot mat.

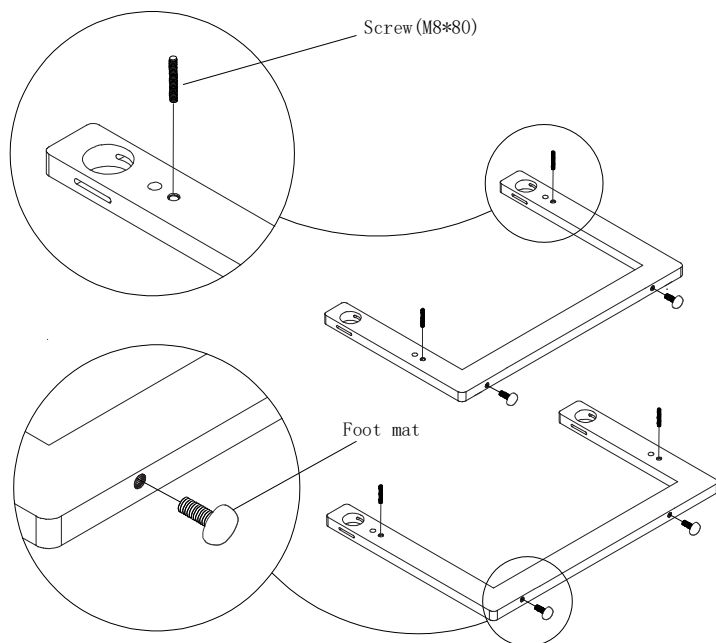


3. Pass the fabric belt through both ends of the hole and secure it with a limiting block

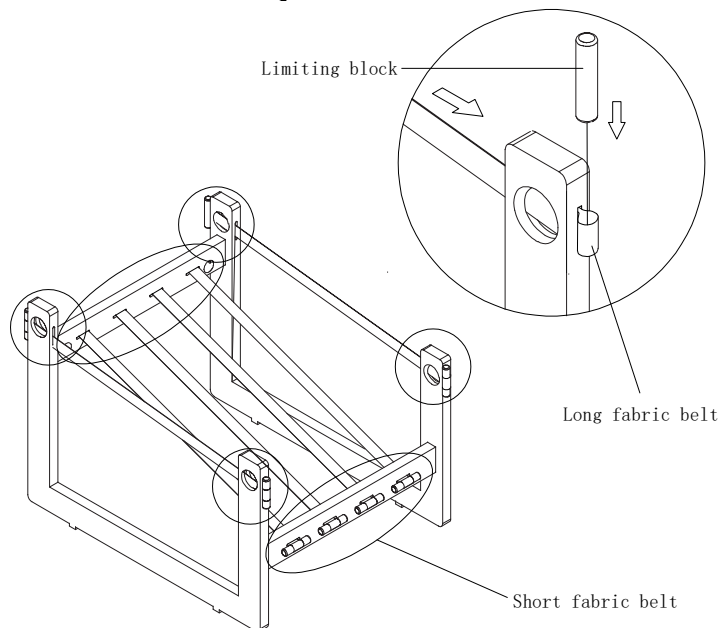


2. Use a half-moon nut and nut combination to tighten the screw with a wrench.

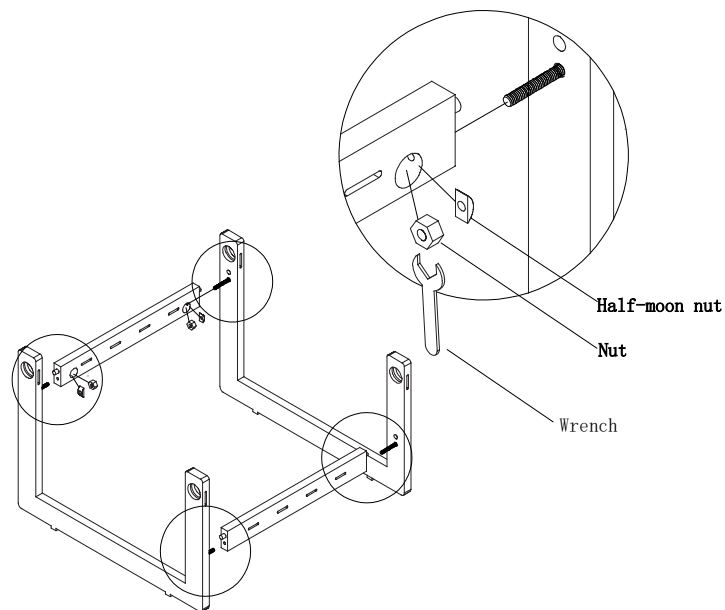

4. The installation is complete

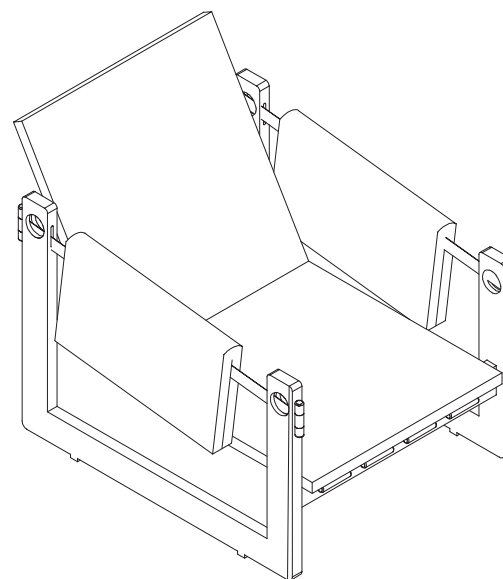

Assembly instructions

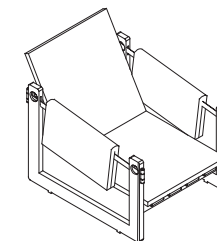

AC8131 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list

On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Foot mat	4	0
B		Screw (M8*80)	4	0
C		Nut	4	0
D		Half-moon nut	4	0
E		Long fabric belt	2	0
F		Short fabric belt	4	0
G		Limiting block	12	0
H		Wrench	1	0