

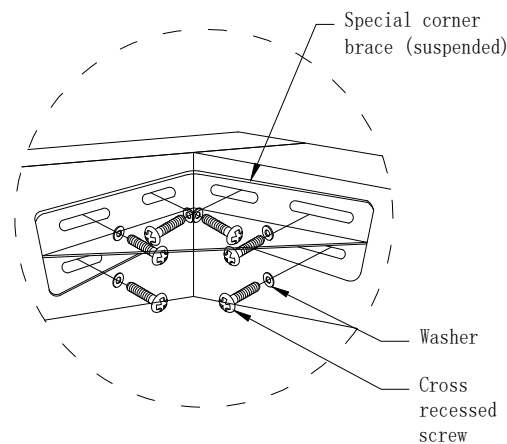
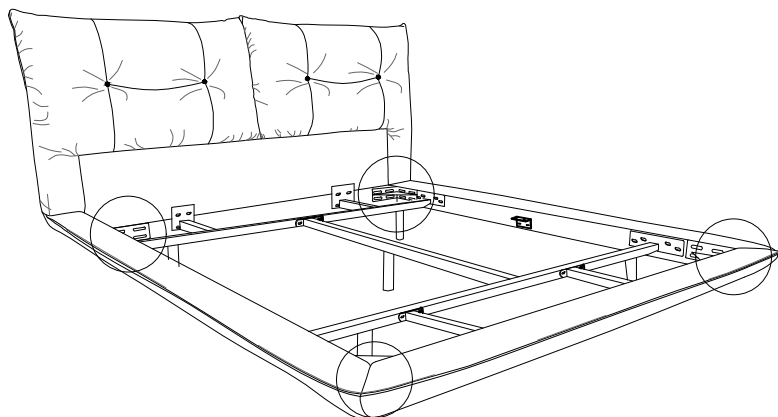


1.

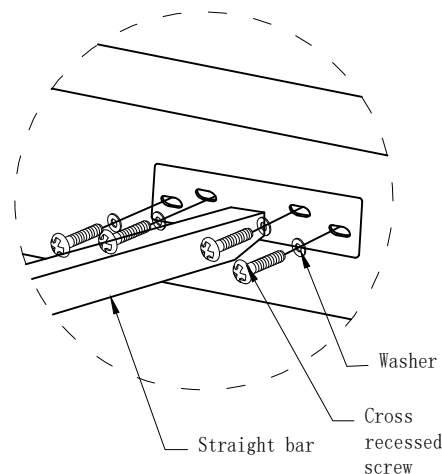


2.

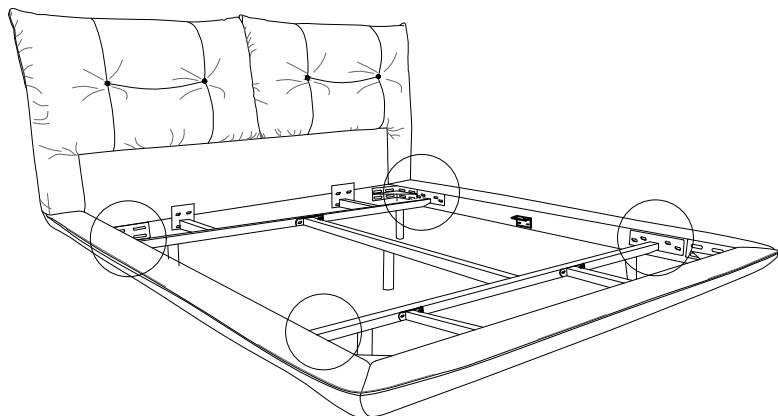

POVISON

Installation instruction

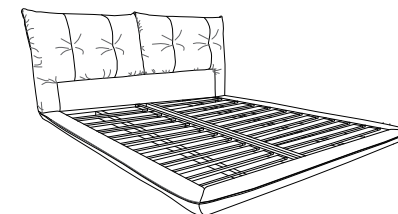

BD8019E153/183 Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Cross recessed screw (M8*20mm)	88	0
B		Special corner brace (suspended)	4	0
C		Small angle code	3	0
D		Straight bar (1750mm)	2	0
E		Tall vertical bar (1310mm)	1	0
F		Adjustable middle foot (150mm)	5	0
G		Short vertical bar (1) (270mm)	2	0
H		Short vertical bar (2) (290mm)	2	0
I		Washer (M8)	88	0
J		Rubber pad	12	0
K				

3.

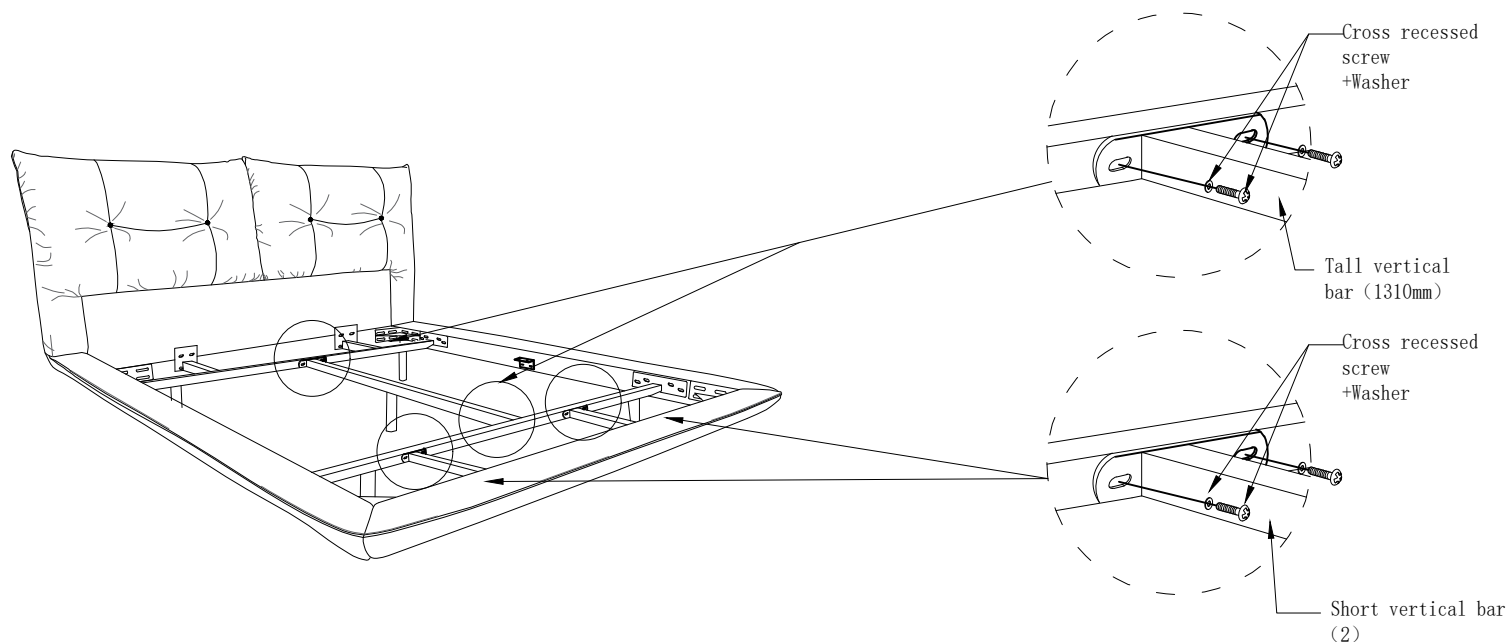


4.

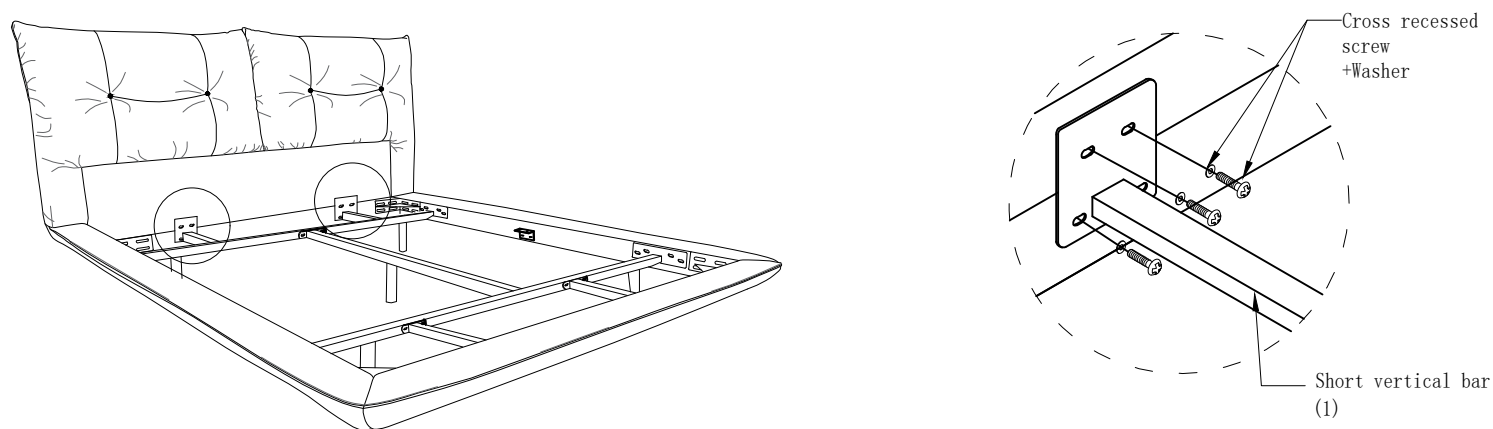

POVISON

Installation instruction

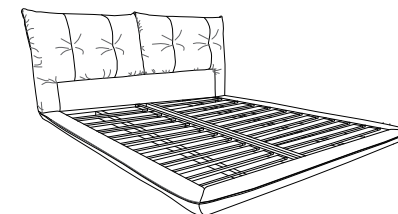



BD8019E153/183 Installation
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.



Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Cross recessed screw (M8*20mm)	88	0
B		Special corner brace (suspended)	4	0
C		Small angle code	3	0
D		Straight bar (1750mm)	2	0
E		Tall vertical bar (1310mm)	1	0
F		Adjustable middle foot (150mm)	5	0
G		Short vertical bar (1) (270mm)	2	0
H		Short vertical bar (2) (290mm)	2	0
I		Washer (M8)	88	0
J		Rubber pad	12	0
K				

5.

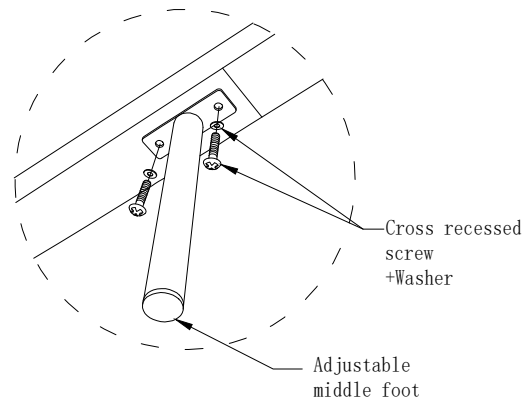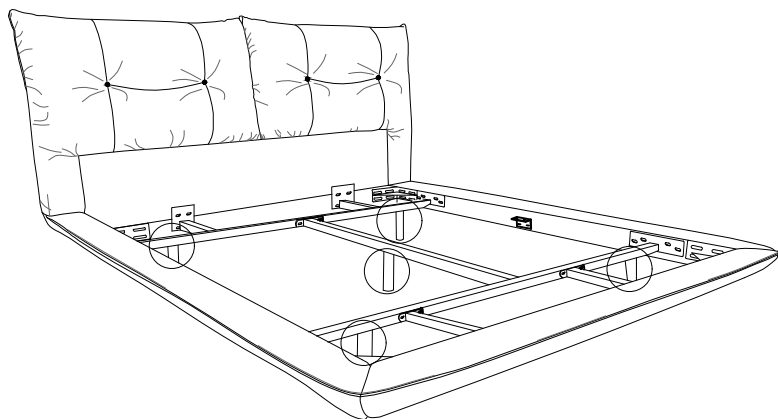


6.

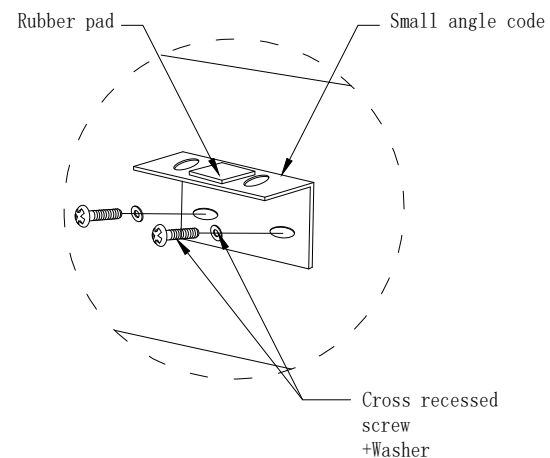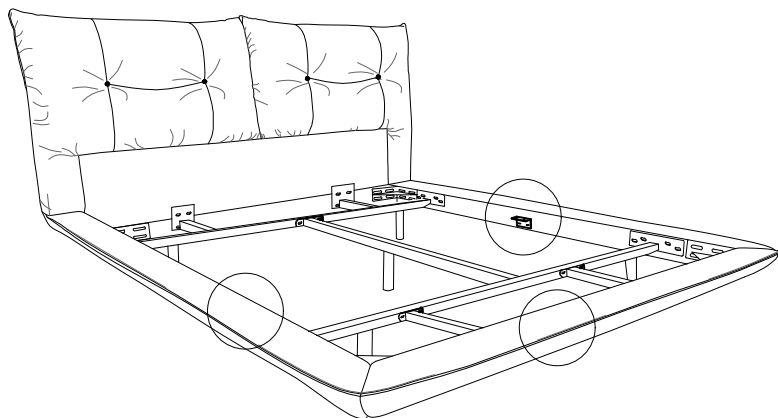

POVISON

Installation instruction

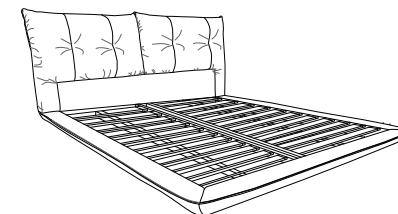


BD8019E153/183 Installation
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Cross recessed screw (M8*20mm)	88	0
B		Special corner brace (suspended)	4	0
C		Small angle code	3	0
D		Straight bar (1750mm)	2	0
E		Tall vertical bar (1310mm)	1	0
F		Adjustable middle foot (150mm)	5	0
G		Short vertical bar (1) (270mm)	2	0
H		Short vertical bar (2) (290mm)	2	0
I		Washer (M8)	88	0
J		Rubber pad	12	0
K				

7.

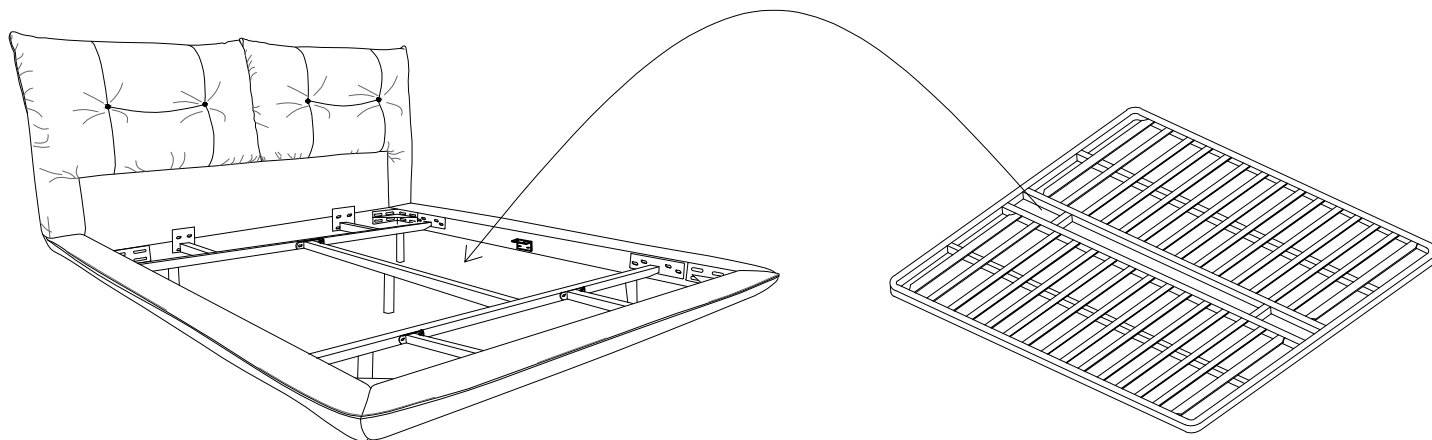


8.



POVISON

Installation instruction

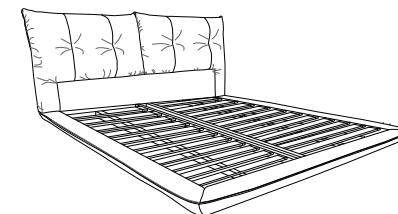

BD8019E153/183 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Cross recessed screw (M8*20mm)	88	0
B		Special corner brace (suspended)	4	0
C		Small angle code	3	0
D		Straight bar (1750mm)	2	0
E		Tall vertical bar (1310mm)	1	0
F		Adjustable middle foot (150mm)	5	0
G		Short vertical bar (1) (270mm)	2	0
H		Short vertical bar (2) (290mm)	2	0
I		Washer (M8)	88	0
J		Rubber pad	12	0
K				