



Assembly instructions

POVISON

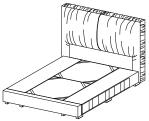


BD8096 Installation
The number of people needed for installation: 2


- Please read the manual carefully before installing this product. And strictly follow the installation process
- 2) Please take good care of this manual for your next installation
- 3 Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

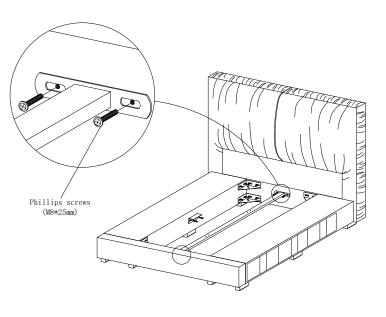

3. Install the metal bracket

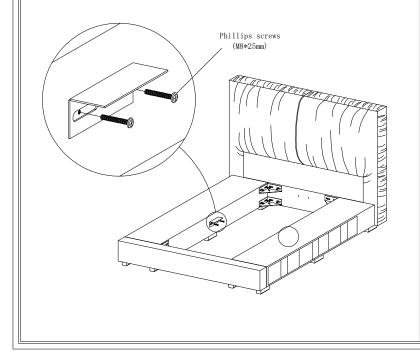


4. Install the intermediate load-bearing support frame

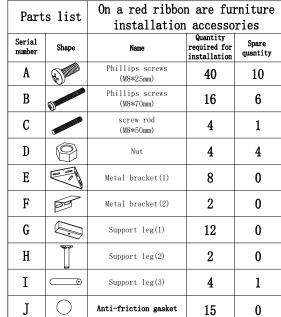


TotaL 2 page; page 1


5. Install the intermediate load-bearing support legs and adjust to the appropriate height

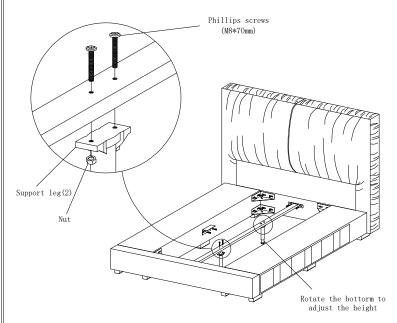


6. Install the bed slats support legs

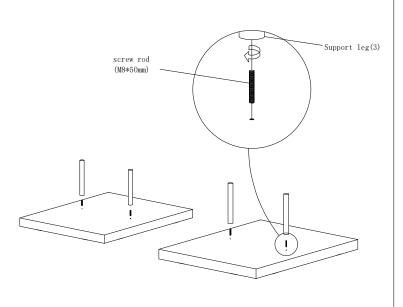

7. Install the bed slats

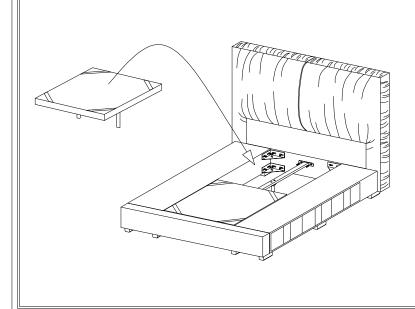


8. The installation is complete

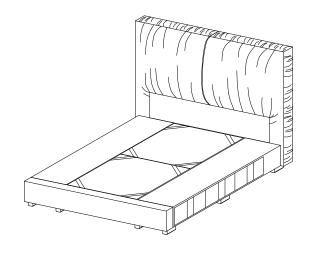

POVISON

Assembly instructions

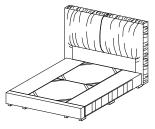

BD8096 Installation
The number of people needed for installation: 2

- Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- 3 Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Phillips screws (M8*25mm)	40	10
В	0	Phillips screws (M8*70mm)	16	6
С		screw rod (M8*50mm)	4	1
D	9	Nut	4	4
Е		Metal bracket(1)	8	0
F		Metal bracket(2)	2	0
G		Support leg(1)	12	0
Н		Support leg(2)	2	0
I	<u> </u>	Support leg(3)	4	1
J		Anti-friction gasket	15	0

TotaL 2 page; page 2