




1. Install the four corner connector (1) at the junction of the bed frame, and install the supporting leg (1) at the corner connector (1) below

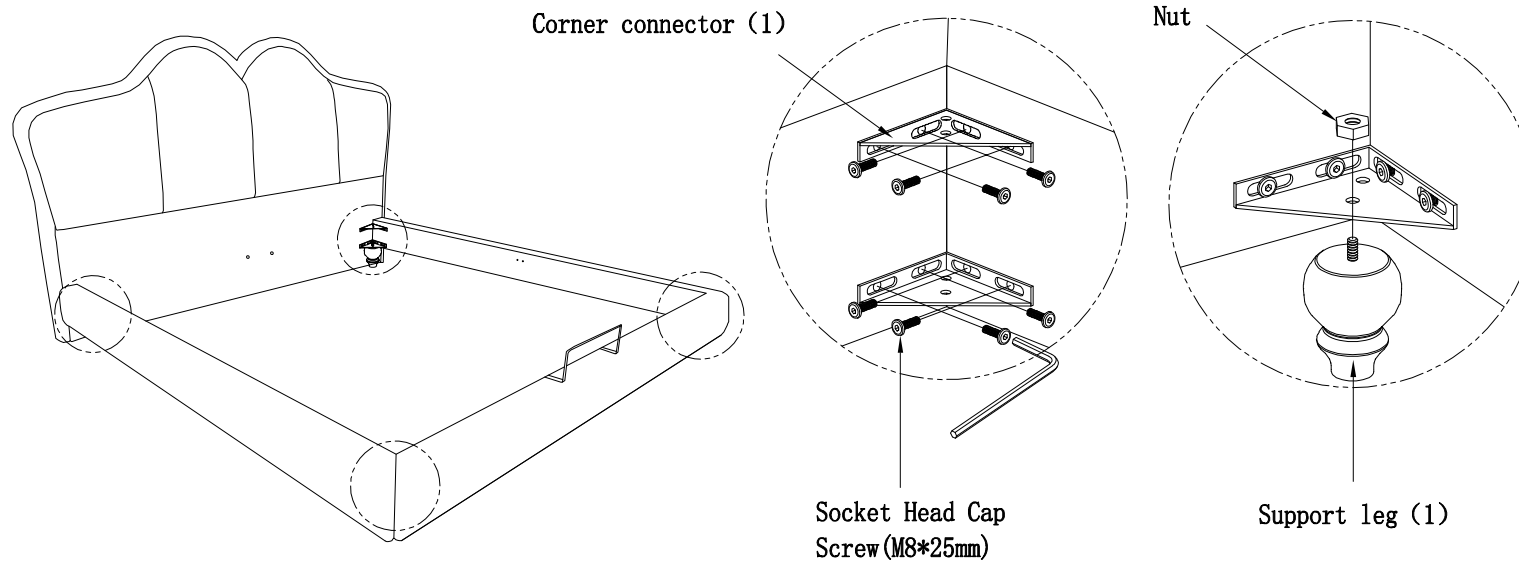

2. Install the corner connector (2)

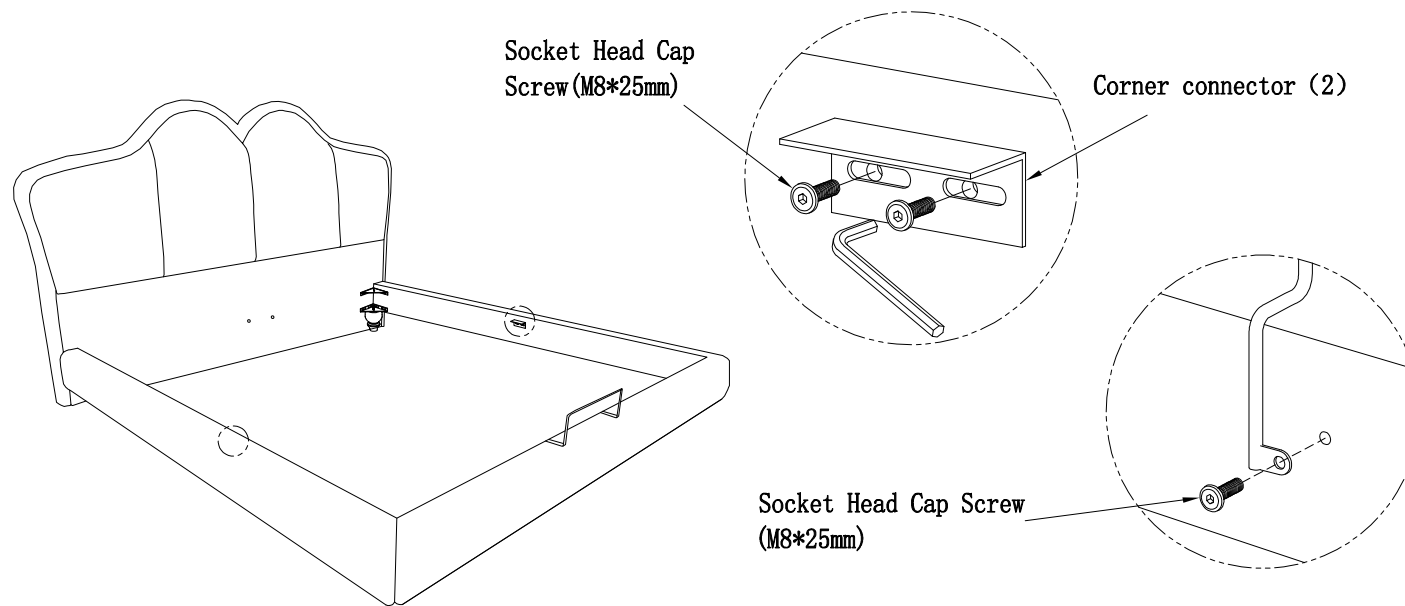

## Assembly instructions

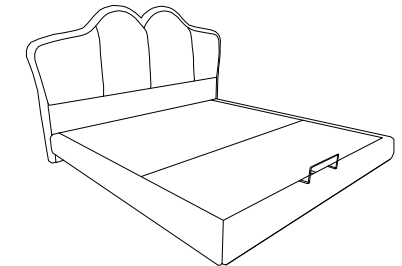

### BD8066 Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


### Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Corner connector (1)	4	0
B		Corner connector (2)	2	0
C		Support leg(1)	4	0
D		Support leg(2)	3	0
E		Socket Head Cap Screw (M8*25mm)	46	8
F		Gasket	6	1
G		Nut	4	4
H		Wrench	1	0
I		Metal bracket	1	0
J				
K				


3. Install the support leg (2) on the long rod and install the long rod to the corresponding hole position

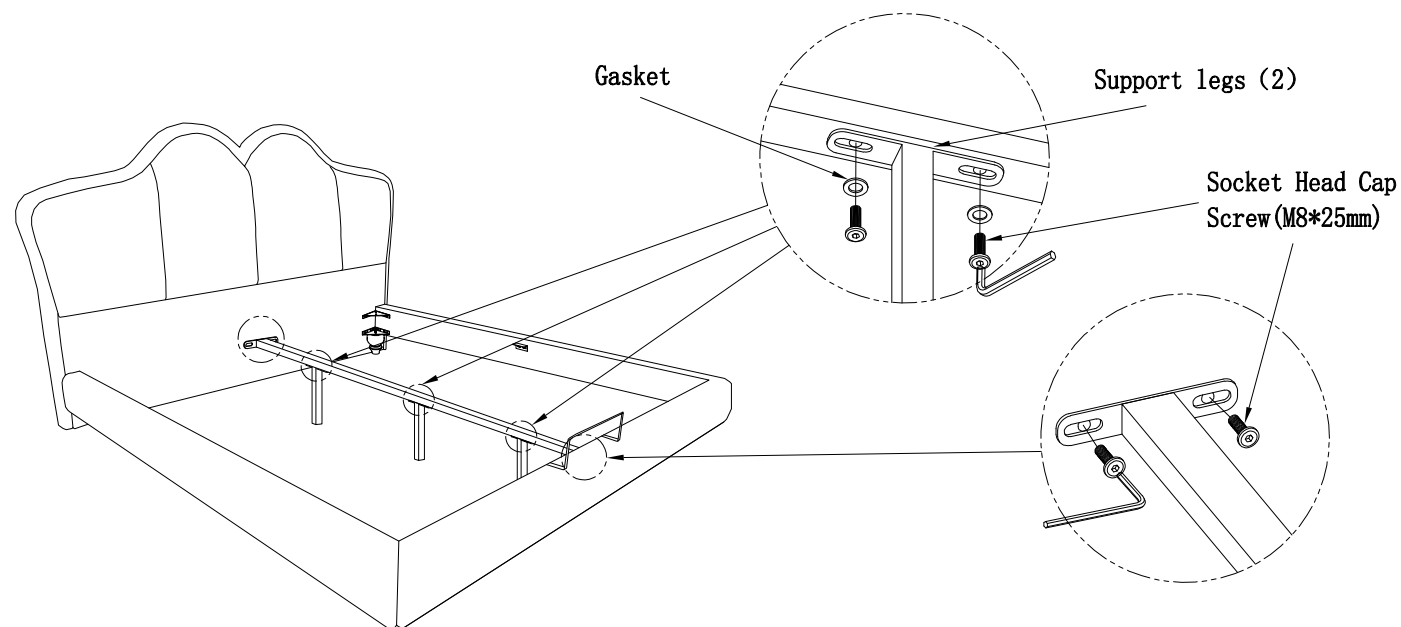

4. Put on the bed slats.

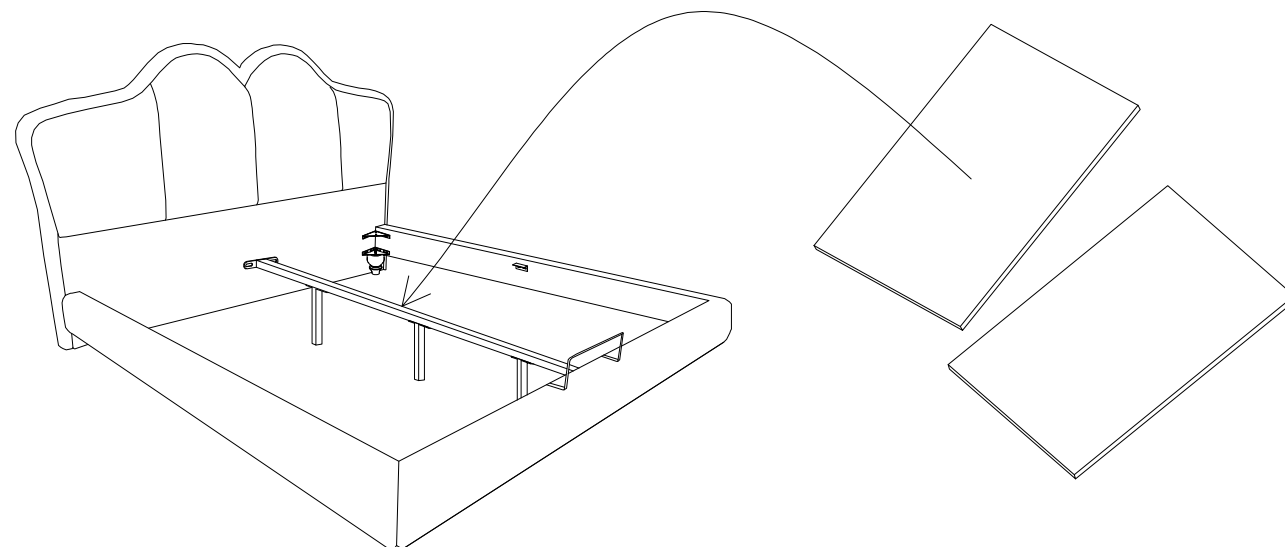

## Assembly instructions

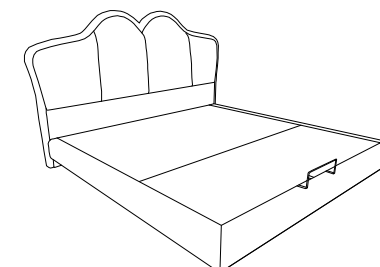










### BD8066 Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


### Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Corner connector (1)	4	0
B		Corner connector (2)	2	0
C		Support leg(1)	4	0
D		Support leg(2)	3	0
E		Socket Head Cap Screw (M8*25mm)	46	8
F		Gasket	6	1
G		Nut	4	4
H		Wrench	1	0
I		Metal bracket	1	0
J				
K				

5.The installation is complete

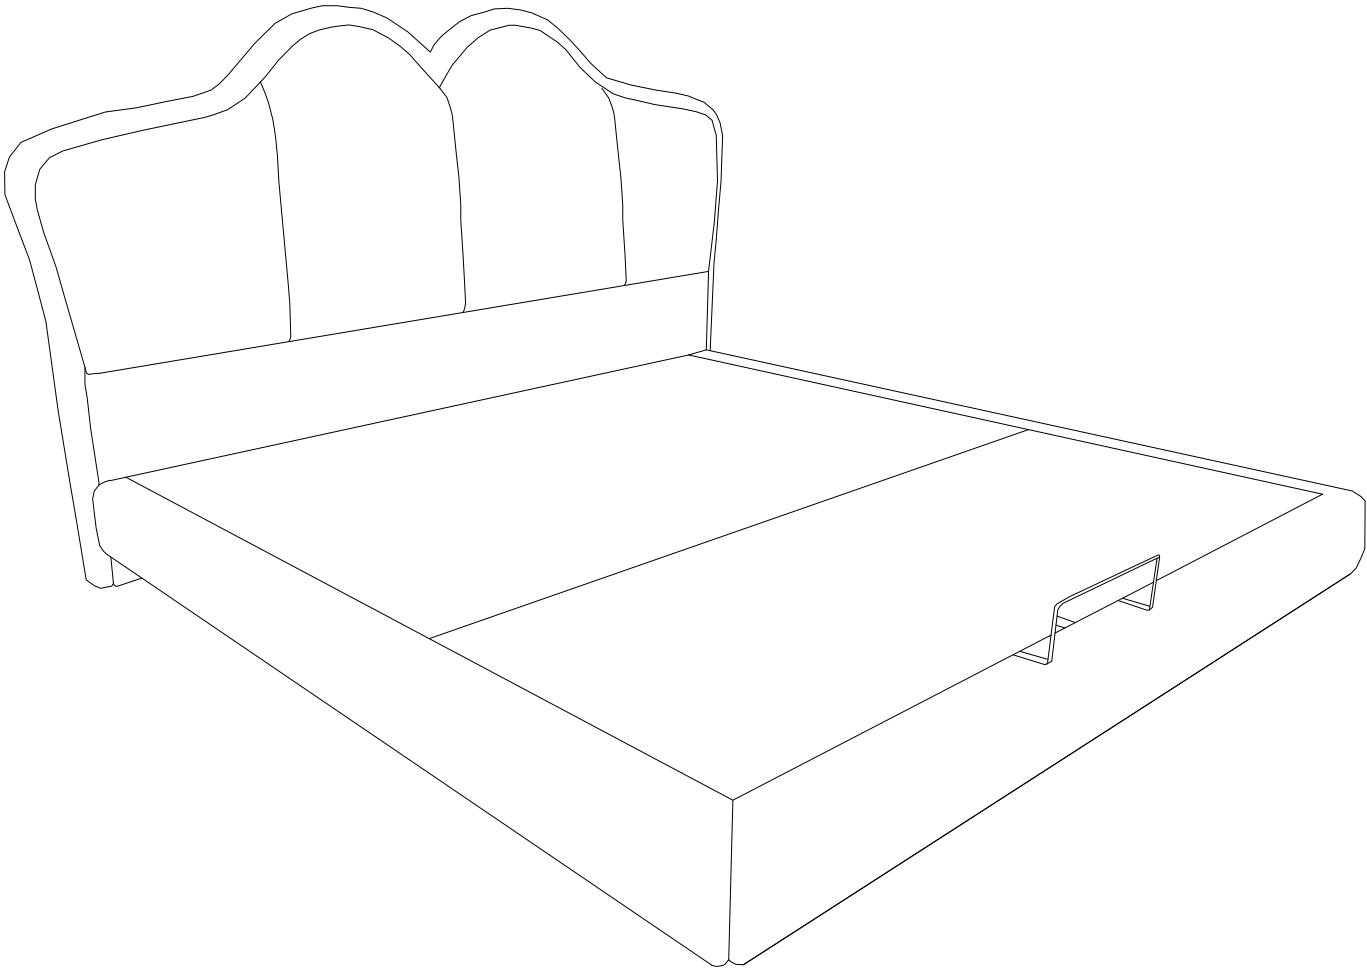

Assembly instructions

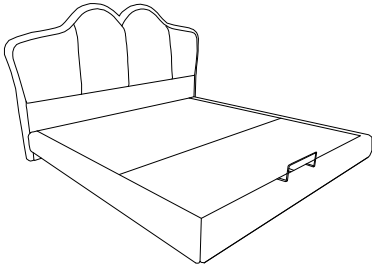

BD8066 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Corner connector (1)	4	0
B		Corner connector (2)	2	0
C		Support leg(1)	4	0
D		Support leg(2)	3	0
E		Socket Head Cap Screw (M8*25mm)	46	8
F		Gasket	6	1
G		Nut	4	4
H		Wrench	1	0
I		Metal bracket	1	0
J				
K				