




1. Install the four corner connector (1) at the junction of the bed frame.

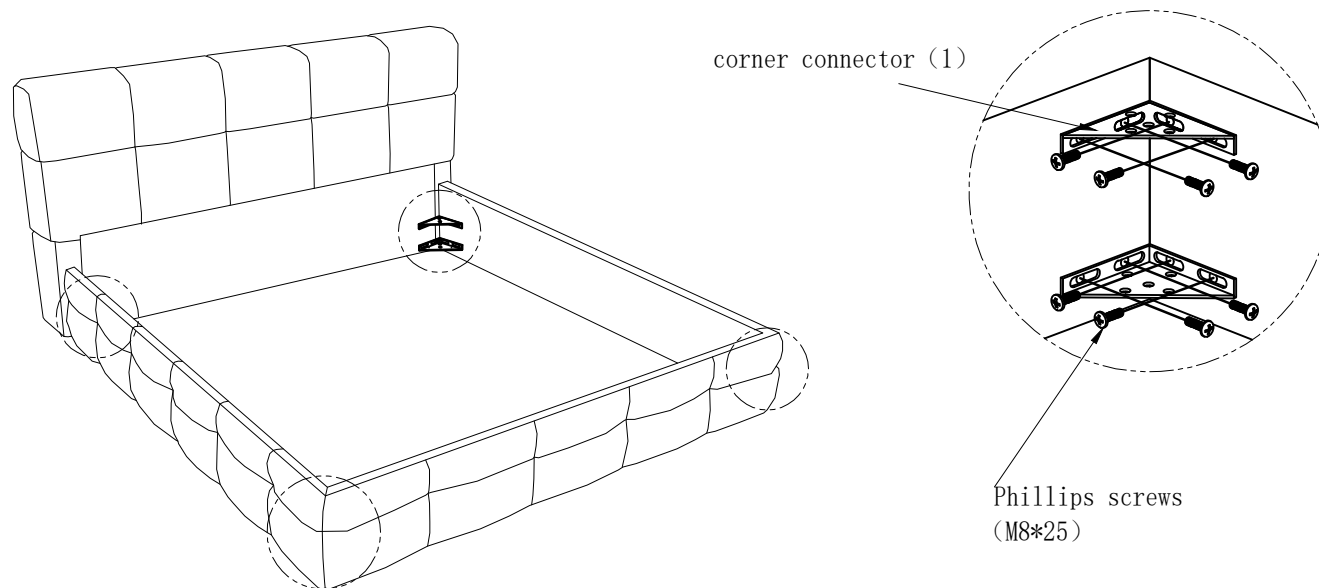

2. Install the corner connector (2)

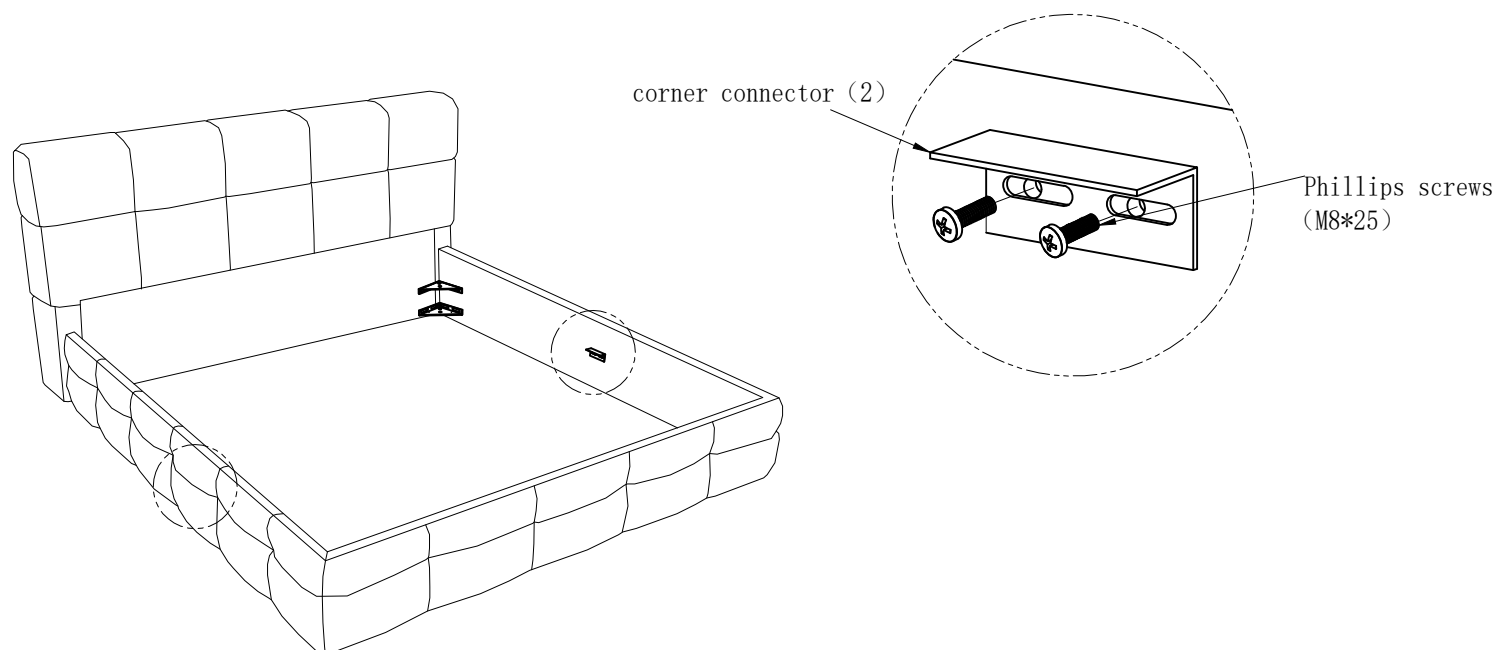



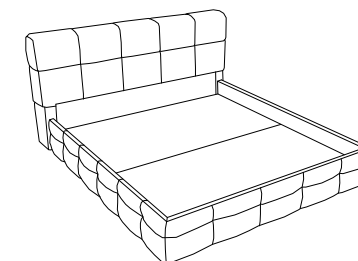

Assembly instructions




BD8060 Installation

The number of people needed for installation: 2


- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		corner connector (1)	8	0
B		Phillips screws (M8*25)	52	0
C		support legs	4	0
D		corner connector (2)	2	0
E				
F				
G				


3. Install the support leg on the long rod and install the long rod to the corresponding hole position.

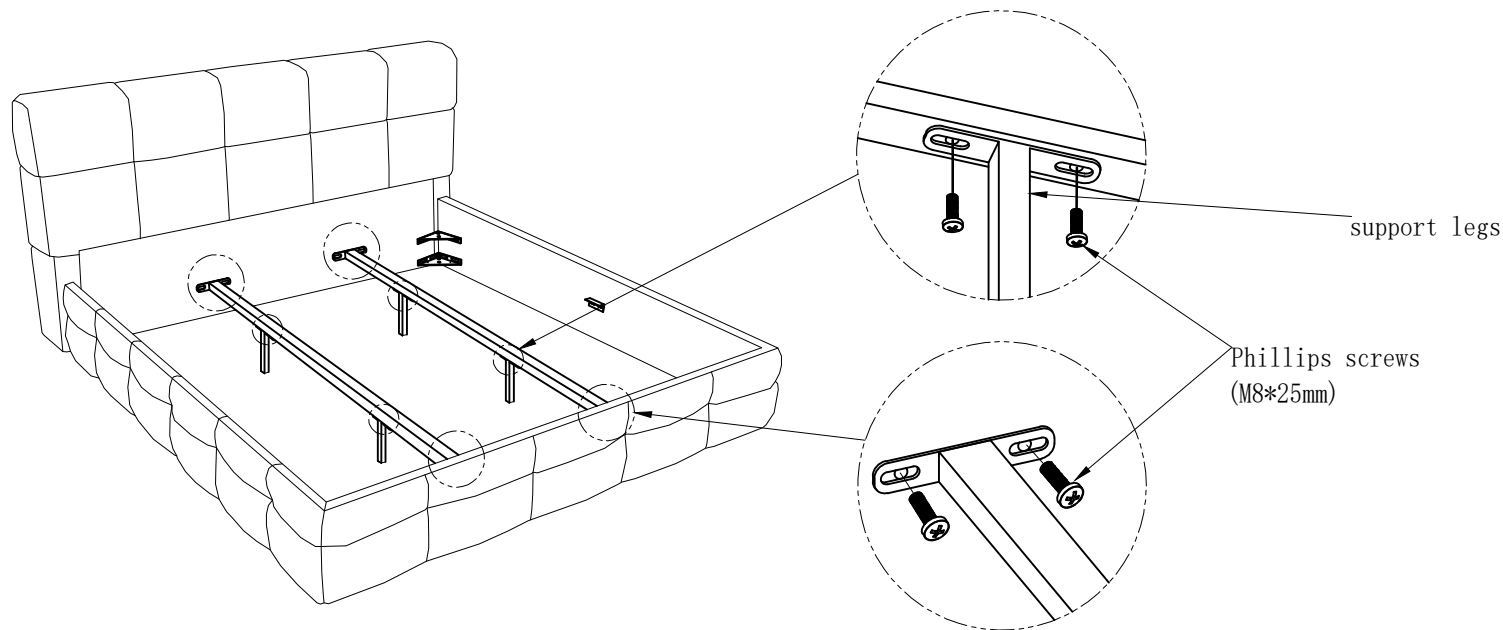


4. Put on the bed slats.

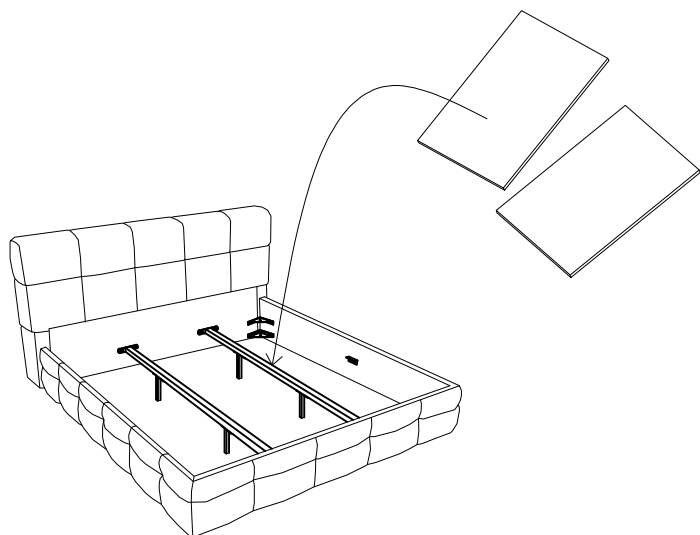

5. The installation is complete

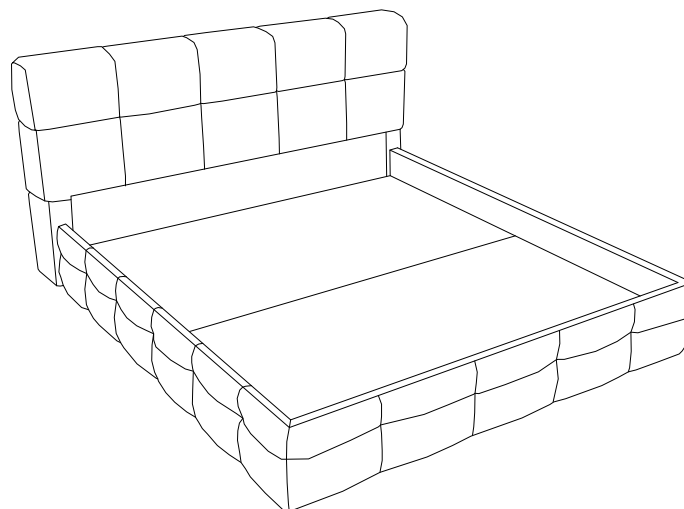



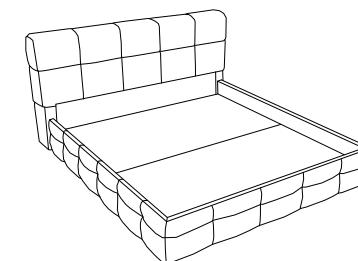

Assembly instructions



BD8060 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		corner connector (1)	8	0
B		Phillips screws (M8*25)	52	0
C		support legs	4	0
D		corner connector (2)	2	0
E				
F				
G				