




1. Install the corner connector

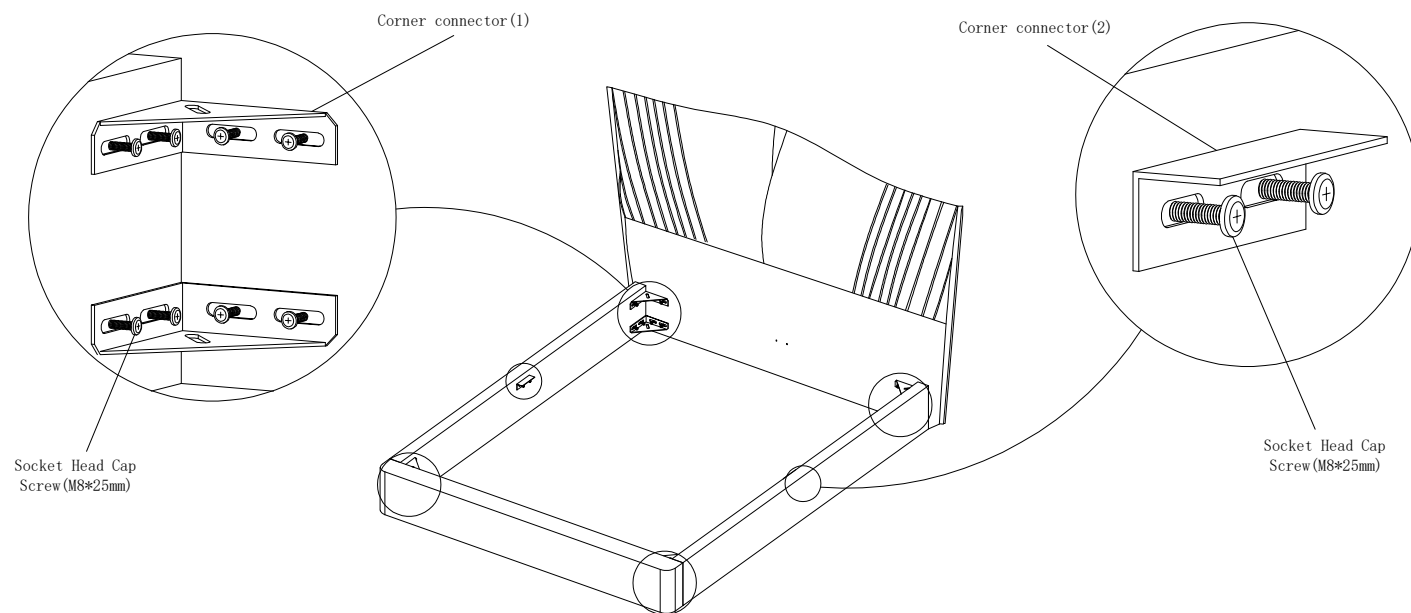

2. Install the long vertical rod and support leg

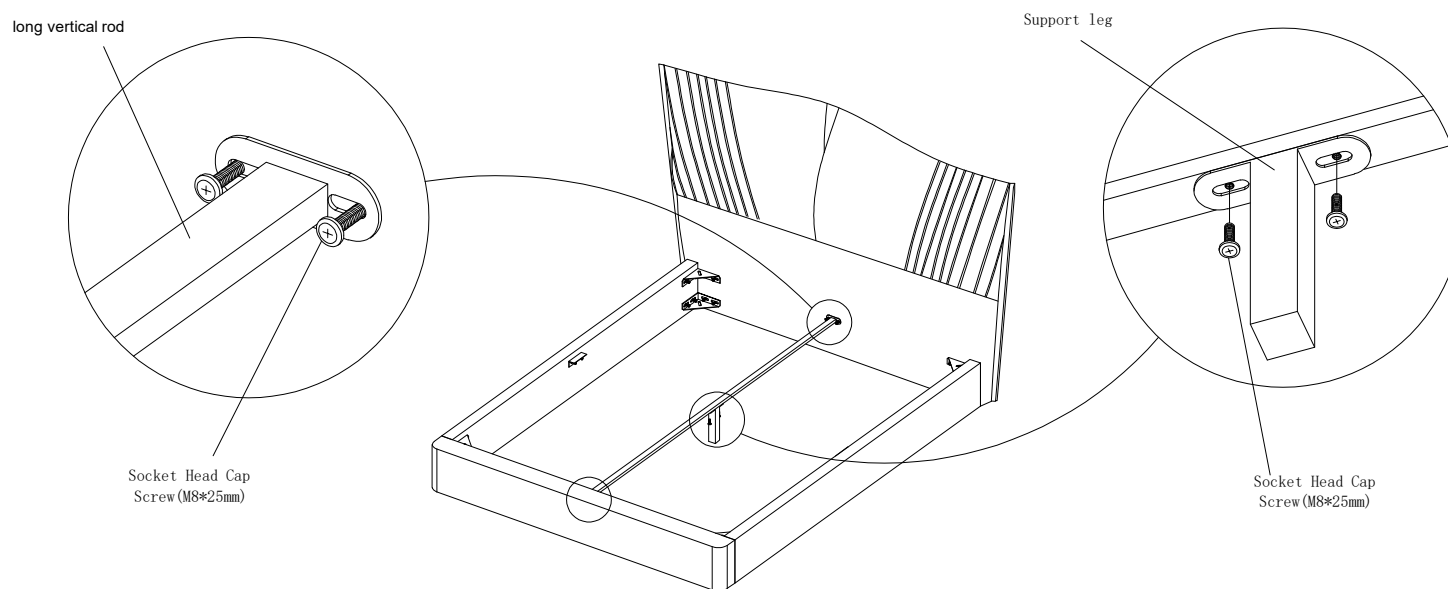

Assembly instructions

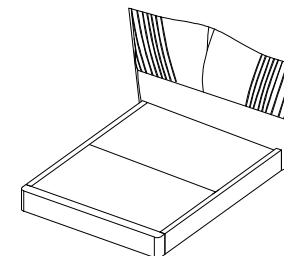





BD8059 Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Socket Head Cap Screw (M8*25mm)	42	4
B		Corner connector (1)	8	0
C		Corner connector (2)	2	0
D		Support leg	1	0
E				
F				
G				
H				
I				
J				
K				


3.Put on the bed board

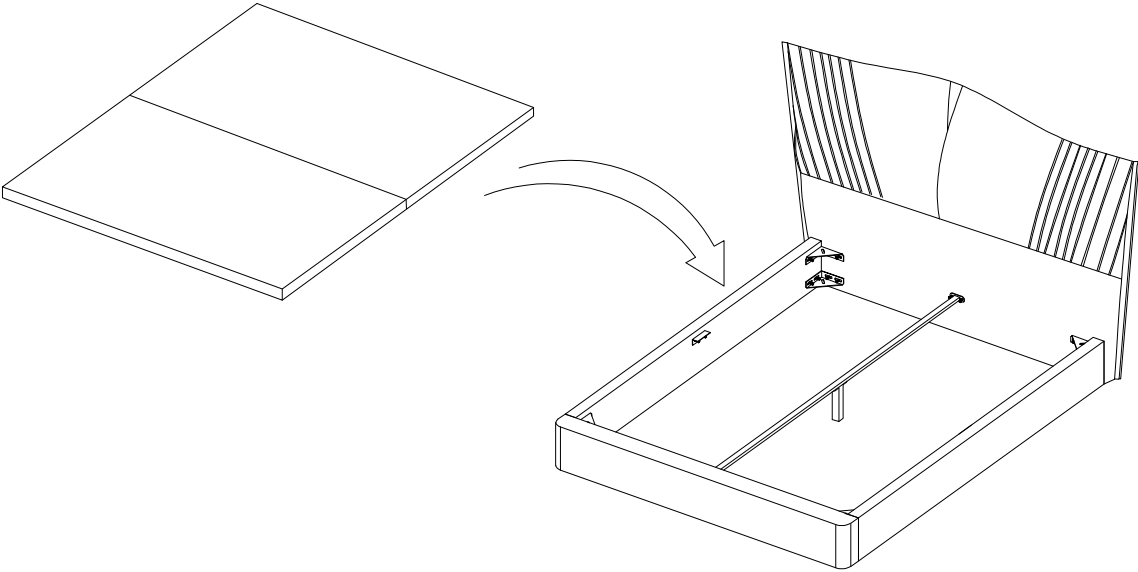

4.The installation is complete

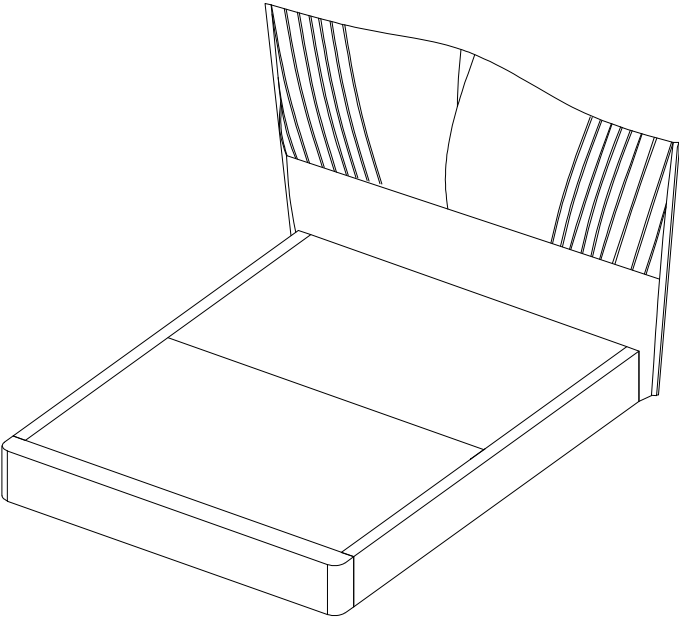



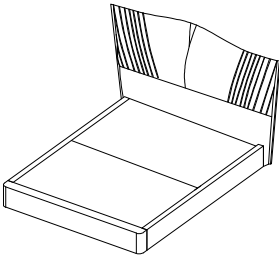

Assembly instructions



BD8059 Installation
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Socket Head Cap Screw (M8*25mm)	42	4
B		Corner connector (1)	8	0
C		Corner connector (2)	2	0
D		Support leg	1	0
E				
F				
G				
H				
I				
J				
K				