



metal frame

metal rod 1000*40*20

metal rod



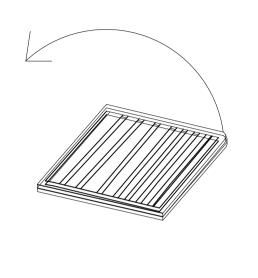




Assembly instructions


(A POVISON

- Please read the manual carefully before installing this product. And strictly follow the installation process
- Please take good care of this manual for your next installation
- 3 Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories


	installation accessories				
	Serial number	Shape	Name	Quantity required for installation	Spare quantity
	A		Socket Head Cap Screw(M8*35mm)	24	1
	В	0	Socket Head Cap Screw(M8*25mm)	20	1
	С		T-shaped leg	4	0
	D		Adjustable T-shaped leg	2	0
	Е	8	Support leg	2	0
	F		Magnetic light strip	6	0
	G	0	Sensor	2	0
	Н	0 —□	Power Adapter for Light Strip	1	0
	Ι		Wrench	2	0
	J				
	K				



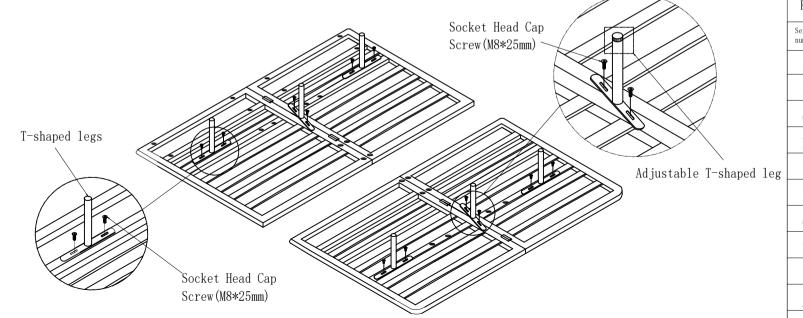


Magnetic light strip


Set of metal parts

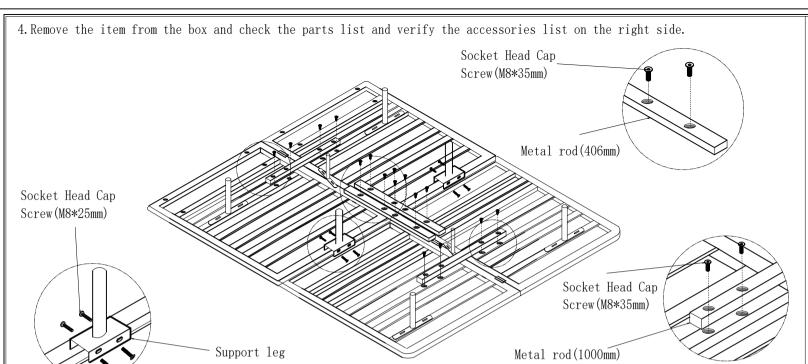

5. Turn the bed frame over and place the fabric cover on it.

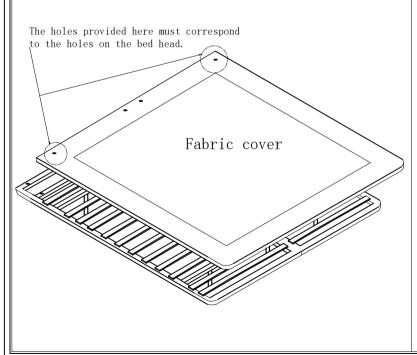

6. Attach the metal frame to the bed frame using screws.

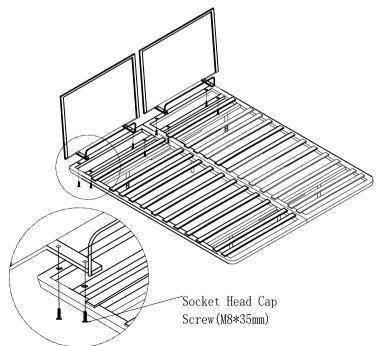



Assembly instructions




BD8088 Installation
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- Please take good care of this manual for your next installation
- 3 Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


Parts list On a red ribbon are furniture installation accessories


installation accessories						
Serial number	Shape	Name	Quantity required for installation	Spare quantity		
A	9	Socket Head Cap Screw(M8*35mm)	24	1		
В	0	Socket Head Cap Screw(M8*25mm)	20	1		
С		T-shaped leg	4	0		
D		Adjustable T-shaped leg	2	0		
Е	8	Support leg	2	0		
F		Magnetic light strip	6	0		
G		Sensor	2	0		
Н	0 —□	Power Adapter for Light Strip	1	0		
Ι		Wrench	2	0		
J						
K						

Total 3 page; page 2

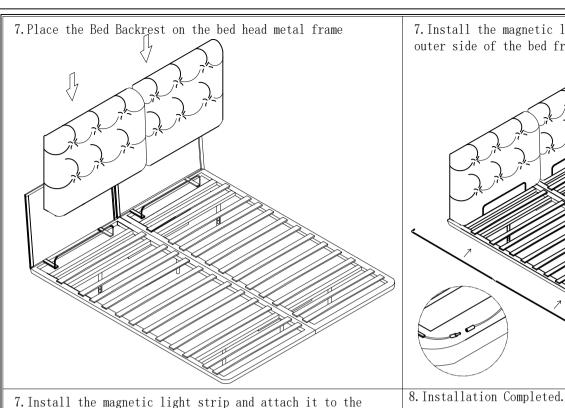


7. Install the magnetic light strip and attach it to the outer side of the bed frame using magnetic attachment.

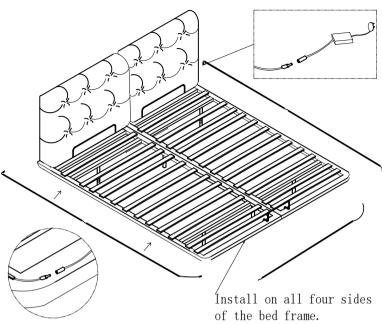

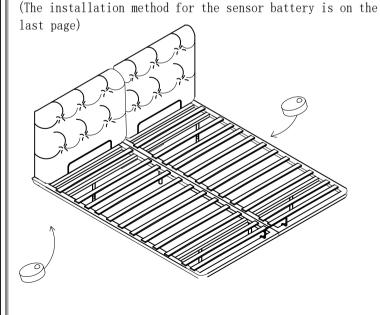

outer side of the bed frame using magnetic attachment.

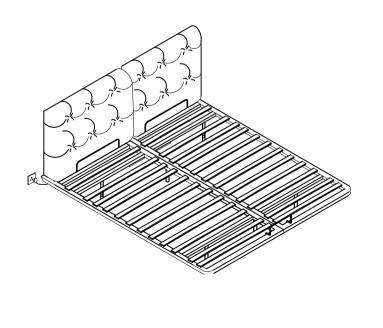

(A POVISON

Assembly instructions



BD8088 Installation The number of people needed for installation: 2

- Please read the manual carefully before installing this product. And strictly follow the installation process
- Please take good care of this manual for your next installation
- Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


On a red ribbon are furniture Parts list installation accessories

installation accessories					
	Shape	Name	Quantity required for installation	Spare quantity	
A	9	Socket Head Cap Screw(M8*35mm)	24	1	
В	9	Socket Head Cap Screw(M8*25mm)	20	1	
С		T-shaped leg	4	0	
D		Adjustable T-shaped leg	2	0	
Е	8	Support leg	2	0	
F		Magnetic light strip	6	0	
G	0	Sensor	2	0	
Н	0 —□	Power Adapter for Light Strip	1	0	
Ι		Wrench	2	0	
J					
K					


TotaL 3 page; page 3

Battery installation instructions


1. Rotate the backplate and remove the backplate

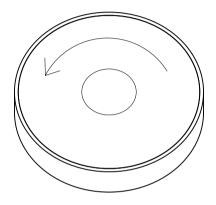


3. The button cell is placed in the groove with the positive pole side up (Smooth flat side facing up)

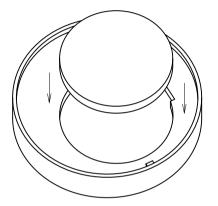

3. Cover the backplate back and rotate (note the corresponding groove)

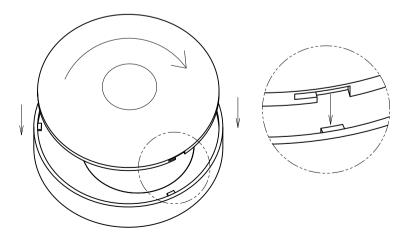

4. The installation is complete

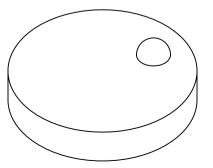

Please purchase it yourself
Model:CR2450

