




1.Remove the item from the box and check the parts list and verify the accessories list on the right side.

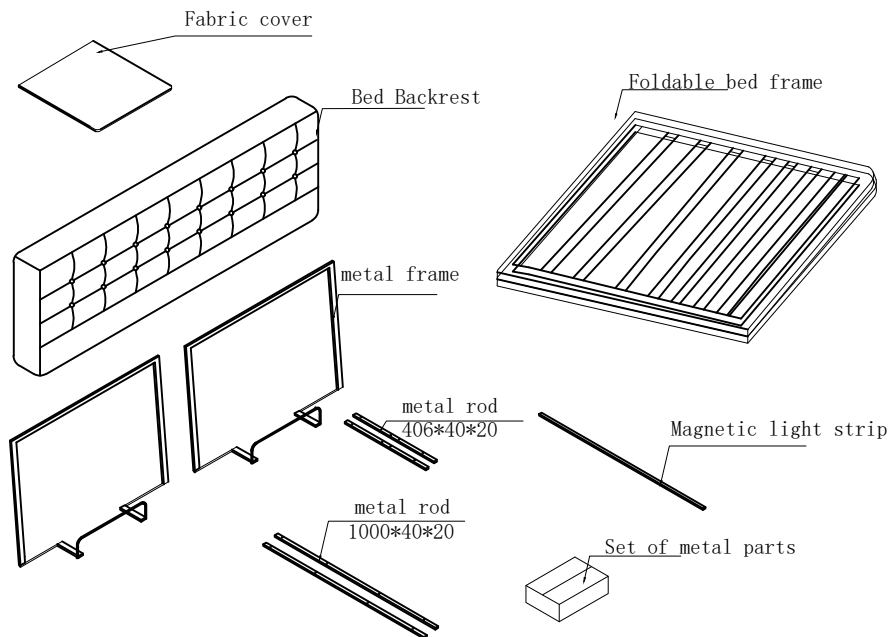


2.Unfold the bed frame.

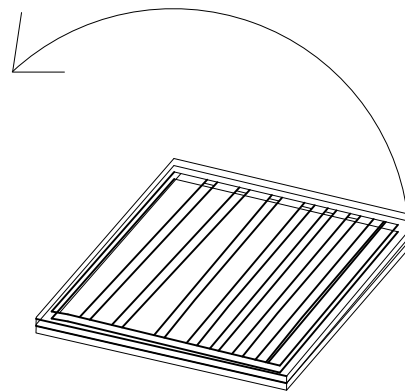

3.Install the T-shaped legs according to the diagram, based on the holes on the bed frame.

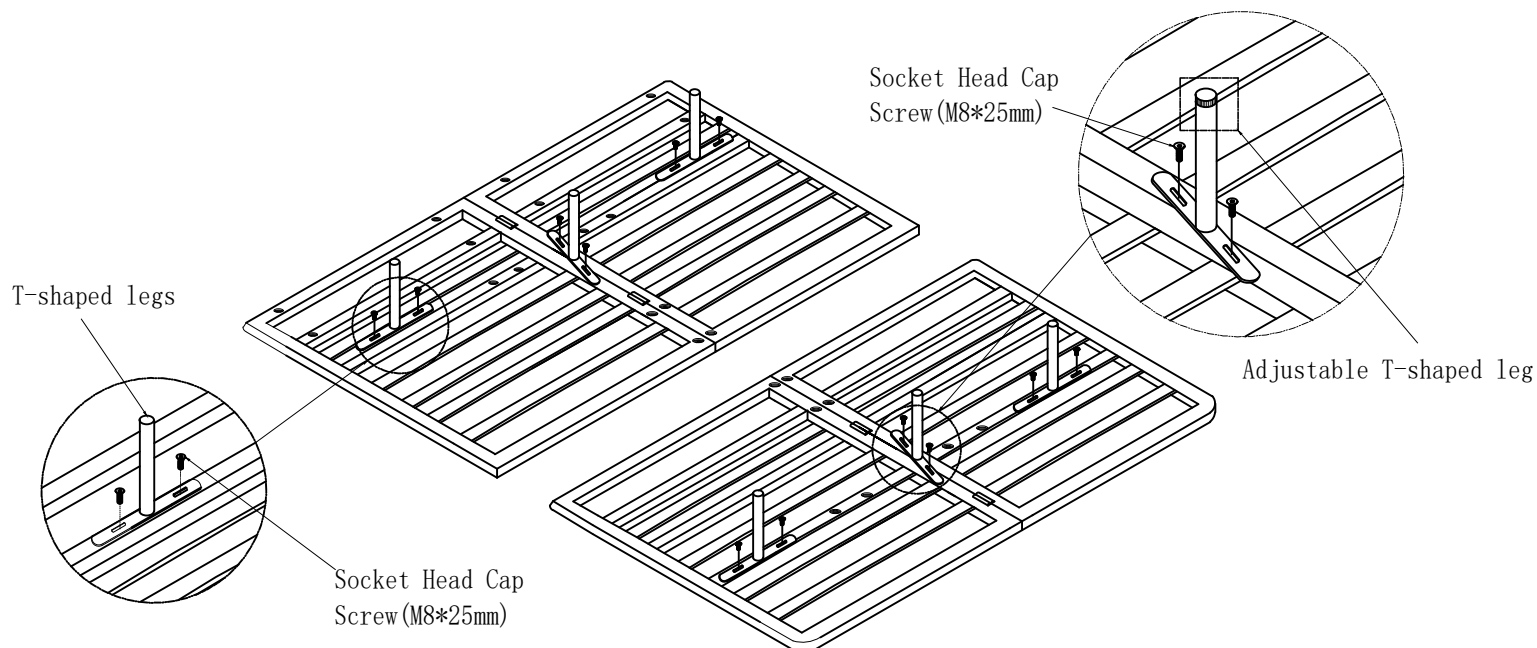

Assembly instructions

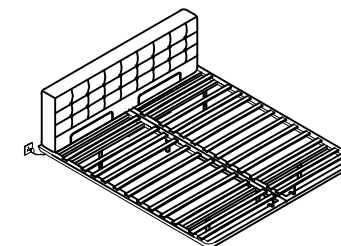

BD8091 Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories


Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Socket Head Cap Screw (M8*35mm)	24	1
B		Socket Head Cap Screw (M8*25mm)	20	1
C		T-shaped leg	4	0
D		Adjustable T-shaped leg	2	0
E		Support leg	2	0
F		Magnetic light strip	6	0
G		Sensor	2	0
H		Power Adapter for Light Strip	1	0
I		Wrench	2	0
J				
K				

4.Remove the item from the box and check the parts list and verify the accessories list on the right side.

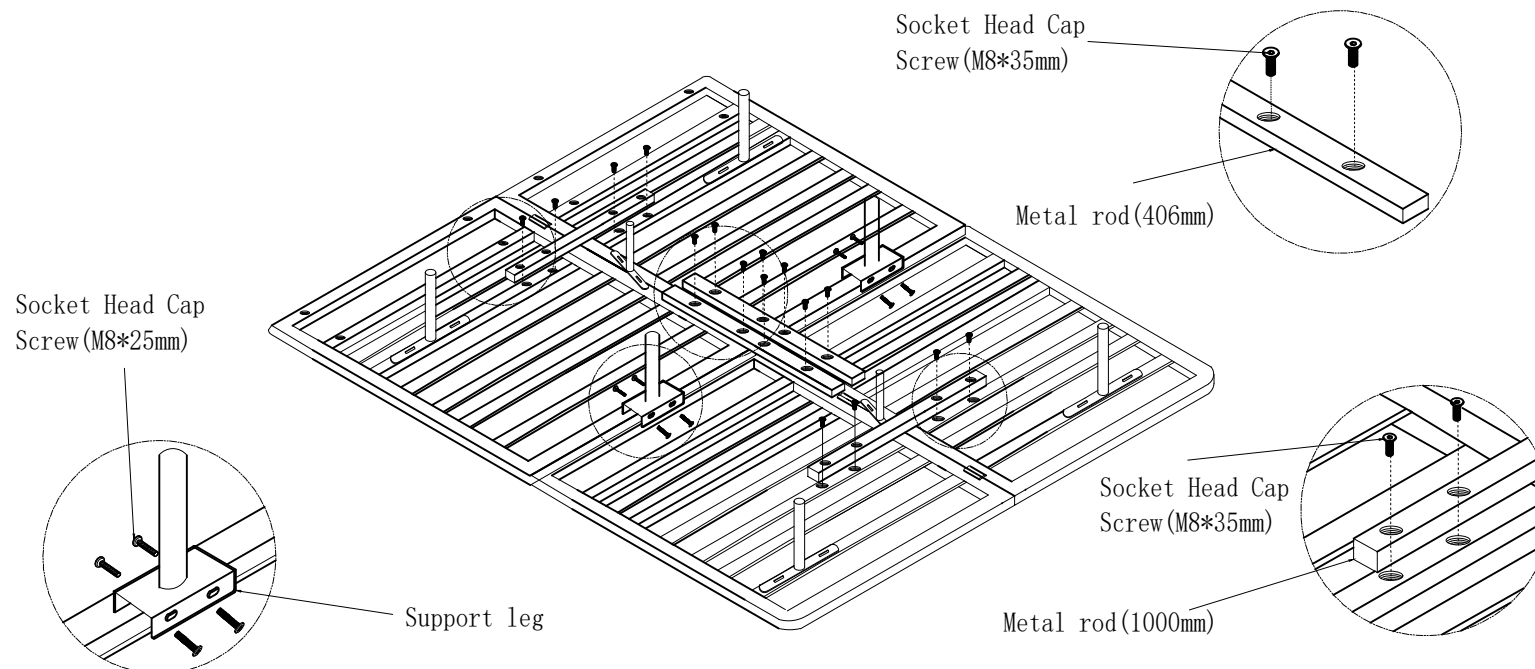


5.Turn the bed frame over and place the fabric cover on it.


The holes provided here must correspond to the holes on the bed head.

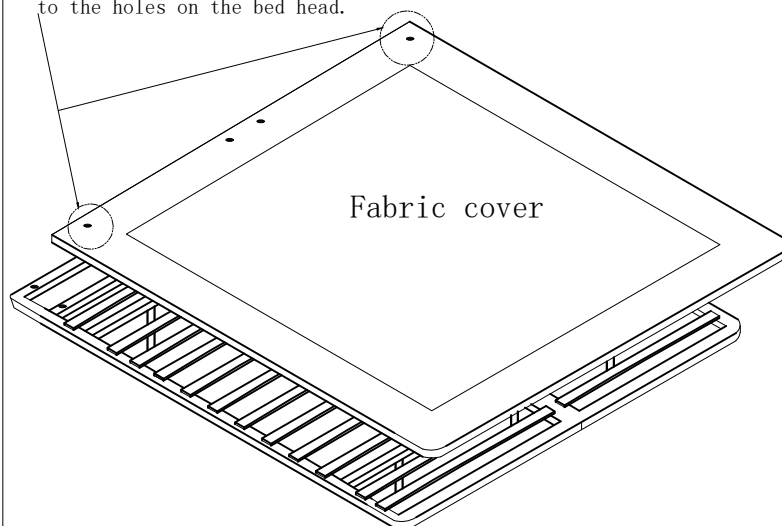

6.Attach the metal frame to the bed frame using screws.

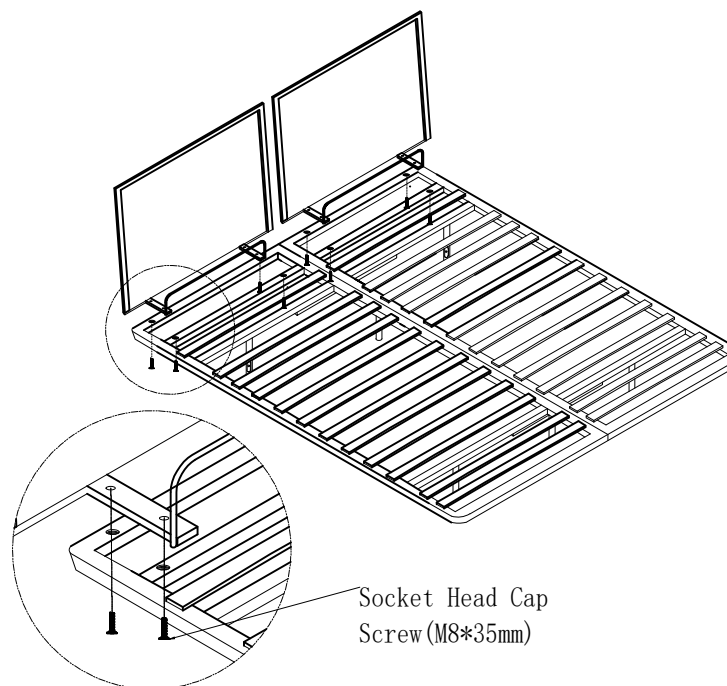

Assembly instructions

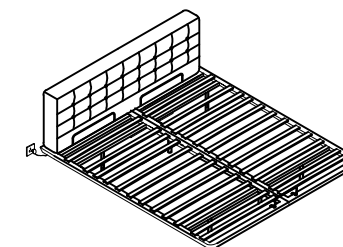

BD8091 Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Socket Head Cap Screw (M8*35mm)	24	1
B		Socket Head Cap Screw (M8*25mm)	20	1
C		T-shaped leg	4	0
D		Adjustable T-shaped leg	2	0
E		Support leg	2	0
F		Magnetic light strip	6	0
G		Sensor	2	0
H		Power Adapter for Light Strip	1	0
I		Wrench	2	0
J				
K				

7. Place the Bed Backrest on the bed head metal frame

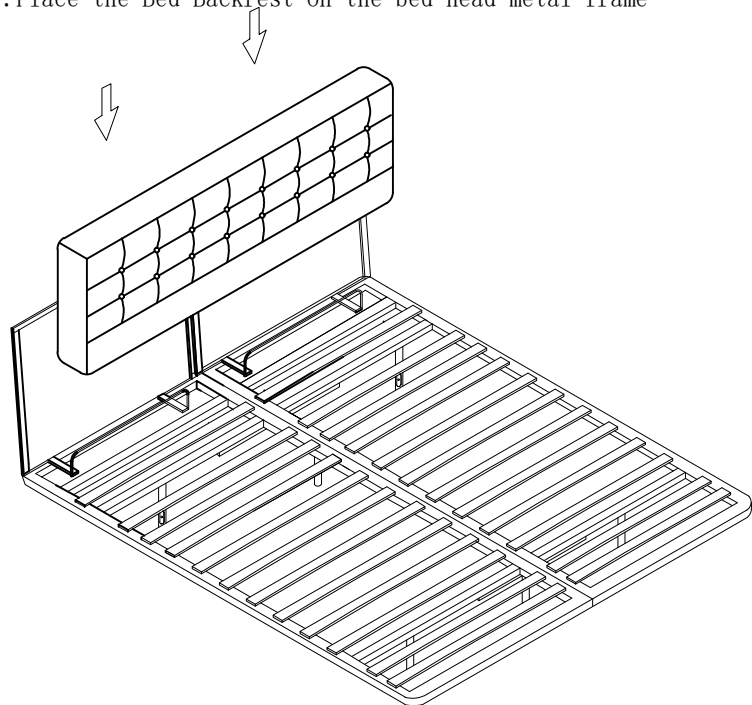


7. Install the magnetic light strip and attach it to the outer side of the bed frame using magnetic attachment.

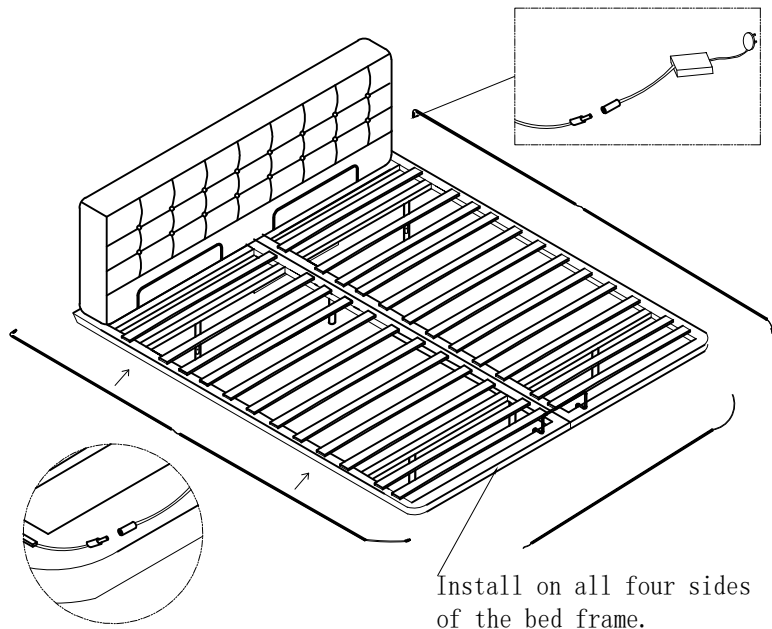


Install on all four sides of the bed frame.


7. Install the magnetic light strip and attach it to the outer side of the bed frame using magnetic attachment. (The installation method for the sensor battery is on the last page)

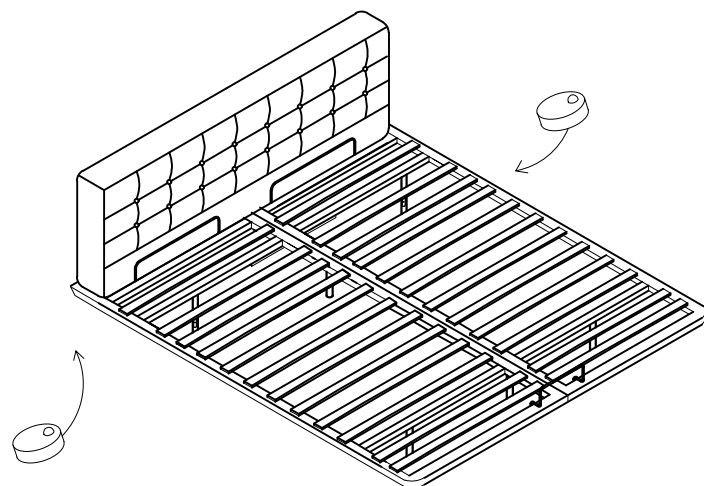

8. Installation Completed.

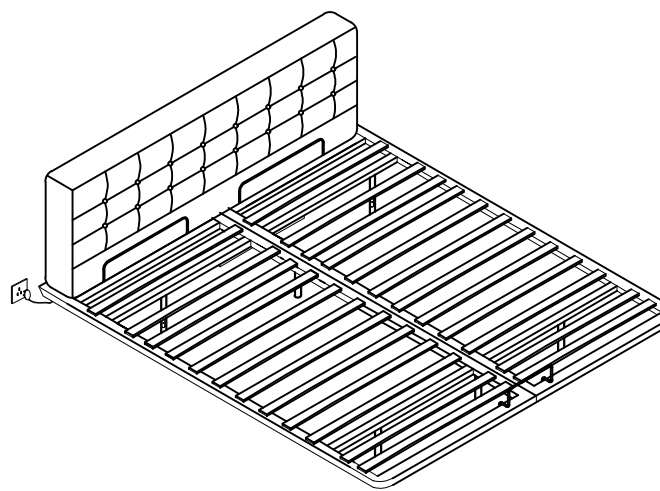

Assembly instructions

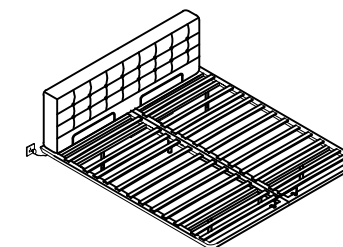

BD8091 Installation

The number of people needed for installation: 2


- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories


	Shape	Name	Quantity required for installation	Spare quantity
A		Socket Head Cap Screw (M8*35mm)	24	1
B		Socket Head Cap Screw (M8*25mm)	20	1
C		T-shaped leg	4	0
D		Adjustable T-shaped leg	2	0
E		Support leg	2	0
F		Magnetic light strip	6	0
G		Sensor	2	0
H		Power Adapter for Light Strip	1	0
I		Wrench	2	0
J				
K				

Battery installation instructions


1. Rotate the backplate and remove the backplate

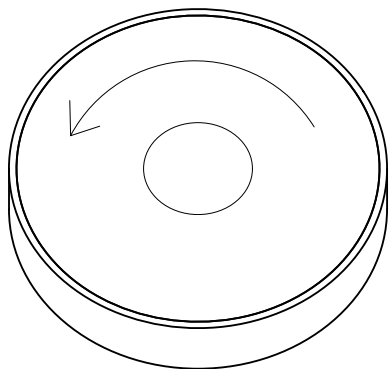


3. The button cell is placed in the groove with the positive pole side up (Smooth flat side facing up)

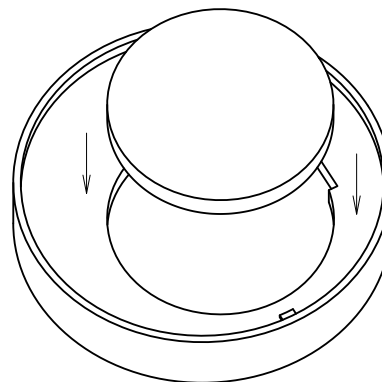

3. Cover the backplate back and rotate (note the corresponding groove)

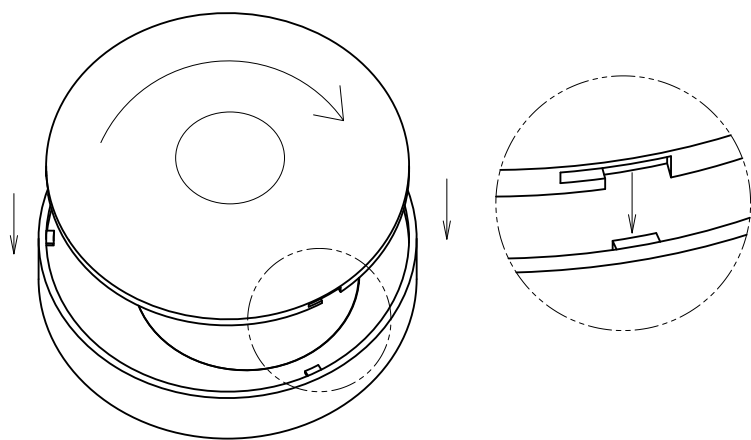

4. The installation is complete

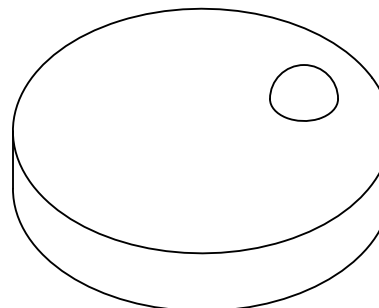

Please purchase it yourself

Model:CR2450

