



1.Attach the seat cushion to the stool's support

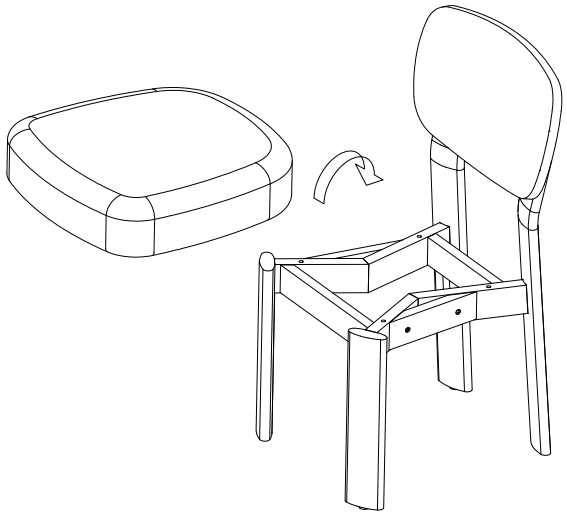

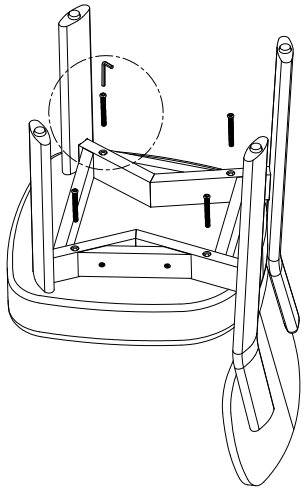

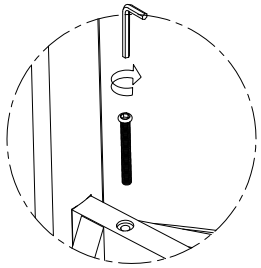


2.The installation is complet(If the chairs is unlevel,adjust the leveling feet under the base to stabilize.)

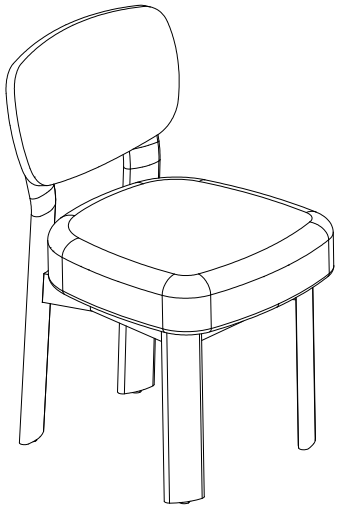

POVISON

Installation instruction

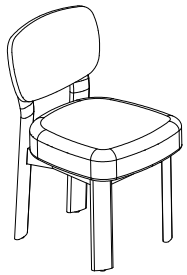

CR8221 Installation

The number of people needed for installation: 2

① Please read the manual carefully before installing this product. And strictly follow the installation process

② Please take good care of this manual for your next installation

③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Socket Head Cap Screw(M6*70mm)	4	1
B		Support feet	0	1
C		Wrench	1	0
D				
E				
F				
G				