




1.Unwind the PP belt with the scissors.

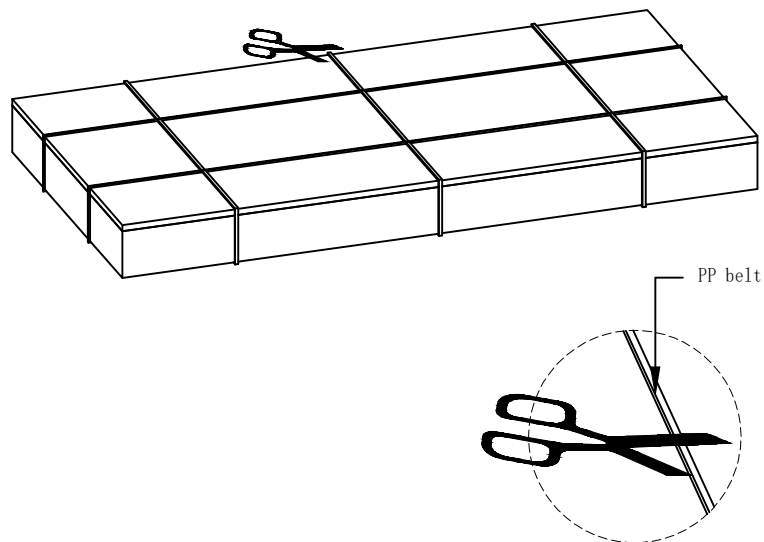


2.Take out the wooden box panel, remove the pearl cotton, and place it aside.

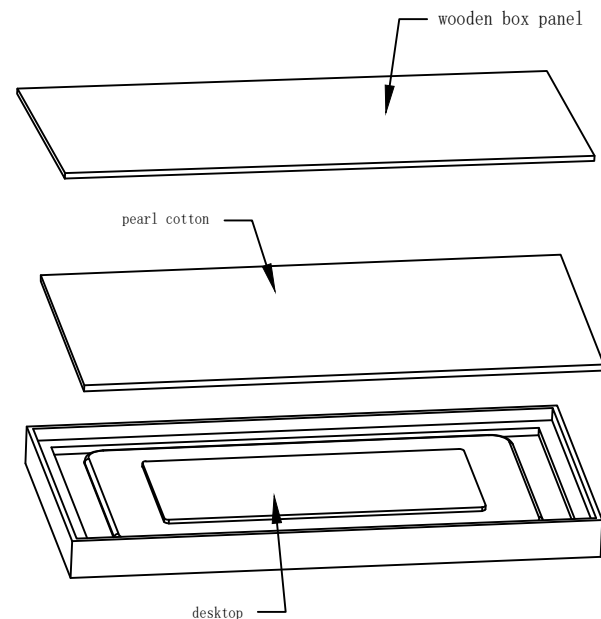

3.Place the desktop on the removed pearl cotton place (avoid collision and damage to the desktop).

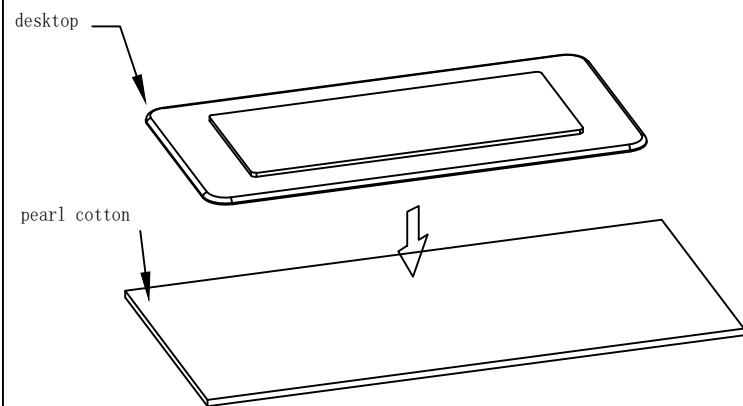


4.Four people need to place the dining table above the dining table base before installation.

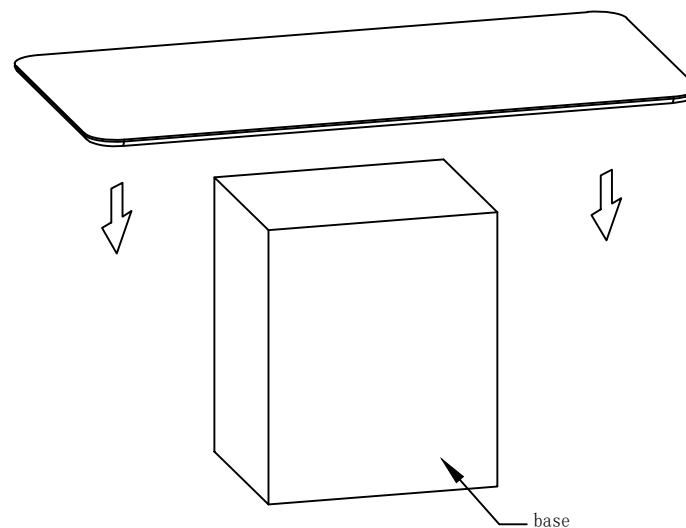

POVISON

Table unpacking instructions

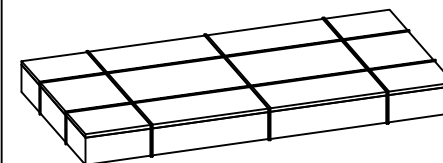



Number of people needed:4

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation

Parts list



Serial number	Shape	Name	Quantity

1. Place the table top on top of the frame, align the interconnected holes, put in the hexagon socket machine screws, and tighten the hexagon socket machine screws with a wrench.

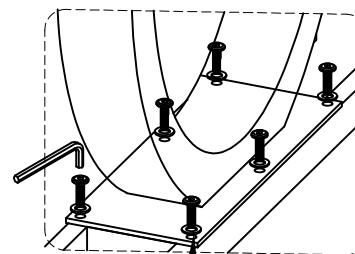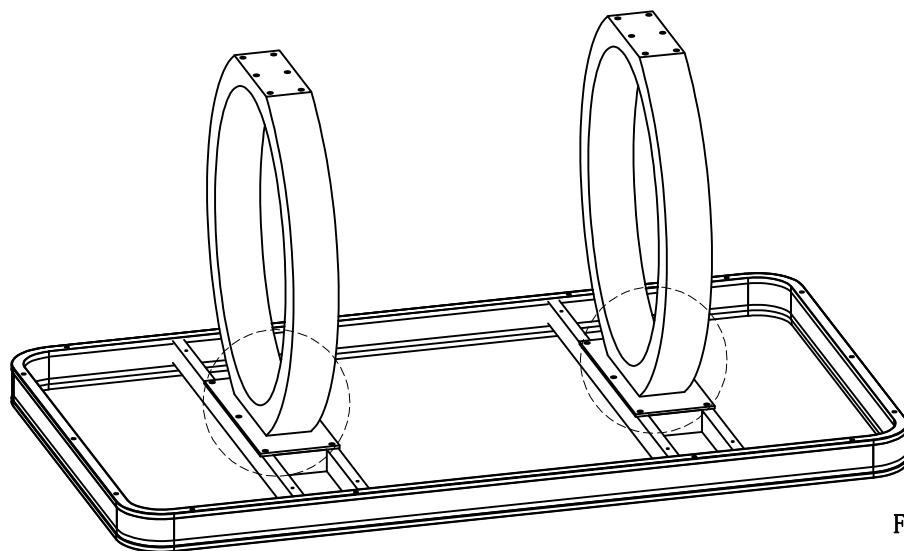

Mechanical Adjustment
Foot (M8*15mm) + Gasket


2. Place the base at the bottom of the table legs, align the holes into the hexagon socket machine screws can be tightened with a wrench.

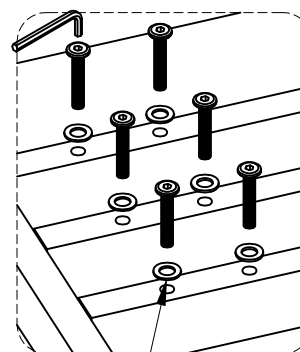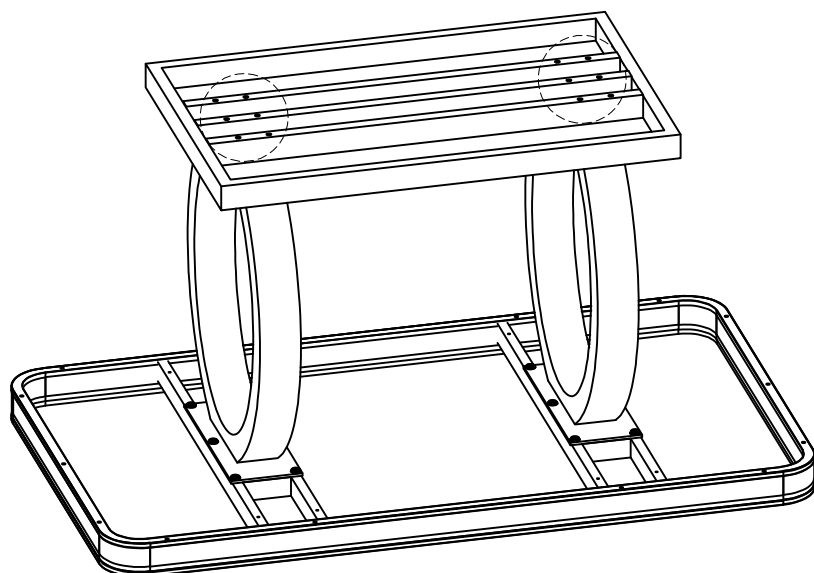

Mechanical Adjustment
Foot (M8*65mm) + Gasket

POVISON

Installation instruction

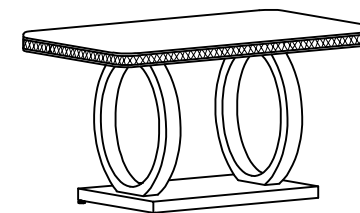

DT052AB14/16/18/200/230 Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon Socket Machine Screws (M8*65mm)	12	1
B		Hexagon Socket Machine Screws (M8*15mm)	12	2
C		Gasket	24	3
D		Self-Drilling Screw (M5*15mm)	16	6
E		Wrench	1	0
F		Mechanical Adjustment Foot (M8*15mm)	0	2
G				

3.Place the table top above the frame, put the self-drilling screw in the holes of the frame lug position and tighten the self-drilling screw with a drill and screwdriver

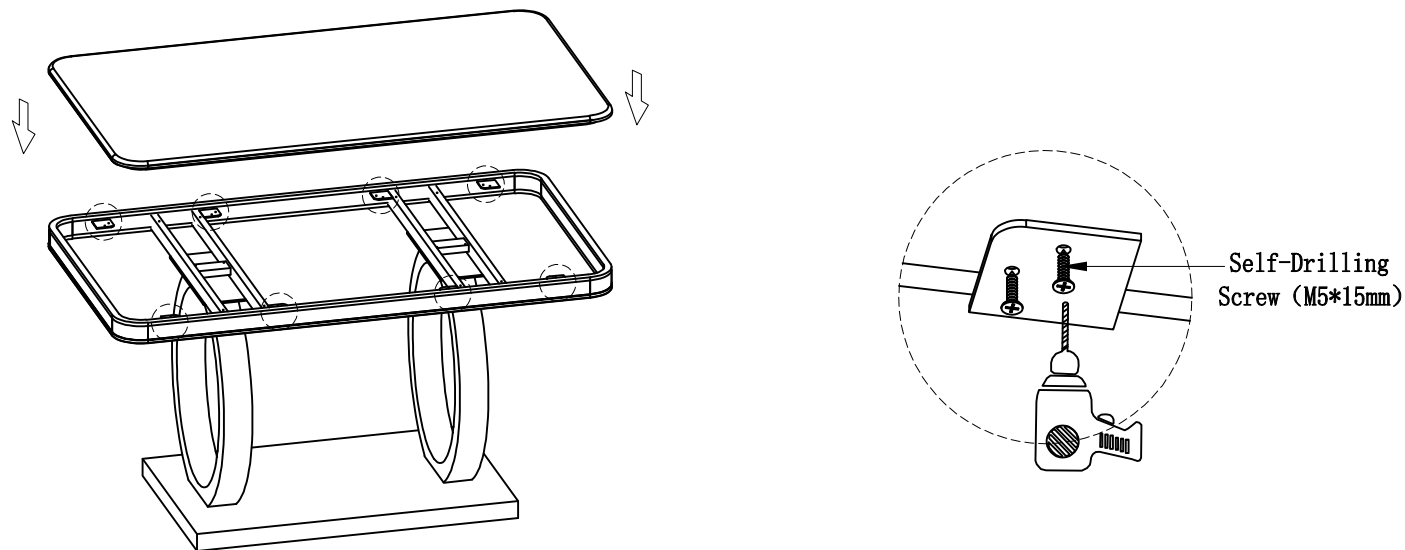


4. Installation Completed

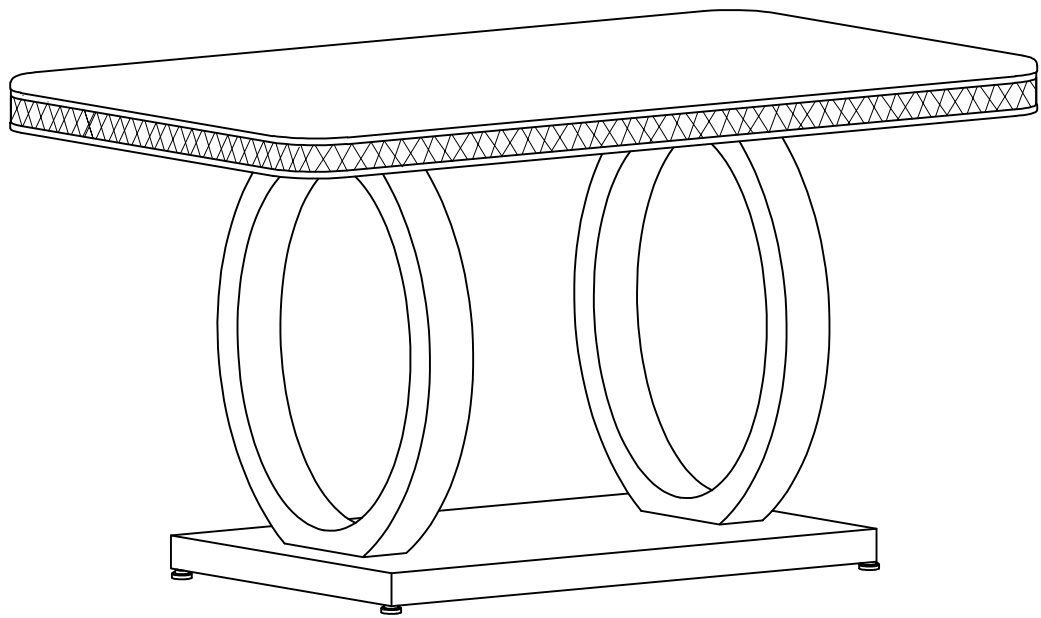

POVISON

Installation instruction

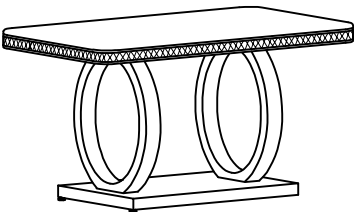

DT052AB14/16/18/200/230 Installation
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon Socket Machine Screws (M8*65mm)	12	1
B		Hexagon Socket Machine Screws (M8*15mm)	12	2
C		Gasket	24	3
D		Self-Drilling Screw (M5*15mm)	16	6
E		Wrench	1	0
F		Mechanical Adjustment Foot (M8*15mm)	0	2
G				