


2. Align the bracket with the desktop connection hole, put in the hexagon socket head screw, and tighten it with a wrench

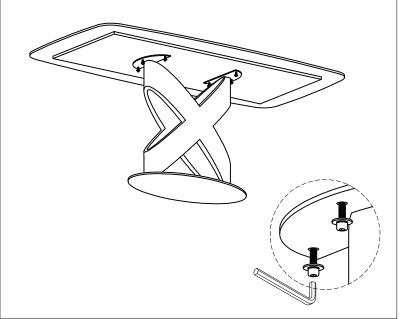


Installation instruction

POVISON



DT030AW01/02/03 Installation The number of people needed for installation: 2

- Please read the manual carefully before installing this product. And strictly follow the installation process
- Please take good care of this manual for your next installation
- Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

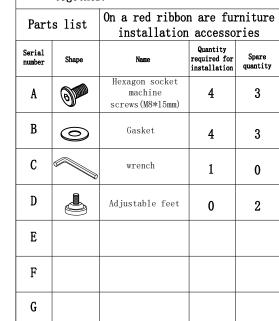

3. Installation finish.

