




1.Use scissors to cut and remove the PP belt.

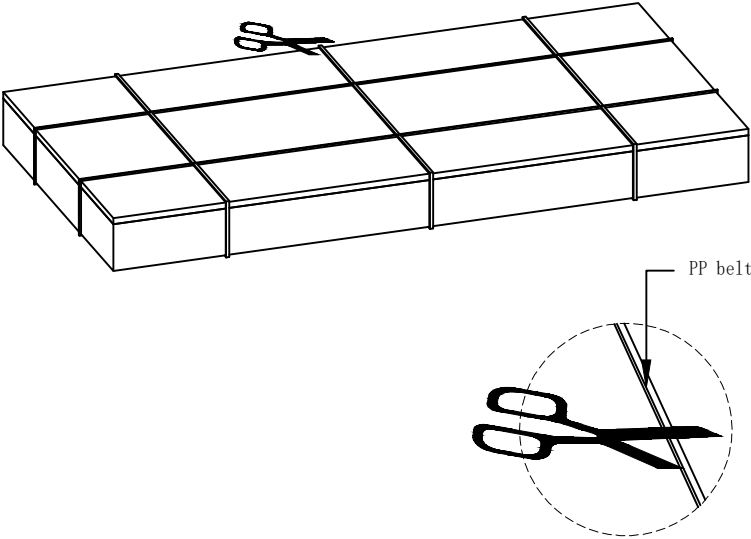


2.Take out the wooden box panel, remove the protective foam, and set it aside.

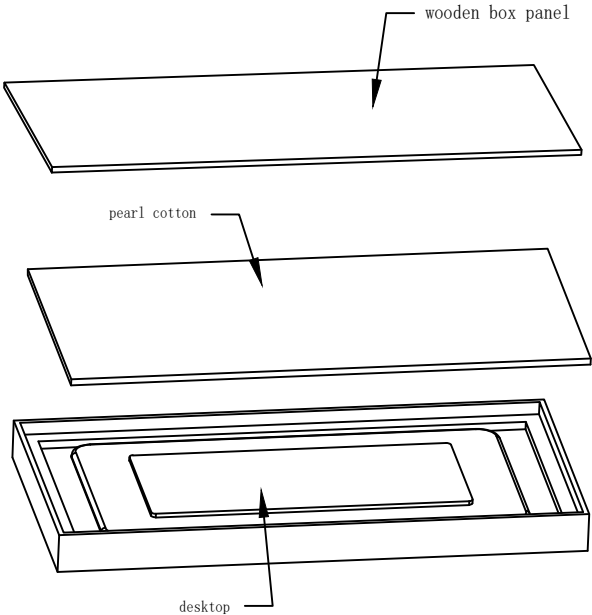

3.Place the tabletop on the removed protective foam to prevent damage or scratches.

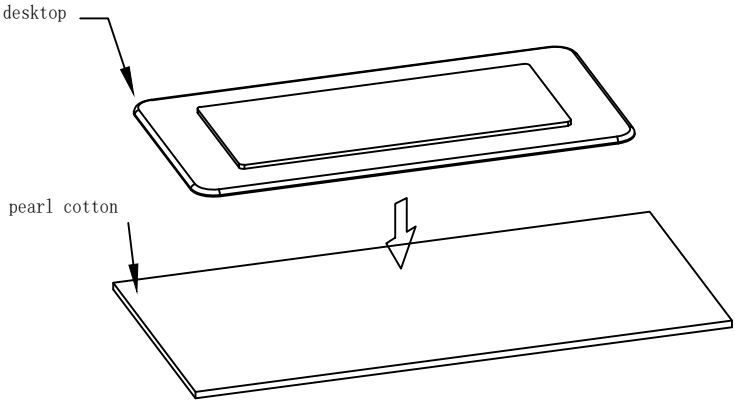


4.With the help of four people, carefully position the tabletop above the dining table base.

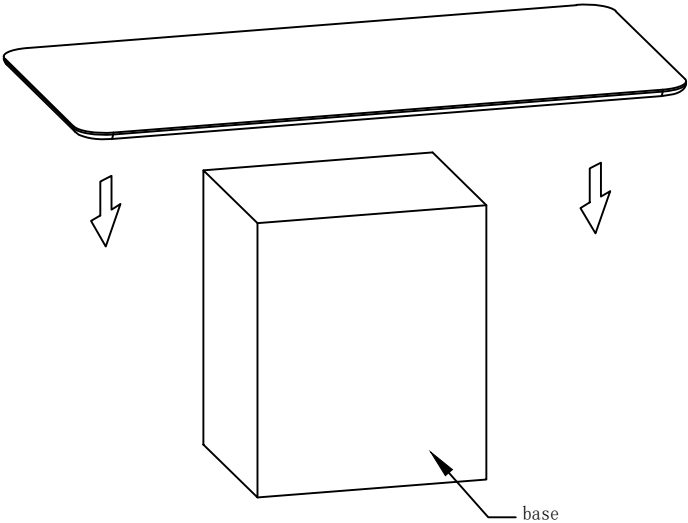

POVISON

## Table unpacking instructions

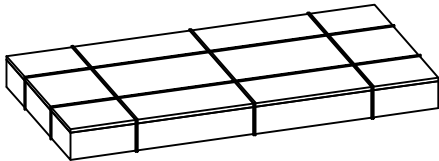


Number of people needed:4

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation


### Parts list

Serial number	Shape	Name	Quantity


1. Place the support bracket on top of the base to align the interconnection holes, put in the hex screws and washers, and tighten with a wrench.

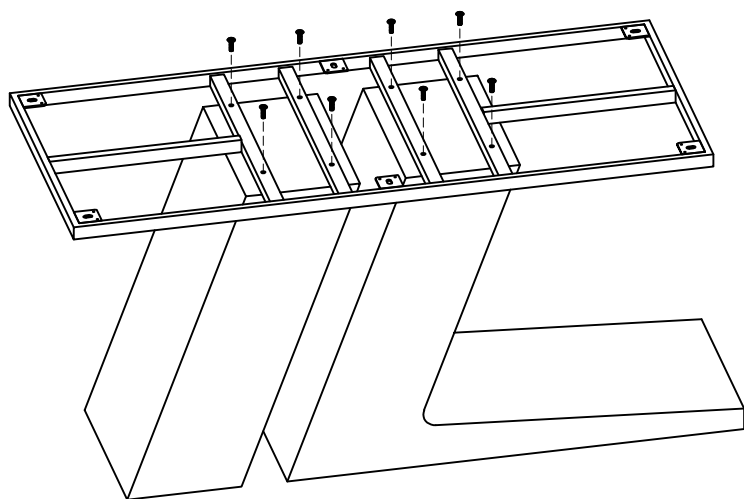


Hexagon socket  
Gasket+ machine screws  
(M8\*25)

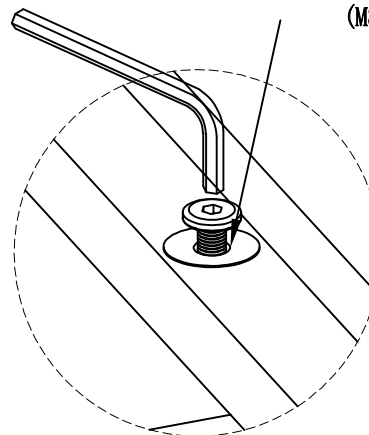

3. Put the desktop on the support frame, align the tabs of the support frame with the holes on the bottom plate of the table top, put in the hex screws and washers, and tighten them with a wrench

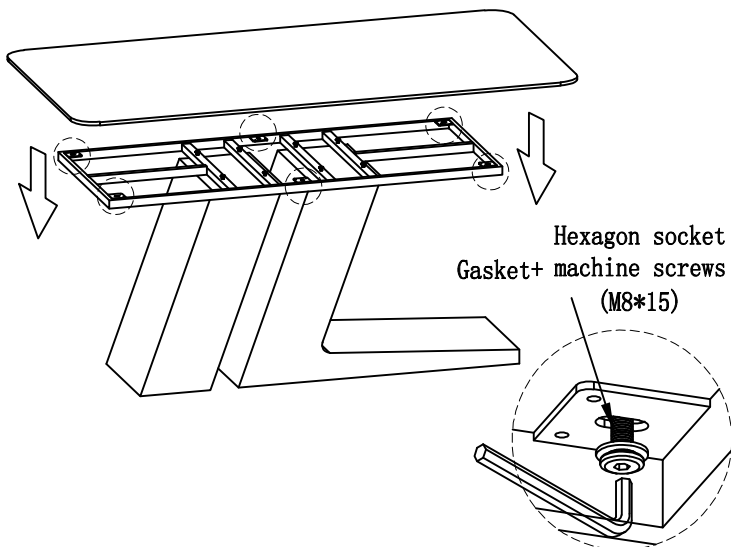


3. Installation complete

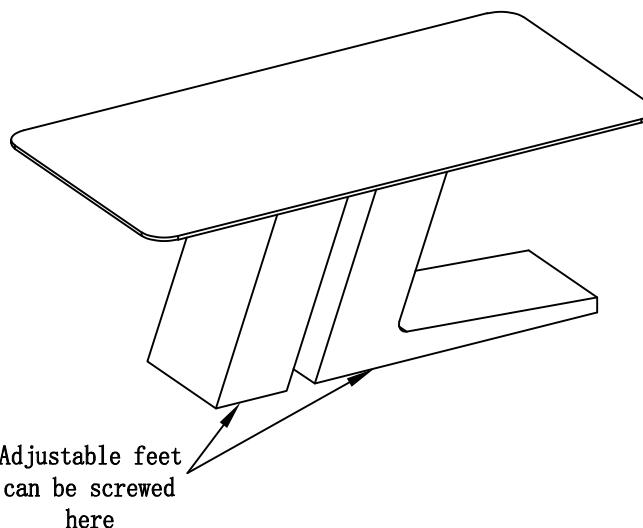

POVISON

## Installation instruction

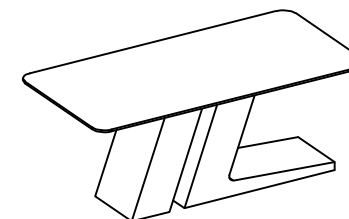

DT0113AW160/180/200 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

### Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket machine screws (M8*25)	8	1
B		Hexagon socket machine screws (M8*15)	6	0
C		Gasket	14	1
D		Wrench	1	0
E		adjustable feet (M8*16)	5	0
F		Self-tapping screws (M4*15mm)	0	11
G				