



1. Align the mounting holes and put in Hexagon Socket Machine Screws and tighten it.

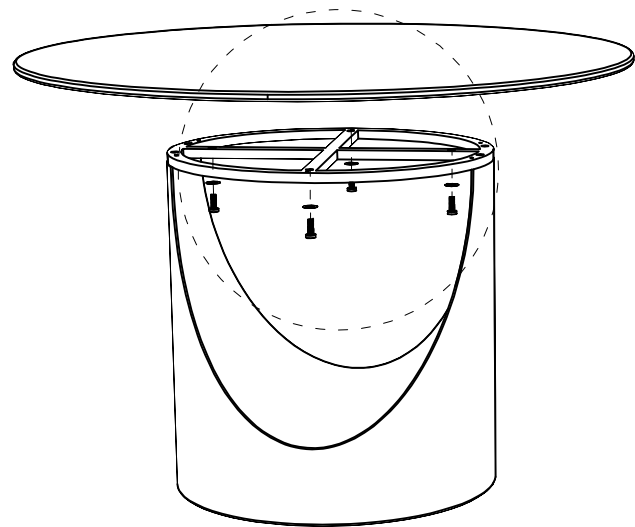


Spare Holes
(Hexagon socket machine screws holes can be screwed into the use of Self-drilling screw when damaged)

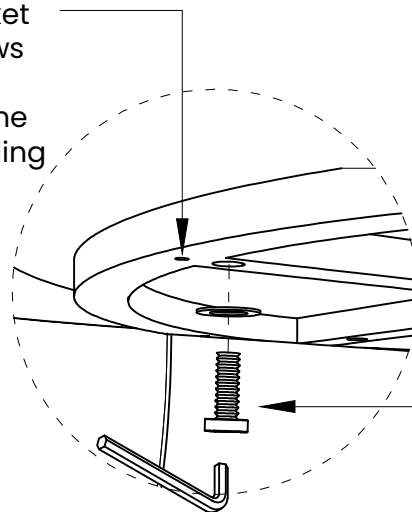


Hexagon Socket Machine Screws(M8*30mm)+Gasket

1. Installation completed

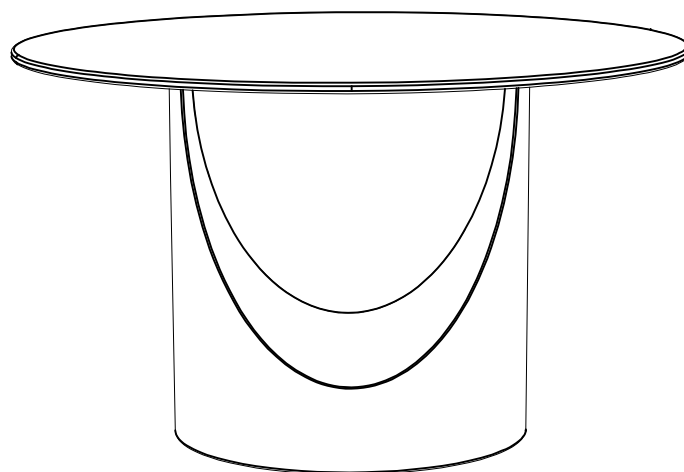



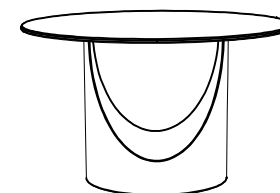


Assembly instructions



DT8168WBRI30 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon Socket Machine Screws (M8*30mm)	4	1
B		Gasket	4	1
C		Self-Drilling Screw(M6*25mm)	0	6
D		Mechanical adjustable feet can be screwed	0	2
E		Wrench	1	0
F				
G				