




1. Reverse the table legs with the bottom facing upwards, align the holes between the legs and the bottom link plate, install the carbon steel link plate underneath and screw in the adjustable feet.

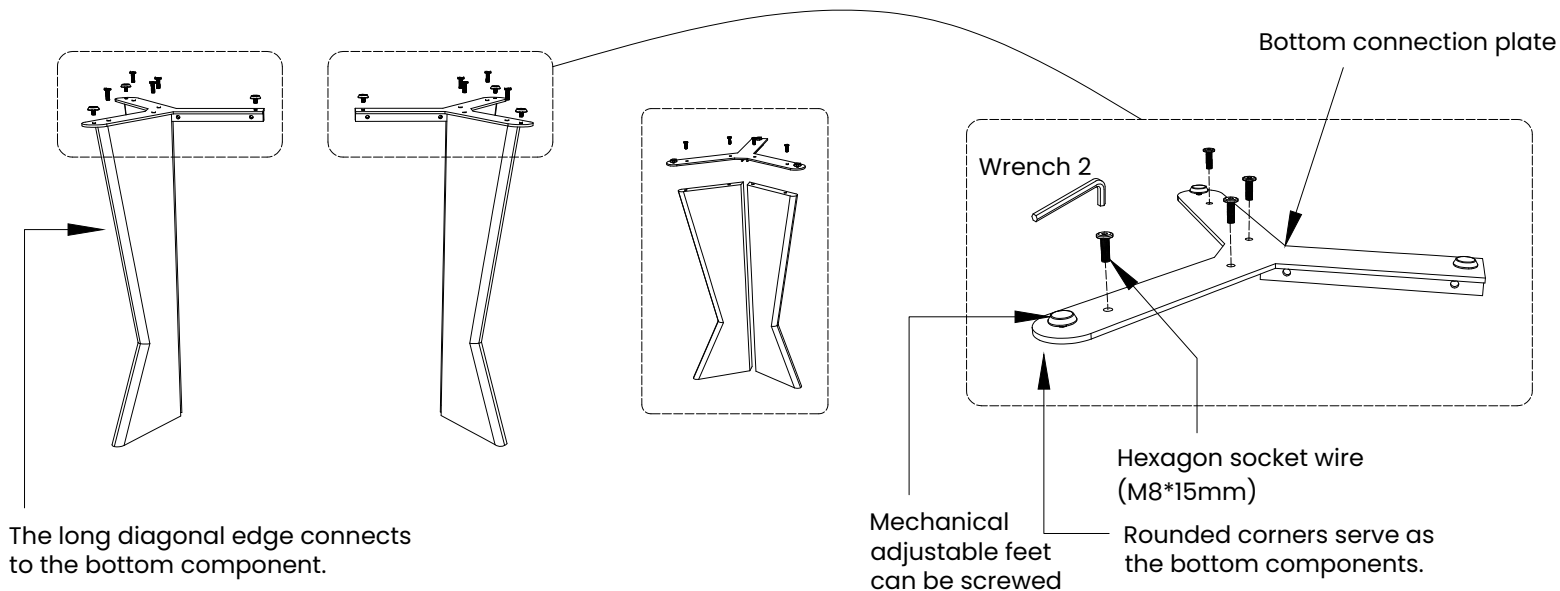

2. Securely install the table legs and top attachment plate.

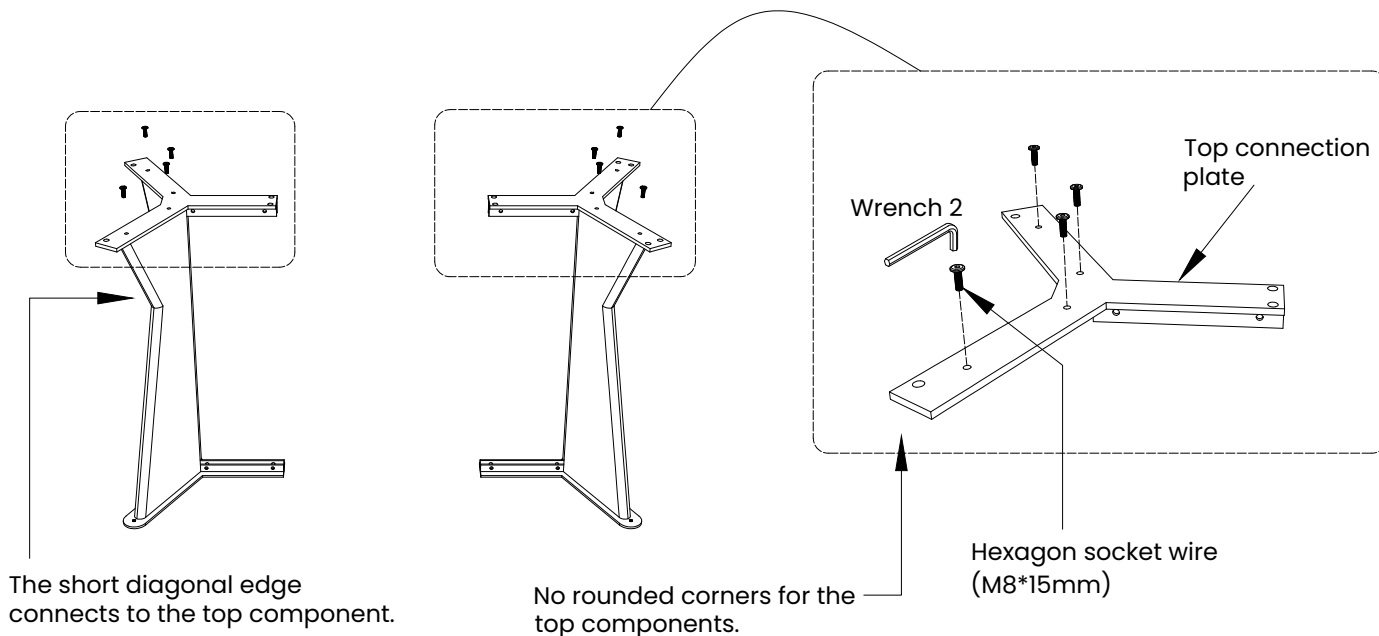

Assembly instructions

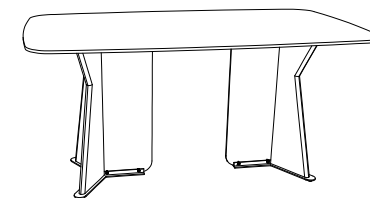

DT8162BR160 Installation




The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.



Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket wire (M8*15mm)	24	1
B		Hexagon socket wire (M8*25mm)	8	1
C		Nut	8	1
D		Mechanical adjustable feet can be screwed	6	2
E		Wrench2	1	1
F		Wrench 1	1	0
G				

3. Put the glass into the slot position, and align the upper and lower connection holes, and tighten it with hexagonal machine wire and nut.

Facing upwards.

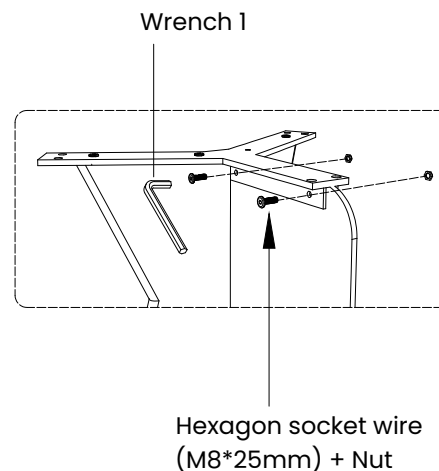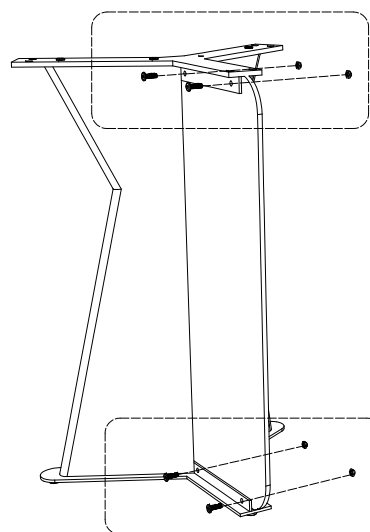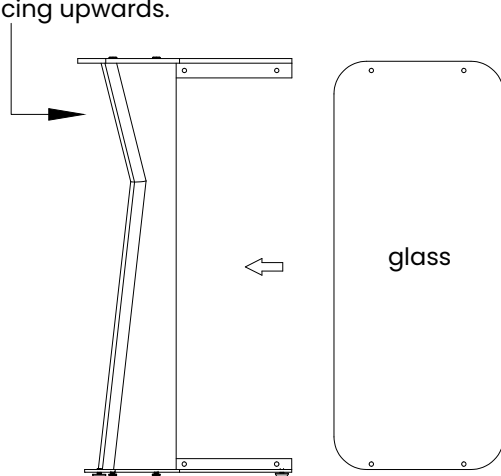


4. Align the connection holes on the bottom and top of the desktop with the connection plate and tighten with an Allen key.

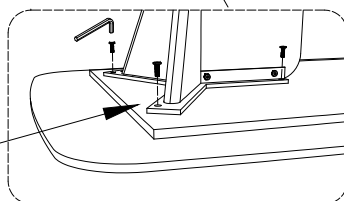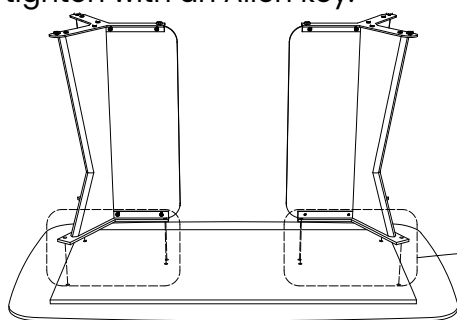


Hexagon socket wire
(M8*15mm)

5. Installation completed.

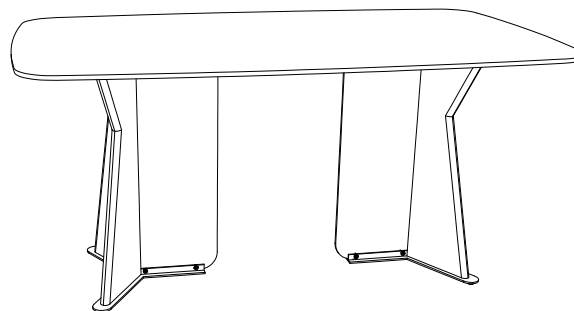

Assembly instructions

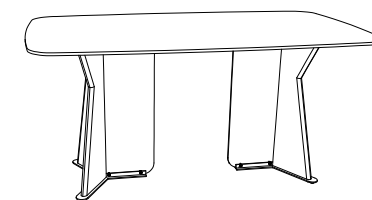

DT8162BR160 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket wire (M8*15mm)	24	1
B		Hexagon socket wire (M8*25mm)	8	1
C		Nut	8	1
D		Mechanical adjustable feet can be screwed	6	2
E		Wrench2	1	1
F		Wrench 1	1	0
G				