




1. Arrange the cabinets in order according to the corresponding holes

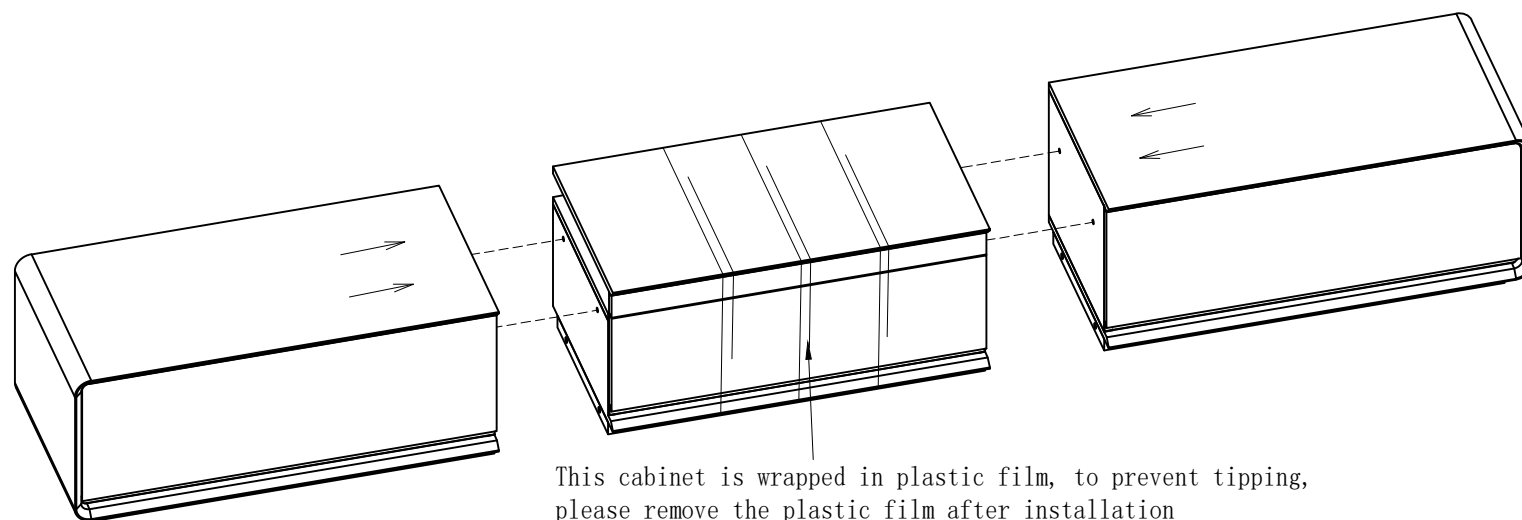

2. Pull the drawer apart and screw in the screws from the inside of the cabinet

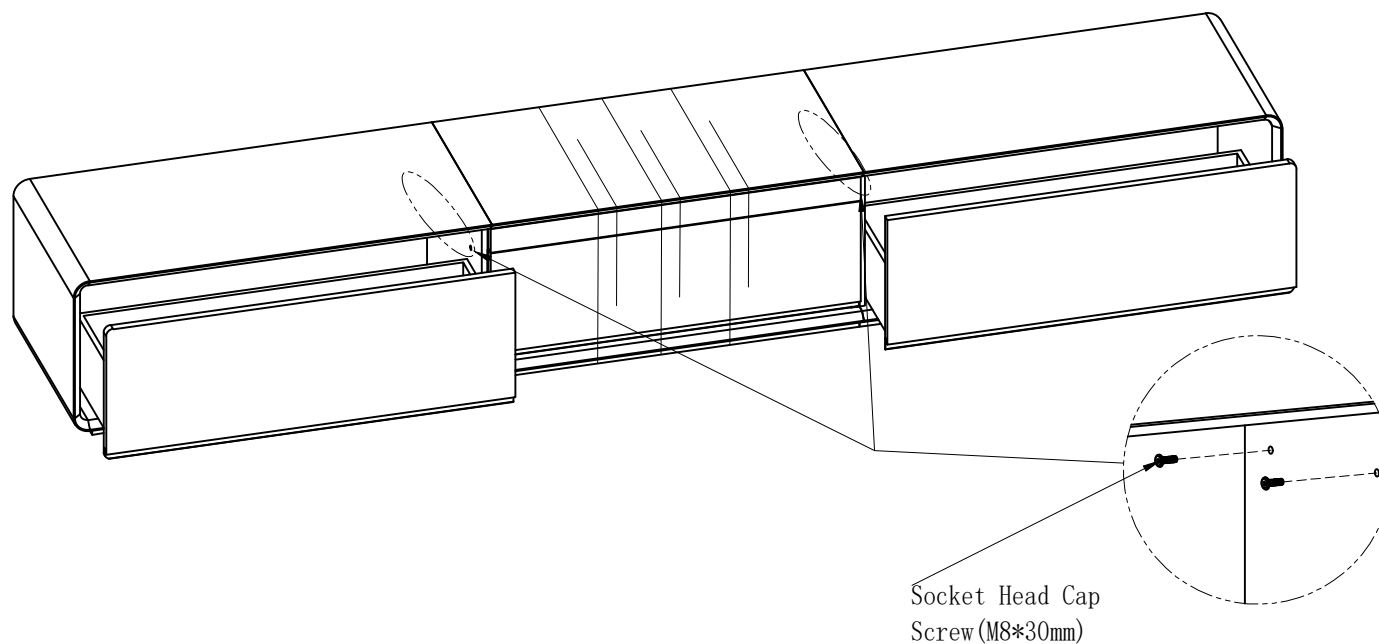


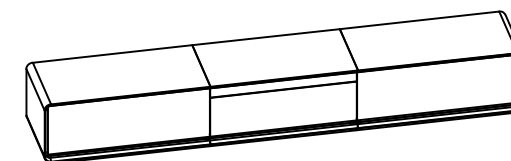
## Assembly instructions




### PT2001 Installation

The number of people needed for installation: 2


- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Socket Head Cap Screw (M8*30mm)	8	0
B		Wrench	1	0
C				
D				
E				
F				
G				


3. Install the bottom attachment screws

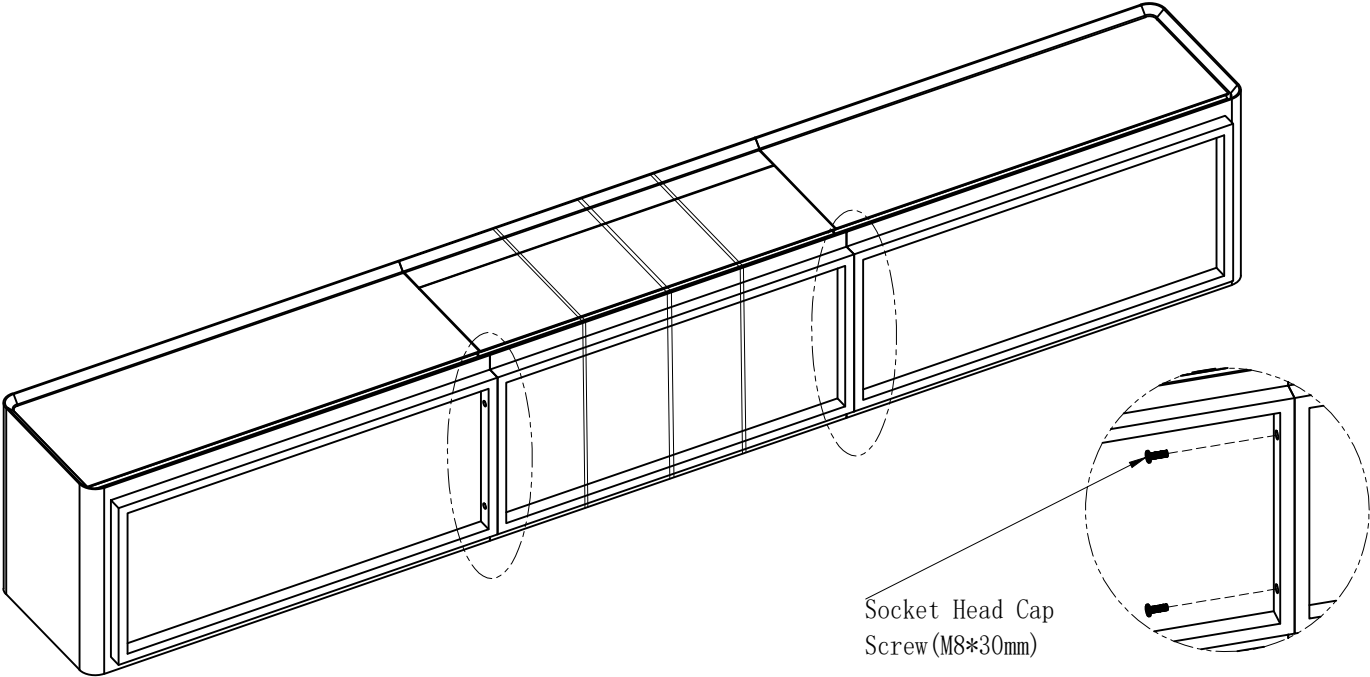

4. Tear off the plastic wrap that wraps the cabinet, The installation is complete

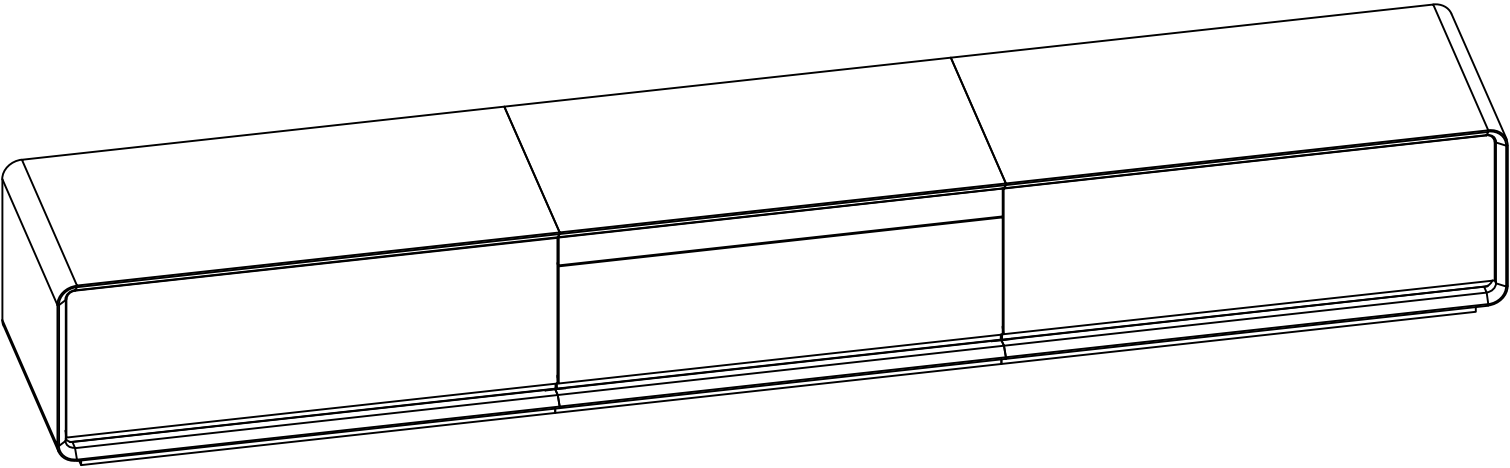

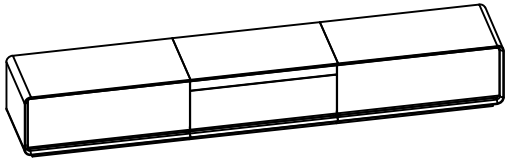

Assembly instructions



PT2001 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Socket Head Cap Screw (M8*30mm)	8	0
B		Wrench	1	0
C				
D				
E				
F				
G				