



1.Align the desktop with the base hole into the hexagon socket machine screws with a wrench to tighten

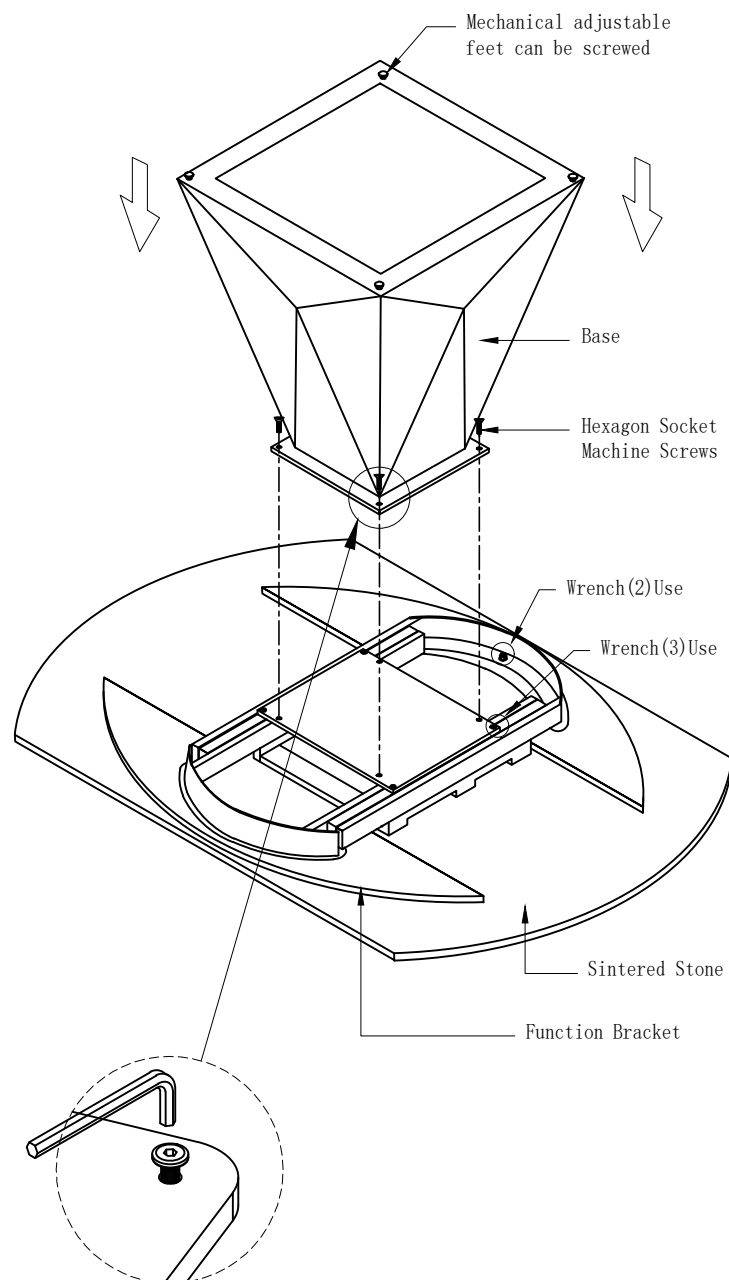


2. Installation Completed

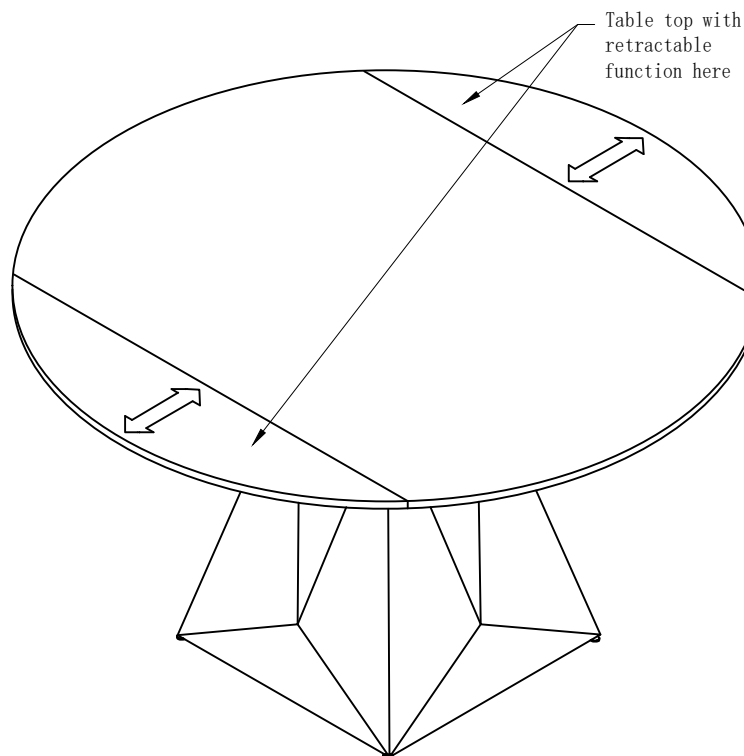

POVISON

Installation instruction

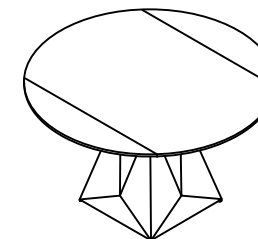

DT8092H135 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Additional accessories are spare
A		Hexagon Socket Machine Screws (M8*12mm)	4	
B		5mm Wrench(1)	1	
C		14mm wrenches(2) (For adjusting the function frame loosely)	1	
D		4mm wrenches(3) (For adjusting the function frame loosely)	1	
E				
F				
G				