



1. Turn the dresser upside down, place the table legs on the corresponding positions of the base plate to align the holes, and then put in the hexagon socket thread and shim, and tighten them with a wrench.


POVISON

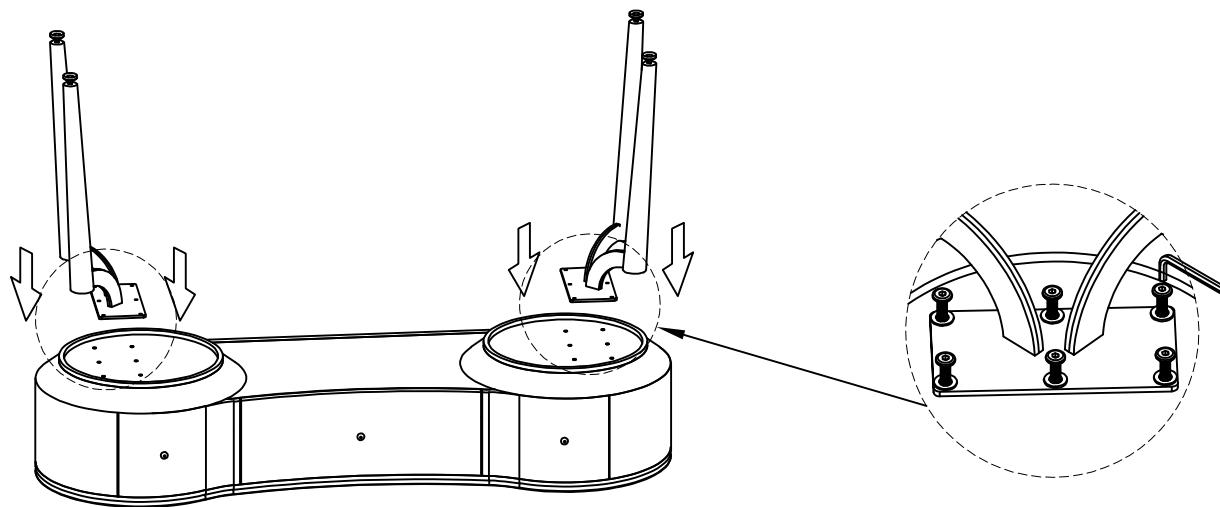

2. Installation completed

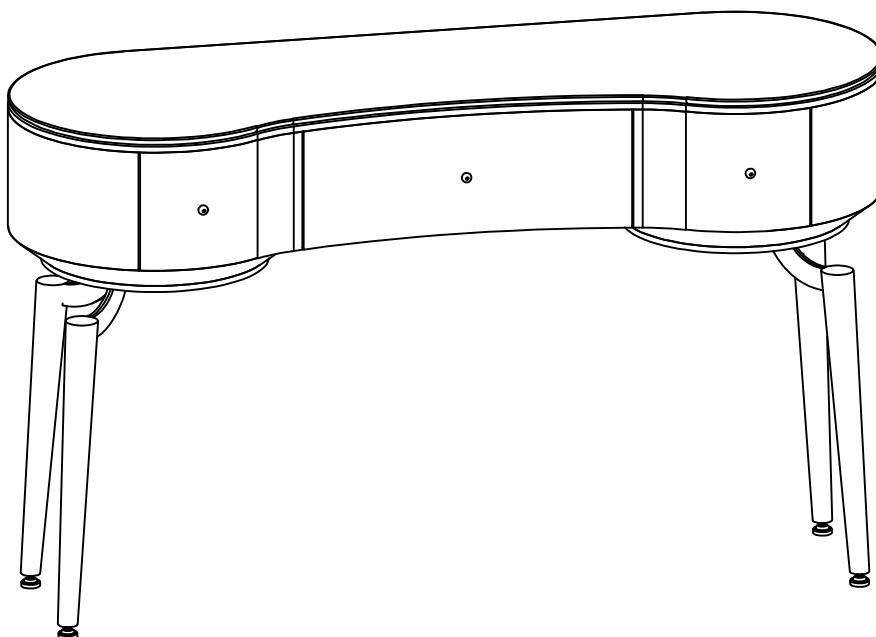

Installation instruction

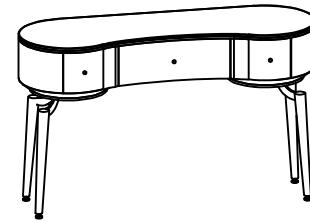

VB8025AW136 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket thread (M6*20mm)	12	2
B		Gasket	12	0
C		wrench	1	0
D				
E				
F				
G				