




1. Put the dresser upside down, put a self-tapping screw on the bottom of the tripod dresser and tighten it with a Phillips screwdriver. (the tripod can be installed left and right, and the installation direction can be changed according to the actual situation)

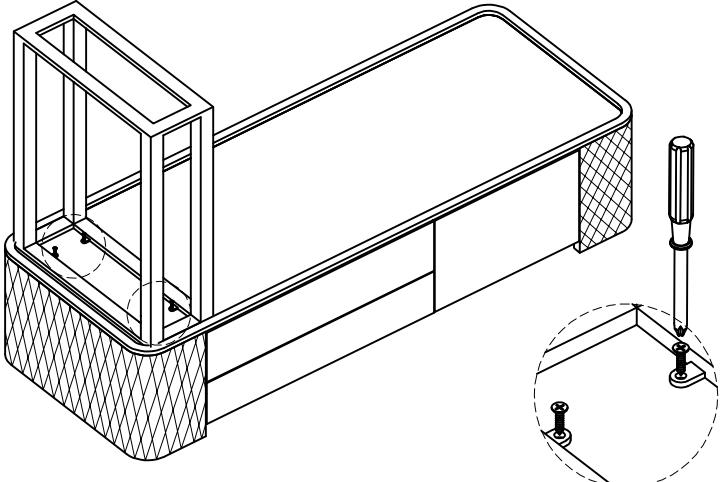

2. Place the glass on the table and move the dresser to the side without hardware feet for bottom support

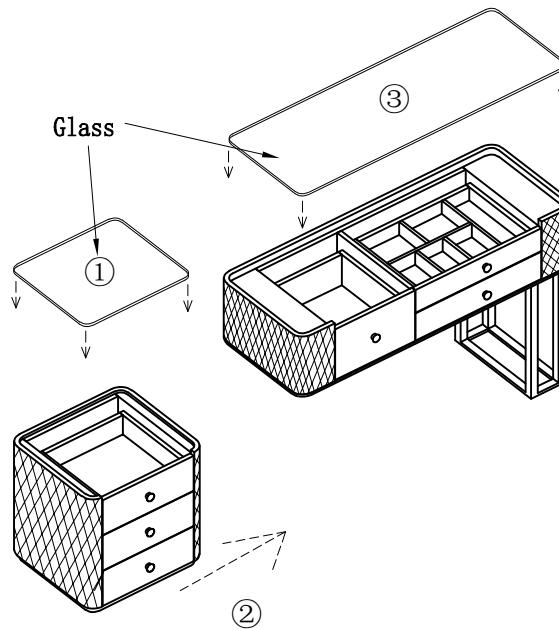


3. Installation complete

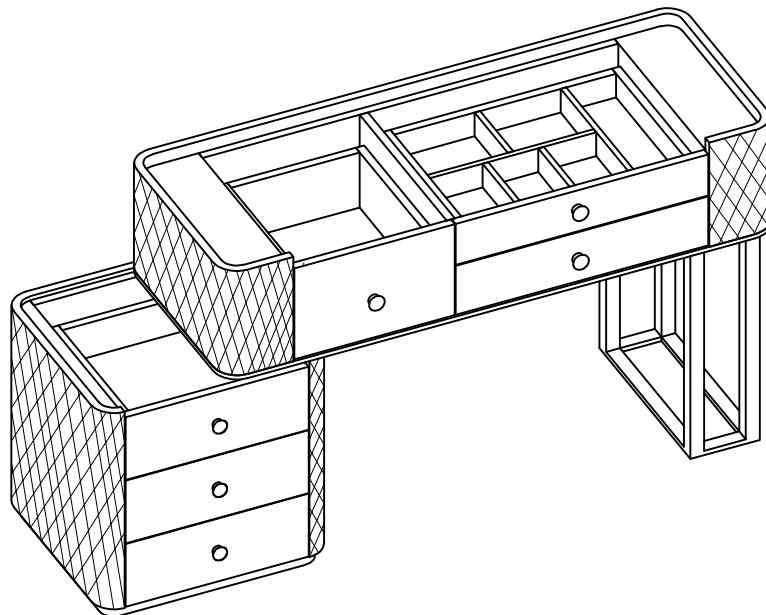

POVISON

Installation instruction

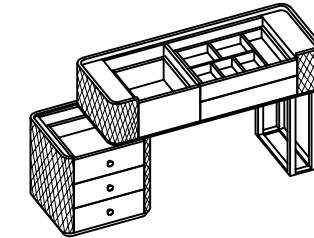

VB8020AWH80/100 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Self-tapping screws (M4*15mm)	4	2
B				
C				
D				
E				
F				
G				