



1. Invert the dressing table, place hardware feet at the corresponding positions at the bottom of the dressing table, and tighten them with screws. (The short hardware leg has no hole at the bottom of the dresser, so it needs to be self positioned, put in the Self-tapping screw, and screw it in with a screwdriver or electric drill.)

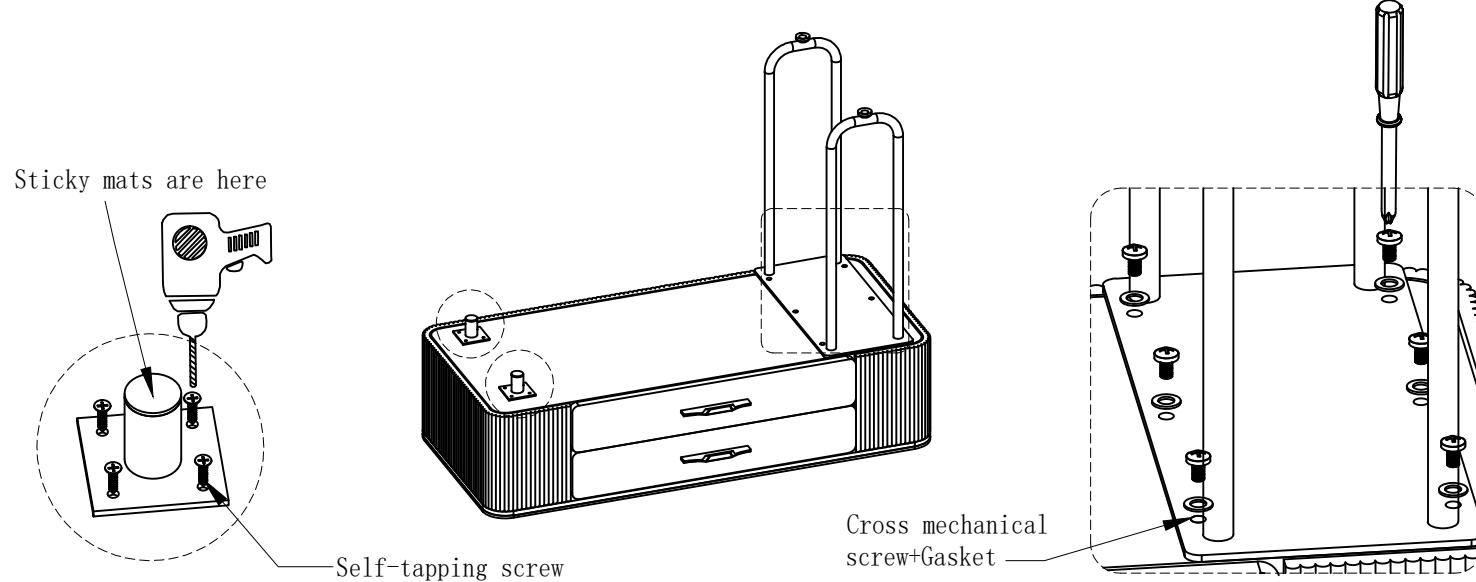

2. Installation completed

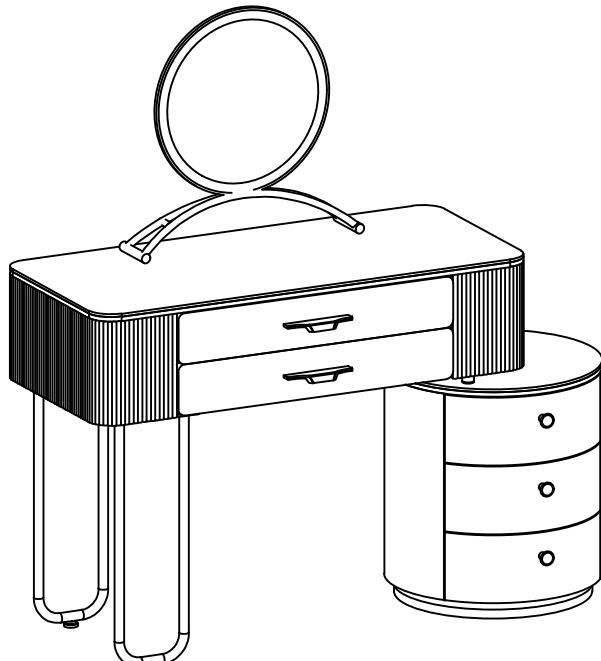

POVISION

## Installation instruction



VB8049W100 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Cross mechanical screw (M8*20mm)	6	2
B		Gasket	6	2
C		Self-tapping screw (M4*12mm)	8	4
D		Adjustable feet	2	4
E		Foot mats	2	4
F				
G				