




1. Installation of hardware feet of dressing table

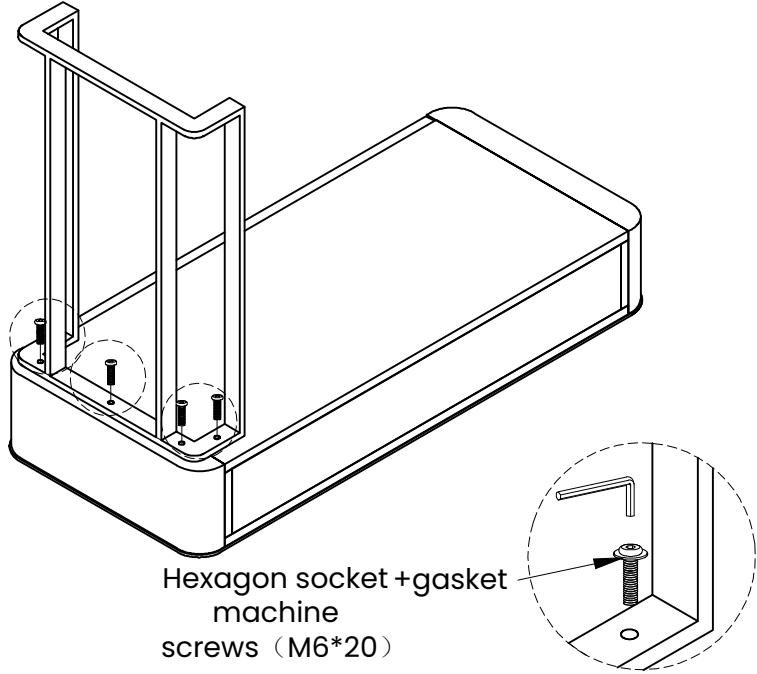


2. Installation of dressing cabinet hardware feet

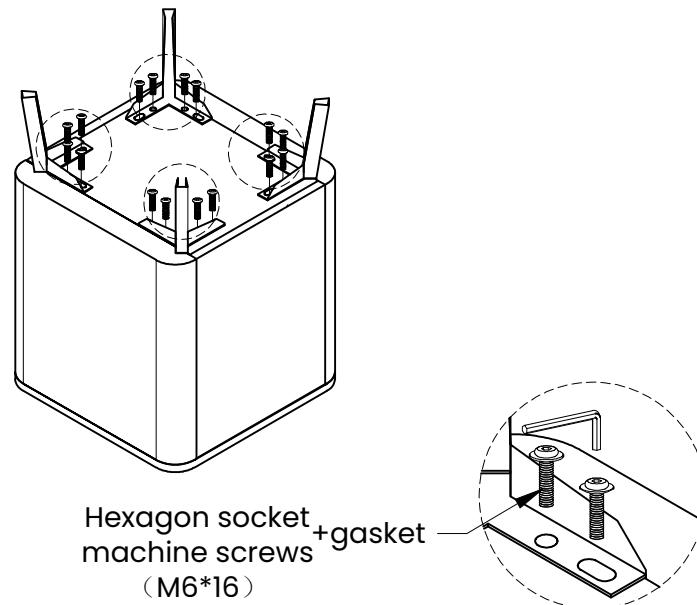

3. The installation is complete

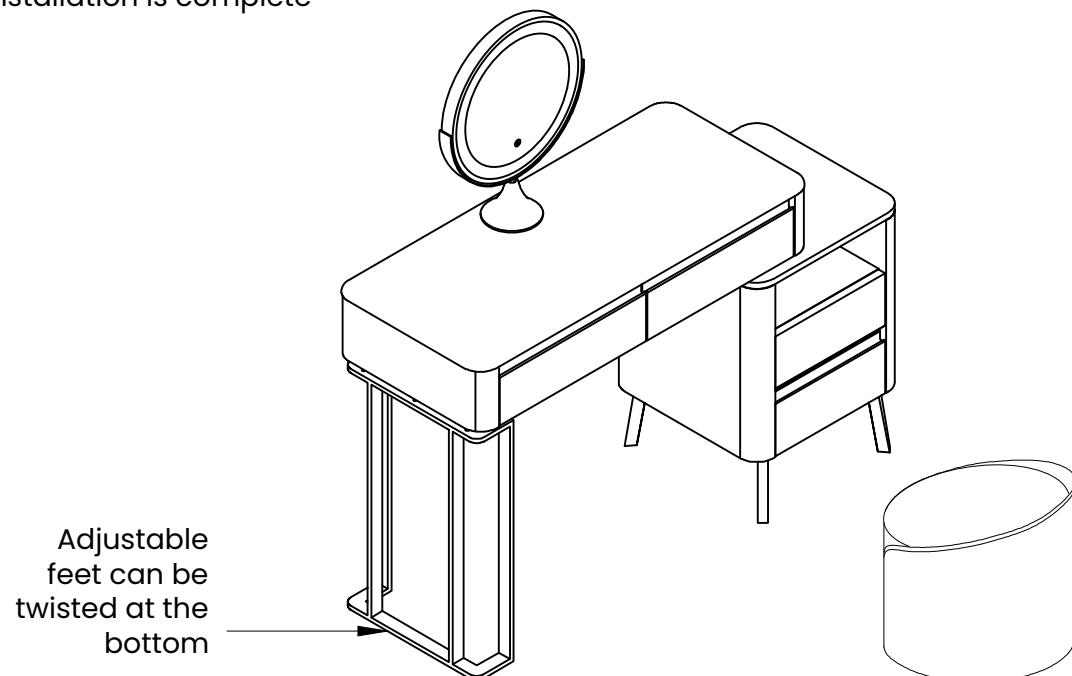


Assembly instructions

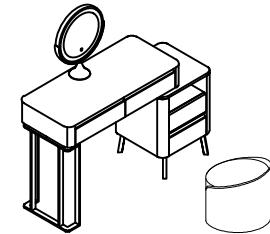

VB8039 Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket machine screws (M6*20mm)	5	0
B		Hexagon socket machine screws (M6*16mm)	16	0
C		Gasket	21	0
D		Wrench	1	0
E		Adjusting foot (M6*15mm)	3	0
F				
G				

You can choose whether to install it according to your own needs (this accessory will damage the wall and affect the appearance of the product) (this accessory is to prevent the product from falling and cause personal safety)

1. Makeup Vanities - Anti tipping Device Installation  
(Method 1)

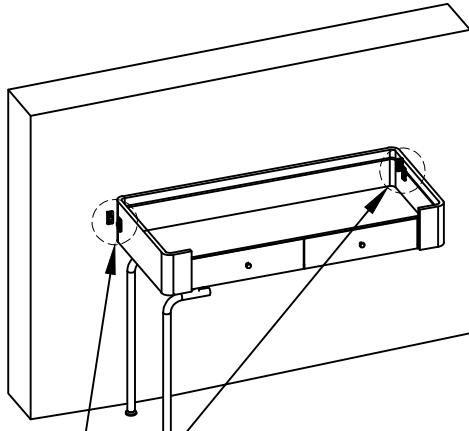


(1) The anti tipping device is installed on the cabinet side panel

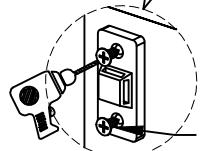


Self-tapping screw (short)


(2) Place another anti tipping device horizontally or slightly upwards on the wall and mark its location with a marker pen

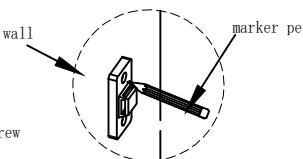


(3) Drill holes with electric drill according to the position marked by the marker on the wall

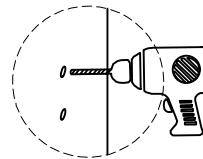

(4) Use a hammer to tap in the expansion screw rubber plug at the hole position on the wall

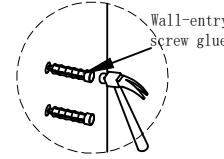


(5) Place anti tipping on the wall and use an electric drill to drive the self tapping screws into the wall

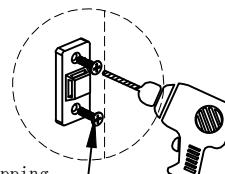


Self-tapping screw (long)

(6) Bundle the two anti tipping devices with straps

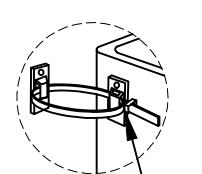

tape

2. Makeup Vanities - Anti tipping Installation (Method 2)

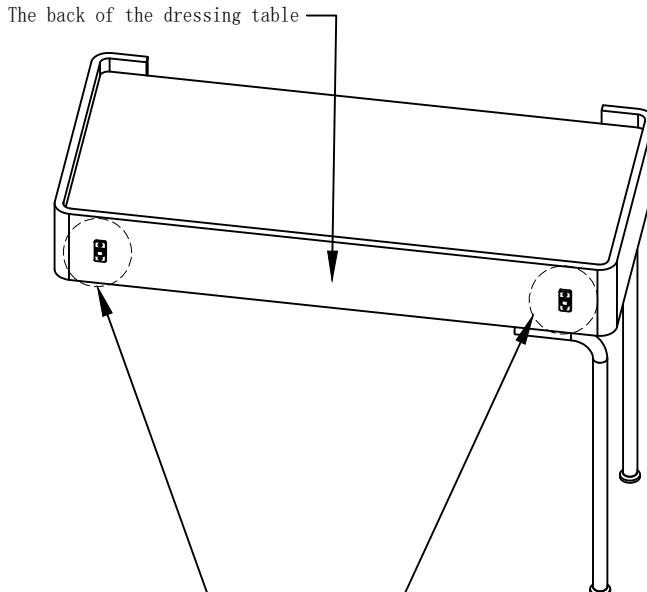

Installation instructions for anti-dumping accessories



- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation

Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Anti-dumping accessories	2	1
B		Self-tapping screw (long)	2	1
C		Self-tapping screw (short)	2	1
D		Wall-entry expansion screw glue plug	2	1
E		tape	2	1
F				
G				