

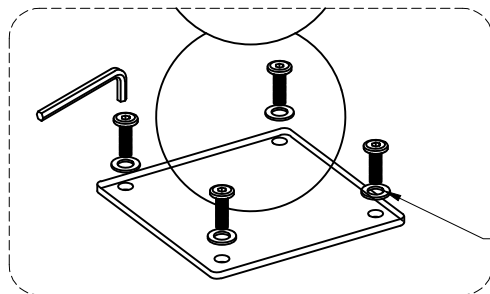


1.Place the feet of the dressing table in the corresponding position at the bottom of the dressing table, align the connecting holes, place the hexagonal mechanical screws and washers, and tighten them with a wrench

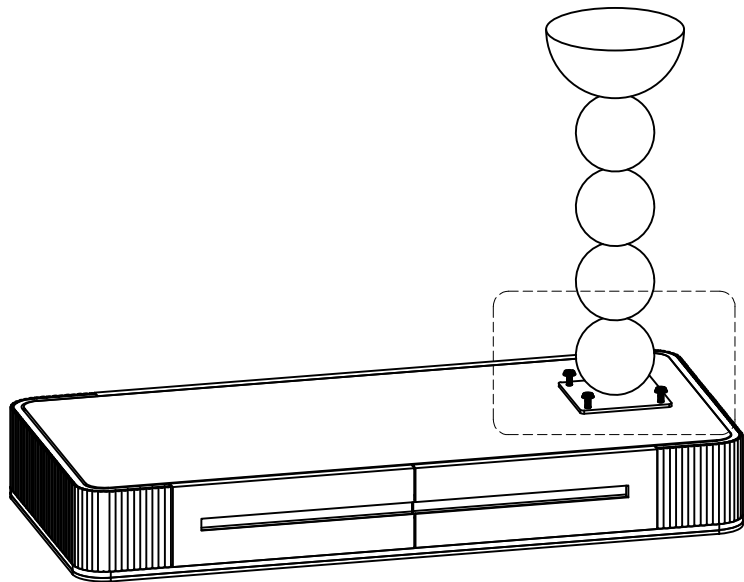


Hexagon socket
mechanical
screw+Spacer


2.Move the auxiliary cabinet and place it in the corresponding position at the bottom of the dressing table

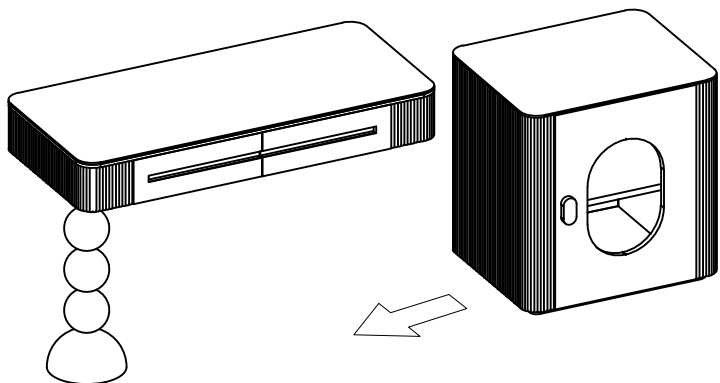

3. Installation completed.

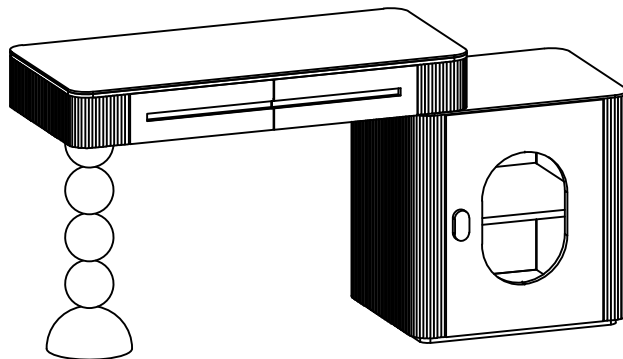

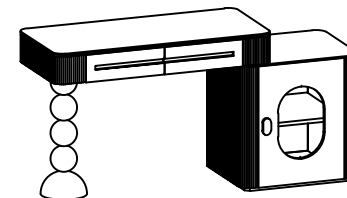


Assembly instructions




VB8041AW110 Installation

The number of people needed for installation: 2


- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket mechanical screw (M6*15mm)	4	0
B		Spacer	4	0
C		wrench	1	0
D				
E				
F				
G				


1. Vanity mirror hanging wall panel installation

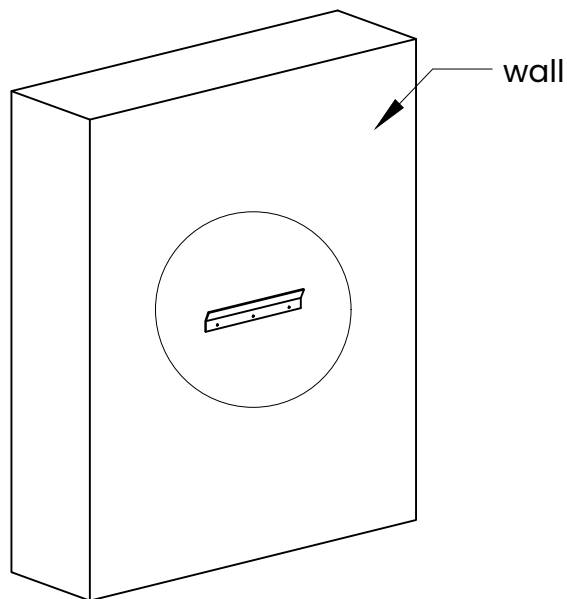


(1) Place the vanity mirror wall plate at the appropriate height on the wall, mark the location with a marker, and drill the holes with an electric drill.

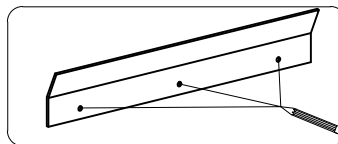


(1.2) Opening size: diameter 0.23in, depth 0.98in.

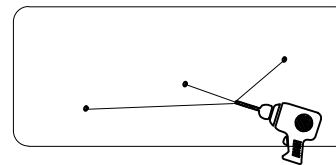


(2) After the hole is made, insert the wall expansion screw plug into the wall hole (just tap it in with a hammer).




(3) Attach the hanging wall plate to the hole in the wall and drive the self-tapping screws into the hole.

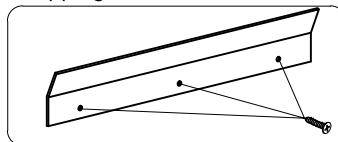


2. Simply insert the vanity mirror into the wall panel

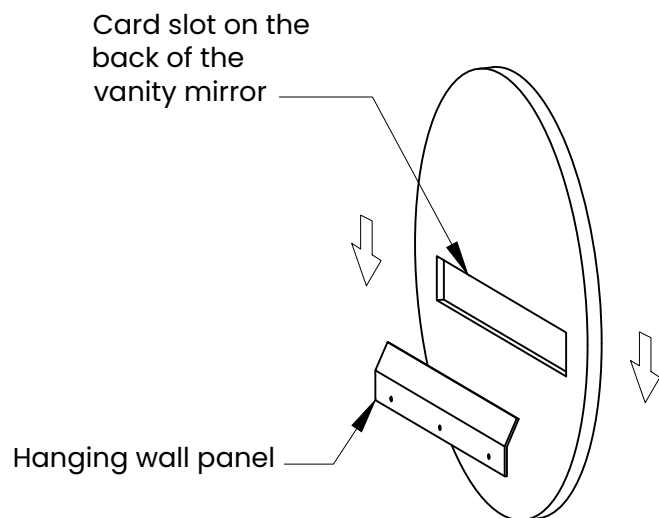

3. installation is complete.

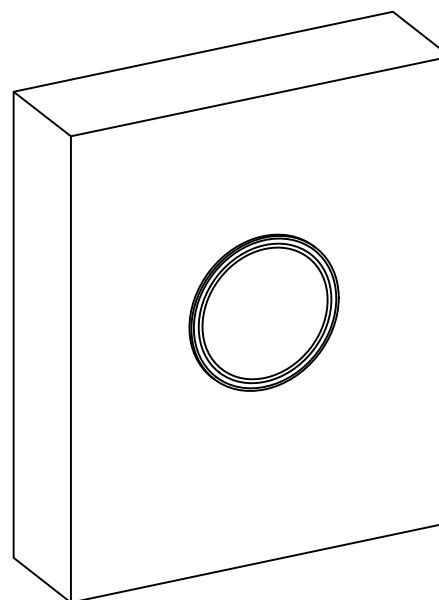

Assembly instructions

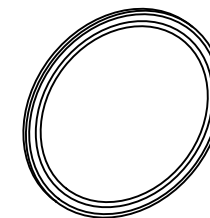

vanity mirror Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


Parts list

On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hanging wall panel	1	0
B		Wall expansion screw rubber plug	3	1
C		Self-tapping screws	3	1
D				
E				
F				
G				


You can choose whether to install it according to your own needs (this accessory will damage the wall and affect the appearance of the product) (this accessory is to prevent the product from falling and cause personal safety)

1. Makeup Vanities - Anti tipping Device Installation (Method 1)

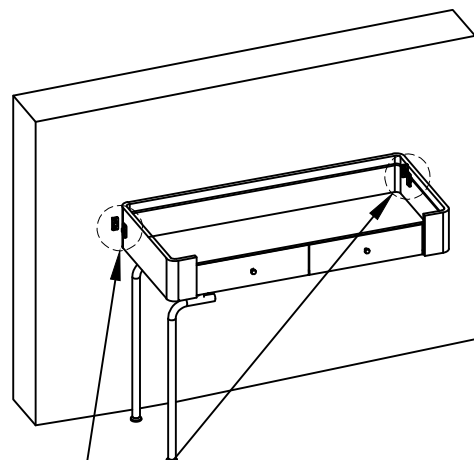


(1)The anti tipping device is installed on the cabinet side panel

(2)Place another anti tipping device horizontally or slightly upwards on the wall and mark its location with a marker pen


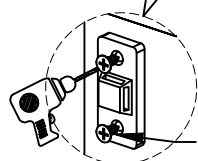


Self-tapping screw (short)

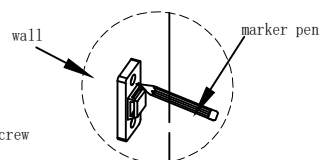


(3)Drill holes with electric drill according to the position marked by the marker on the wall

(4)Use a hammer to tap in the expansion screw rubber plug at the hole position on the wall

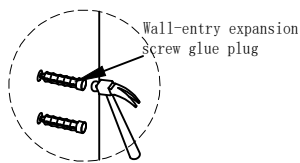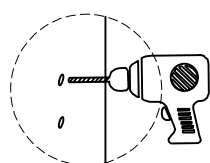


(5)Place anti tipping on the wall and use an electric drill to drive the self tapping screws into the wall

(6)Bundle the two anti tipping devices with straps

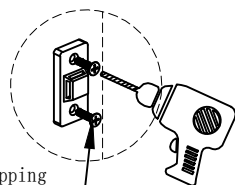



Self-tapping screw (long)

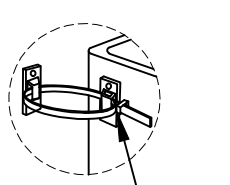

tape

2.Makeup Vanities - Anti tipping Installation (Method 2)

The back of the dressing table

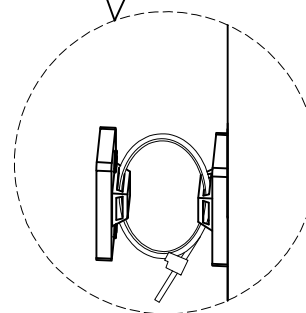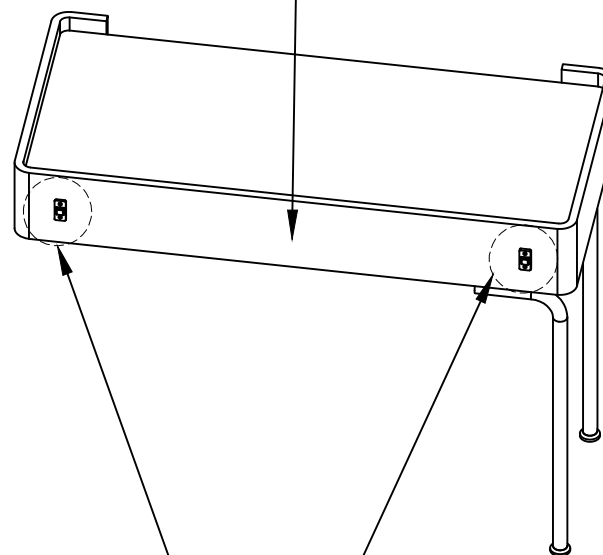

Installation instructions for anti-dumping accessories



- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Anti-dumping accessories	2	1
B		Self-tapping screw (long)	2	1
C		Self-tapping screw (short)	2	1
D		Wall-entry expansion screw glue plug	2	1
E		tape	2	1
F				
G				