



1. Place the dressing table upside down, align the solid wood legs with the corresponding positions at the bottom of the dressing table, align the holes, insert the screws, and tighten them with a wrench.

(Solid wood legs can be installed on the left or right side, depending on personal preference.)

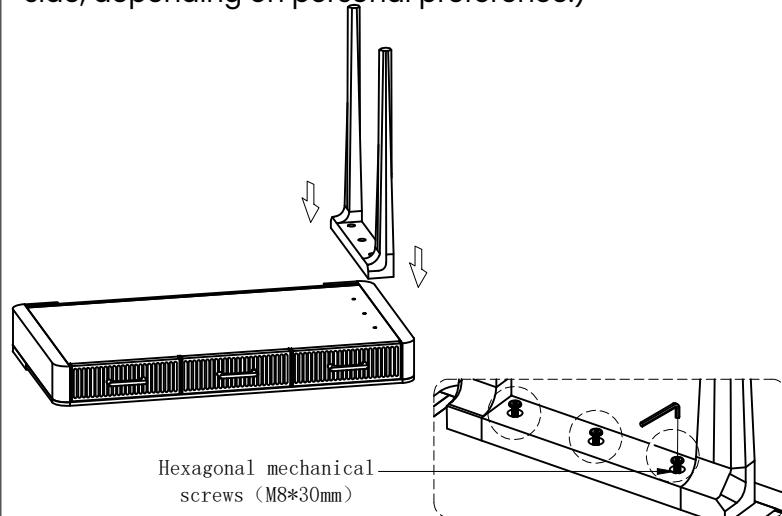


3. Place the vanity cabinet on the other side of the dressing table.


(After this step, you can place the desktop glass on the corresponding position of the upper cabinet.)

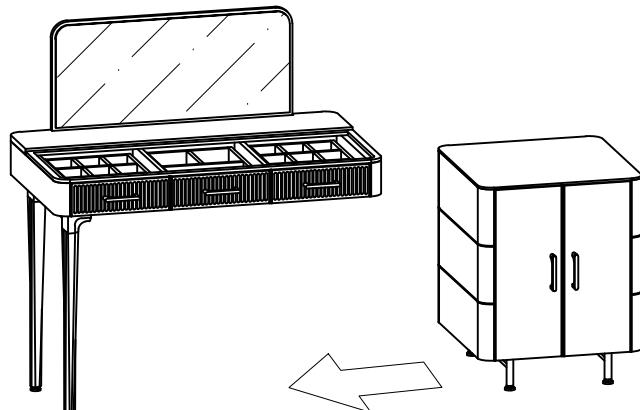


2. Position the vanity mirror on the corresponding location on the backboard of the dressing table, align the holes, insert the screws, and tighten them with a wrench.

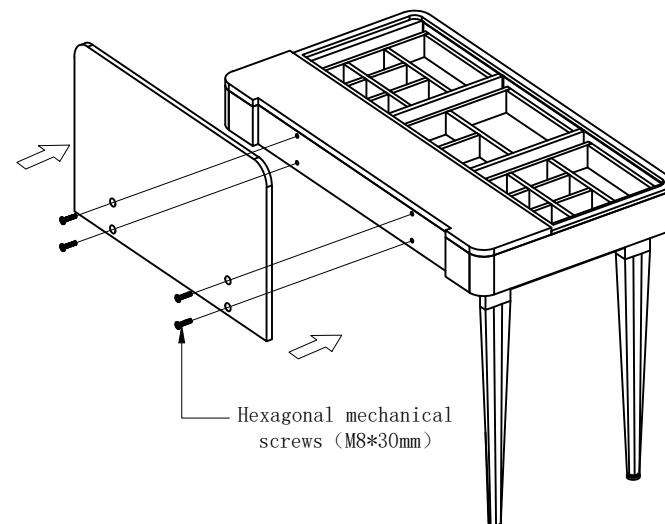

4. Installation is complete.

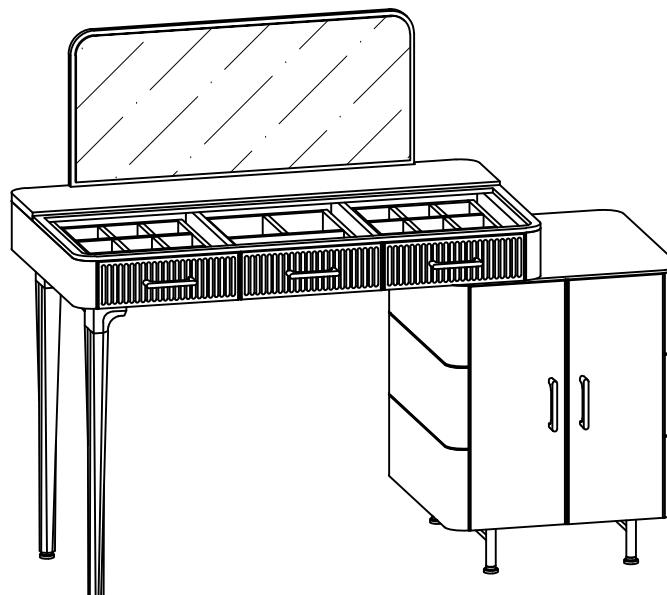

## Assembly instructions

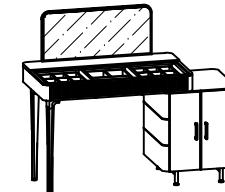

### VB8037ADW130 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagonal mechanical screws (M8*30mm)	7	1
B		Wrench	1	0
C				
D				
E				
F				
G				