

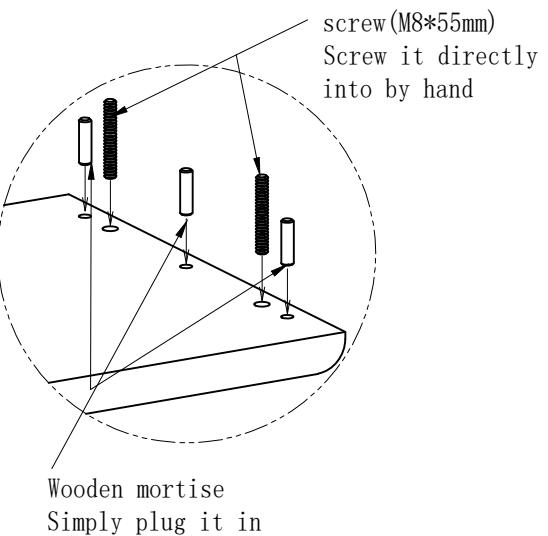



1. Inside the table board, install the wooden mortise and screw into the corresponding hole position (pay attention to the size and position of the hole position)

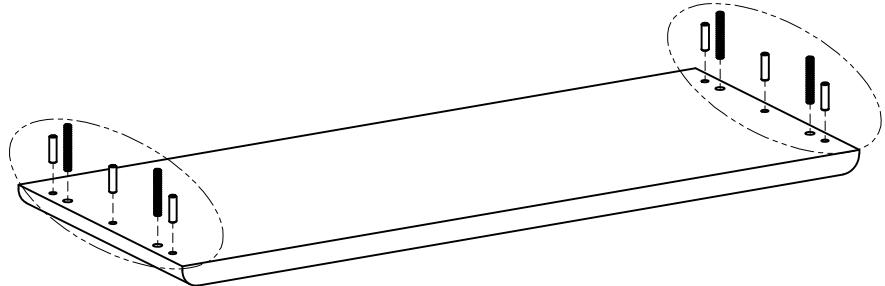


2. Install the half-moon fitting into the side plate, install the side plate corresponding to the hole, use a hammer to smash the side plate tightly, and finally tighten the nut.

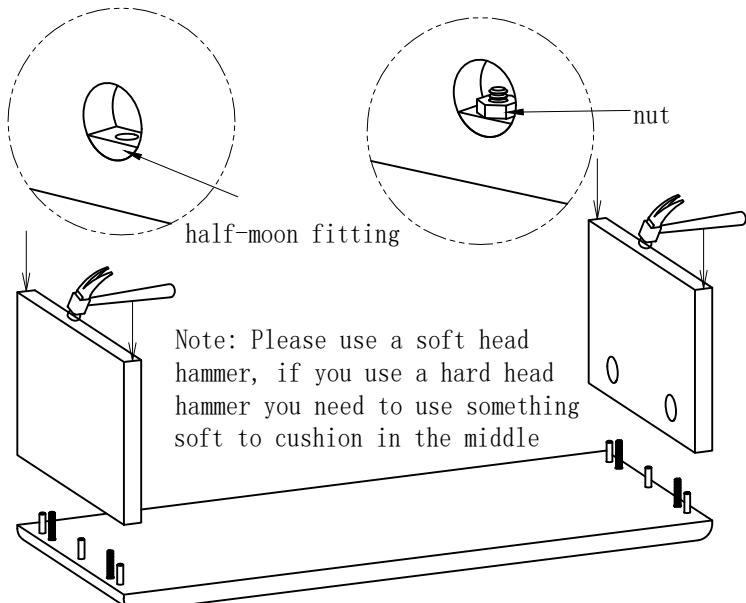

3. Complete installation

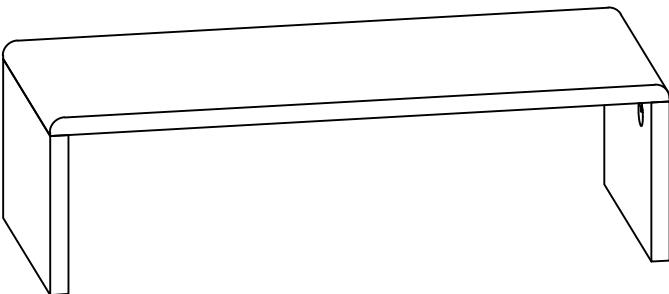

## Assembly instructions

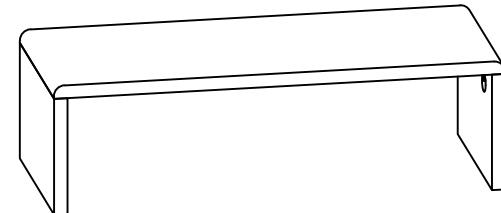

AS8001W080 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Wooden mortise	6	0
B		screw (M8*55mm)	4	0
C		Half-moon fitting	4	0
D		nut	4	0
E				
F				
G				