




1. Install the metal feet.

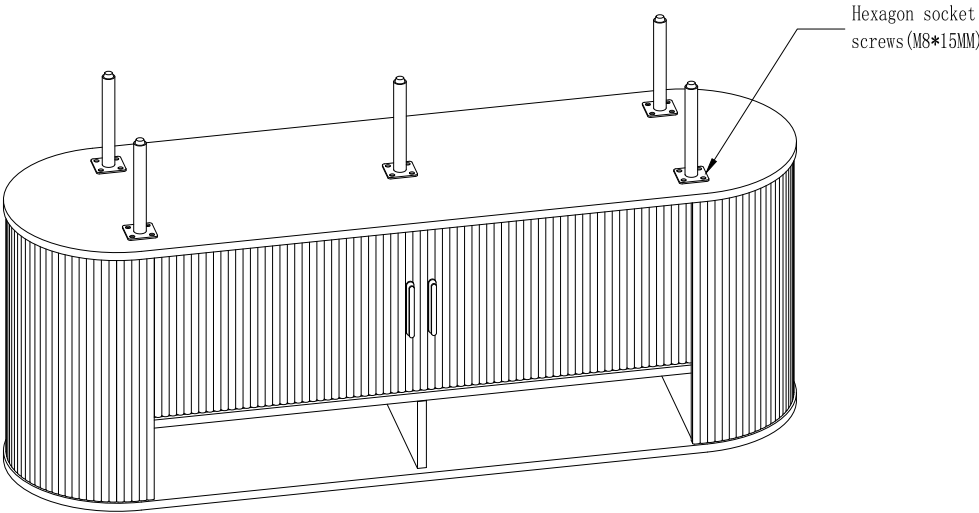

2. Installation completed.

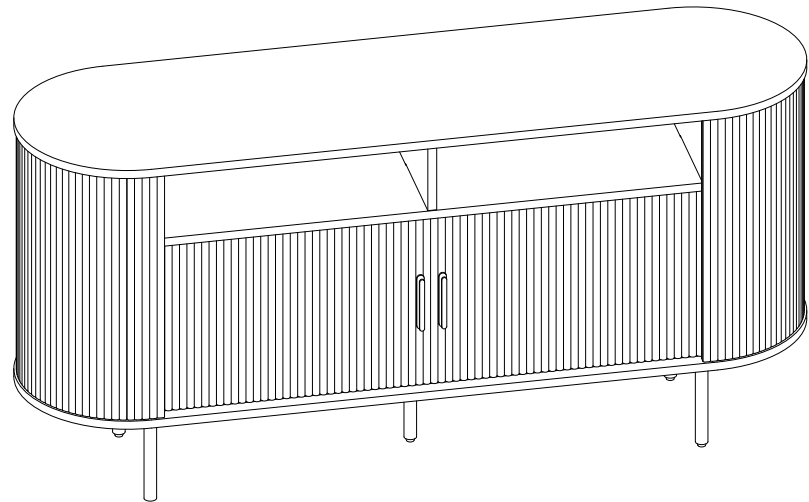

Assembly instructions

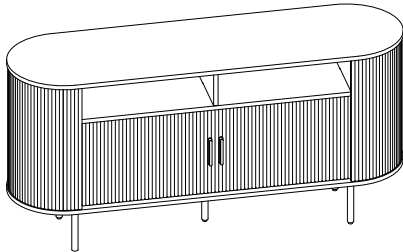

CA8054WC160 Installation
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket screws (M8*15MM)	20	1
B		M8 wrench	1	0
C		metal feet	5	0