




1. Installation of cabinet feet

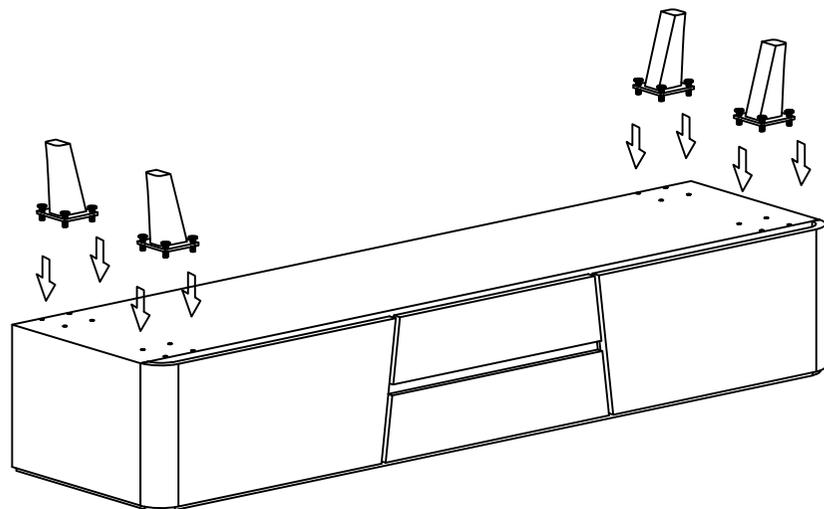

(1) Place the table legs at the bottom of the cabinet, align the holes, and then put in the hexagon socket thread and tighten it with a spanner

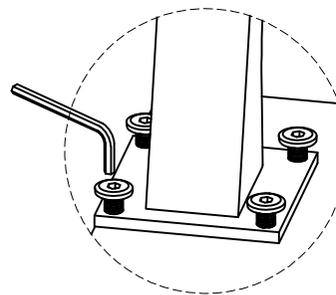

Installation instruction

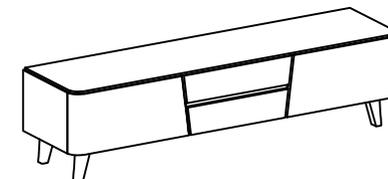


TS8058ALW Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation

2. Installation completed

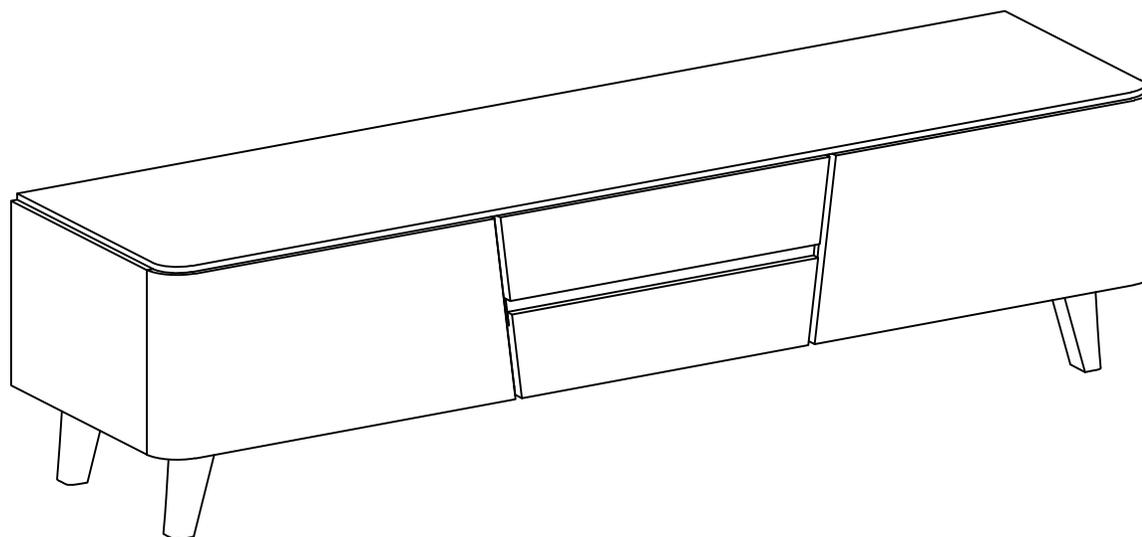

Parts list

Serial number	Shape	Name	Quantity
A		Hexagon socket thread (M6*20)	16
B		Solid wooden foot	4
C		inner hexagon spanner	1