




1. Open the door frame, remove the movable laminate in the cabinet, and then put the flat-headed machine wire in the corresponding hole of the partition. Lock it with a screwdriver.

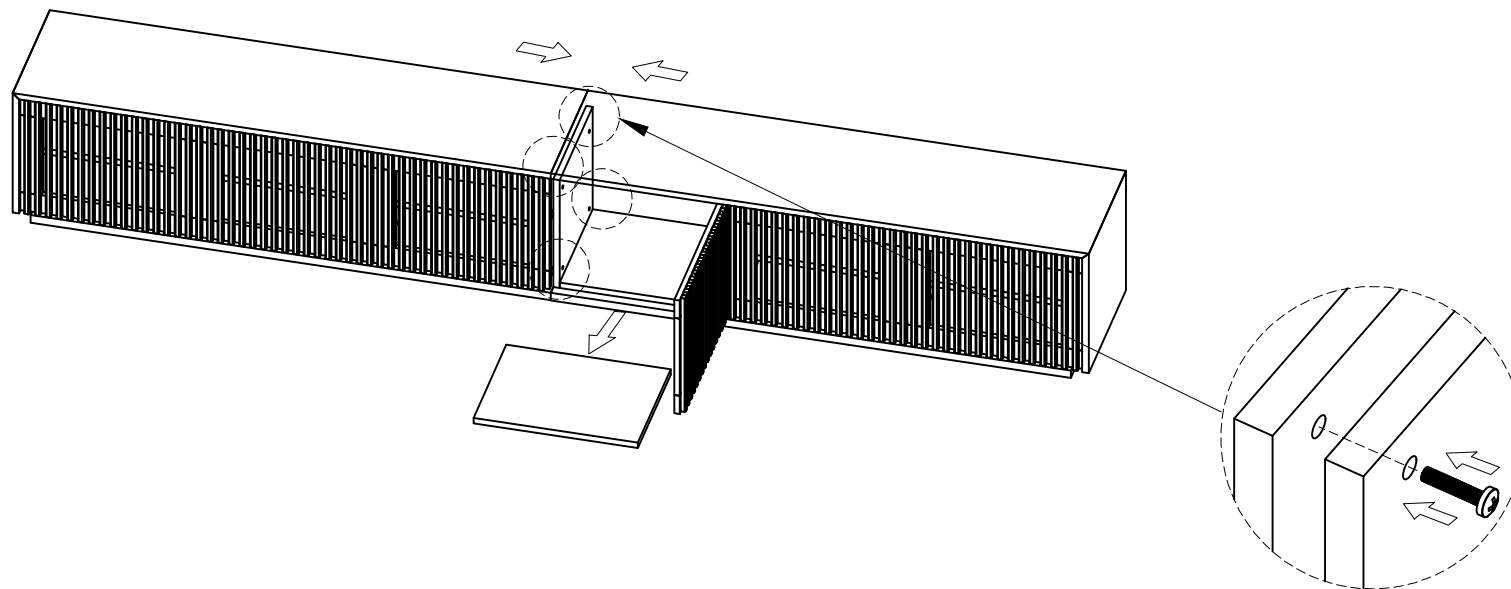

2. Installation is complete

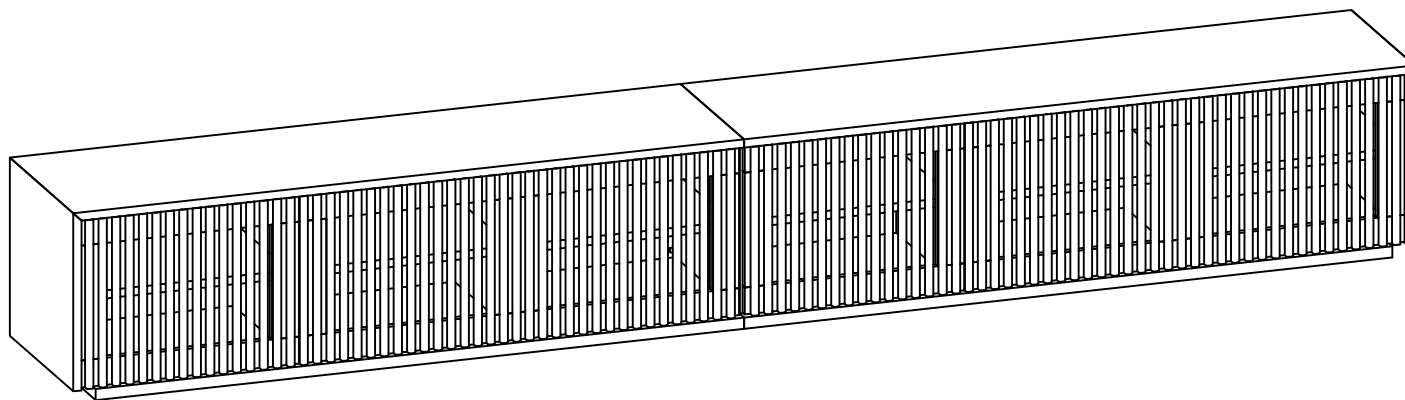


Installation instruction

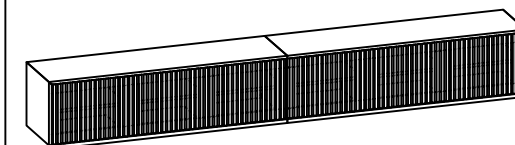

TS8002ADW240/300 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Phillips machine screw (M8*25mm)	4	1
B				
C				
D				
E				
F				
G				