

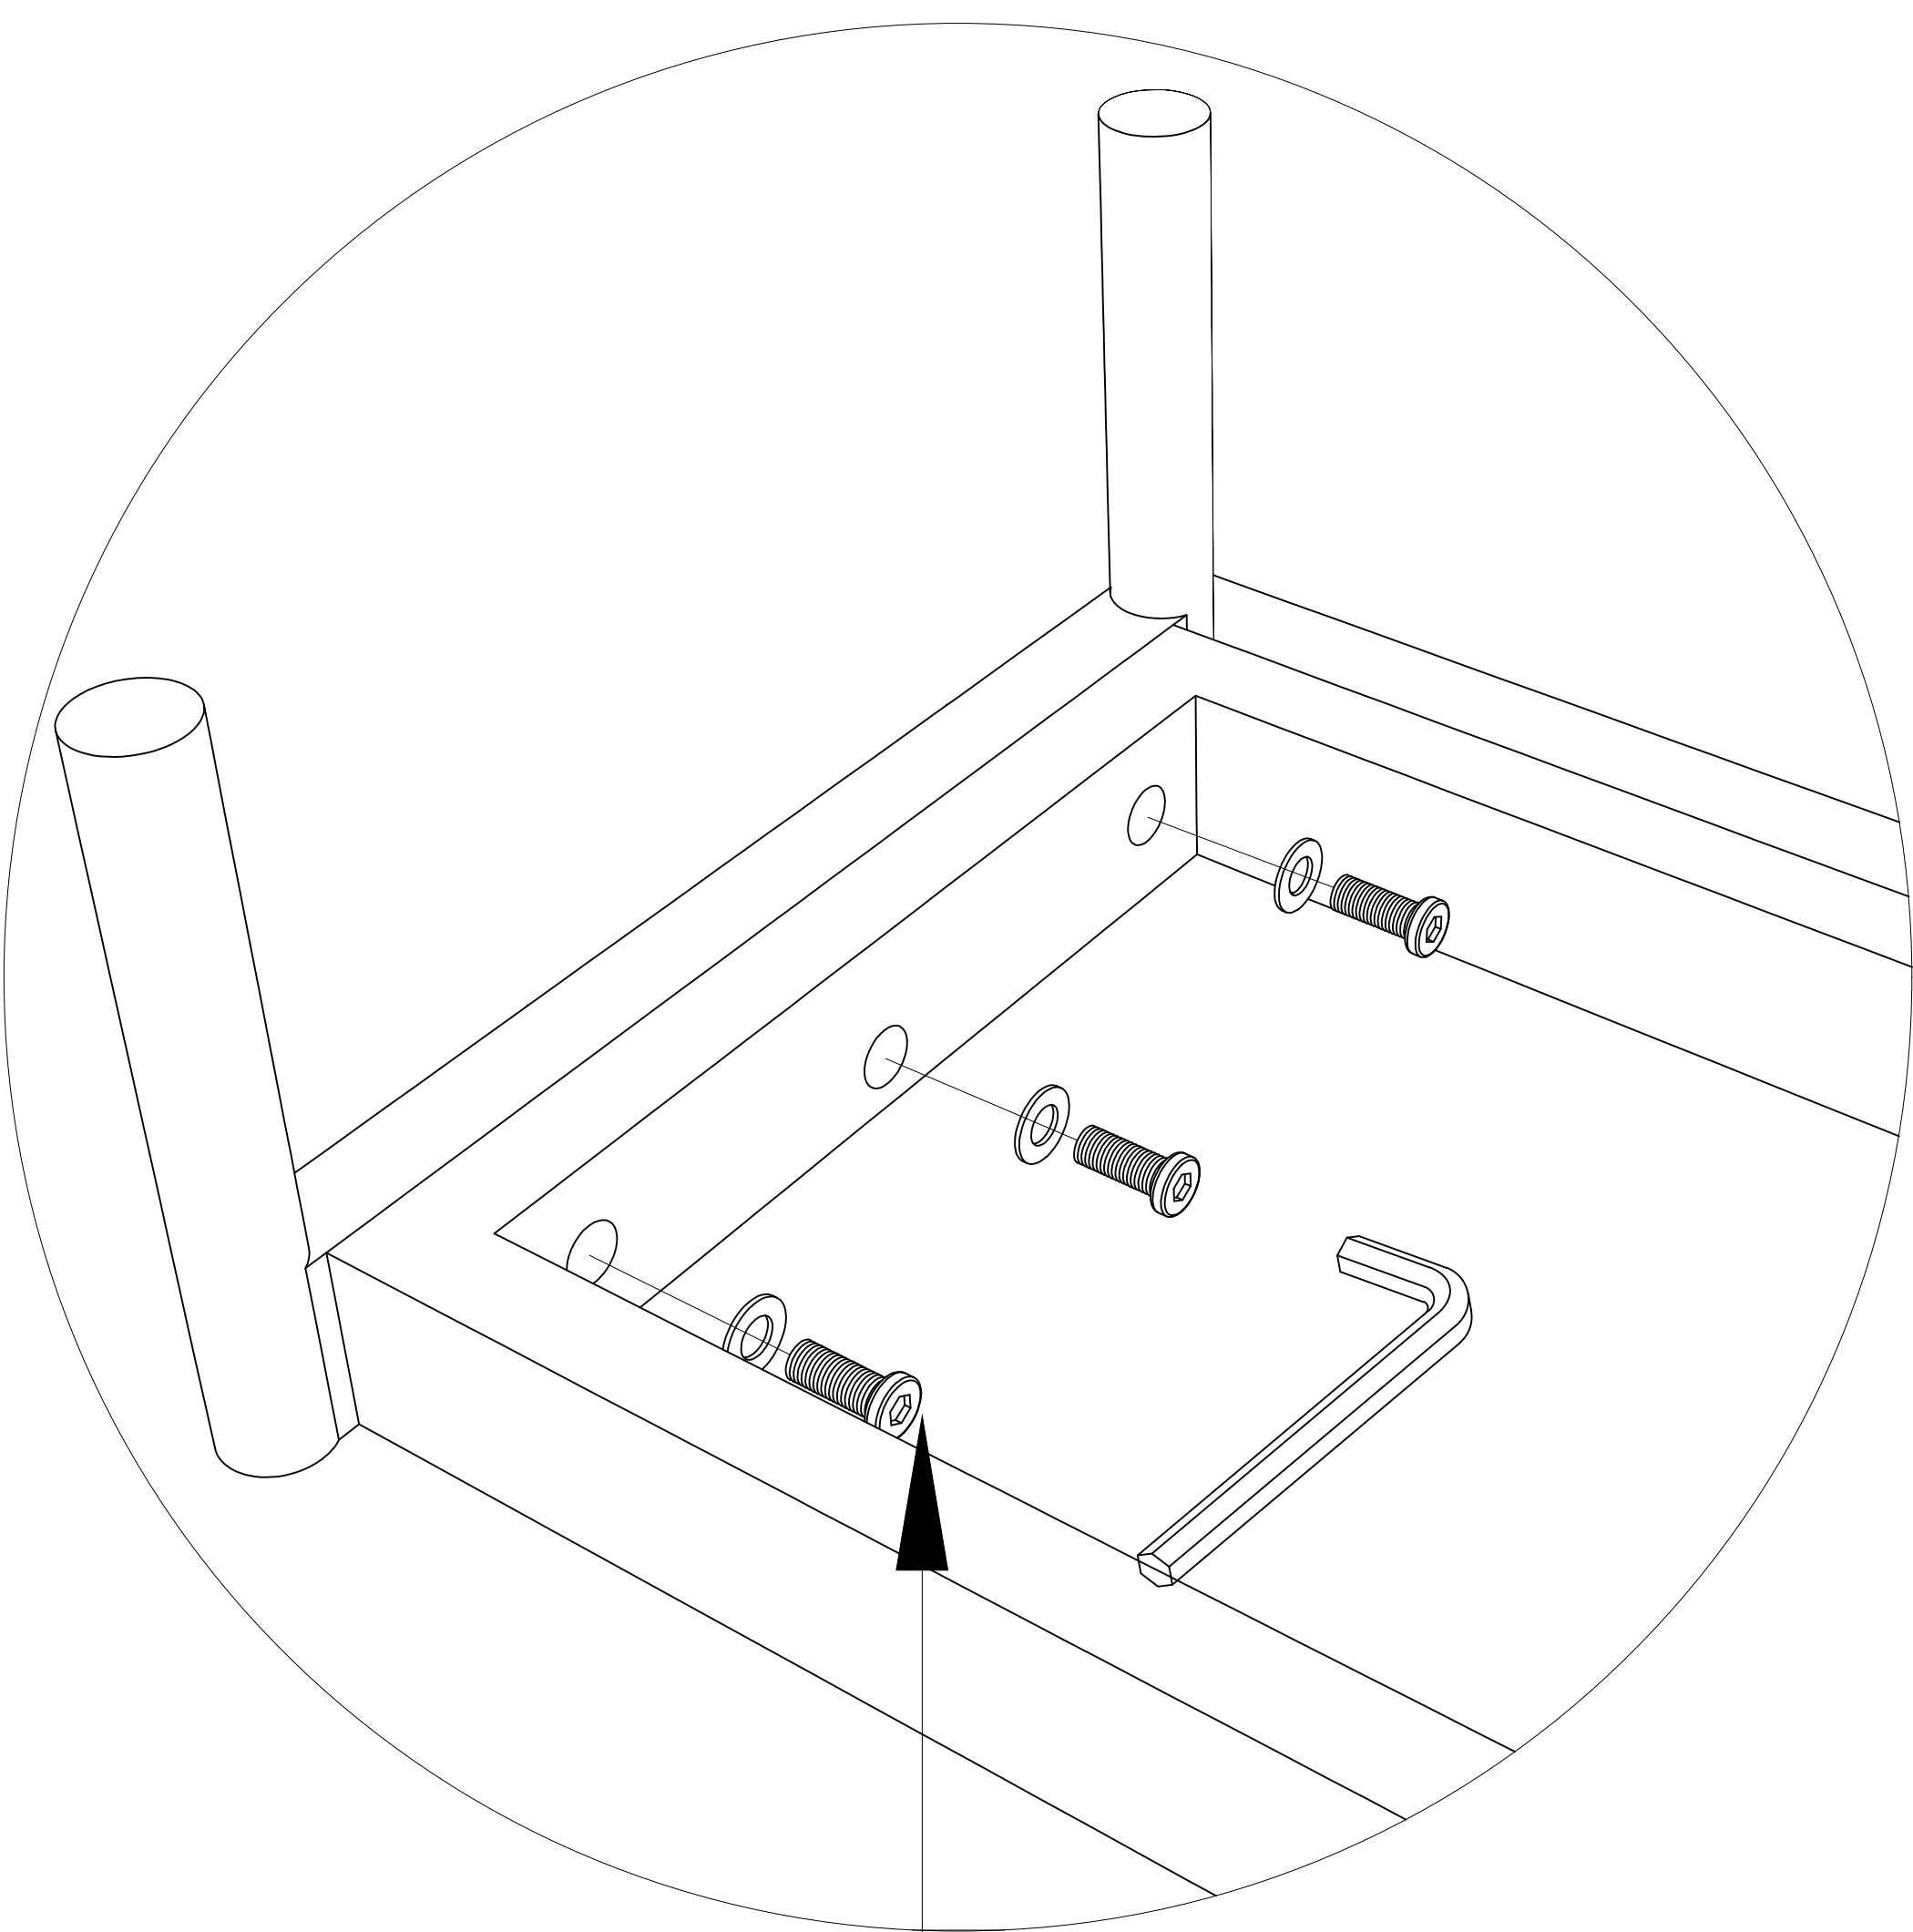


1. Turn over the cabinet to align the bottom frame and feet of the mounting holes, turn into the hexagonal machine wire tightening can be.

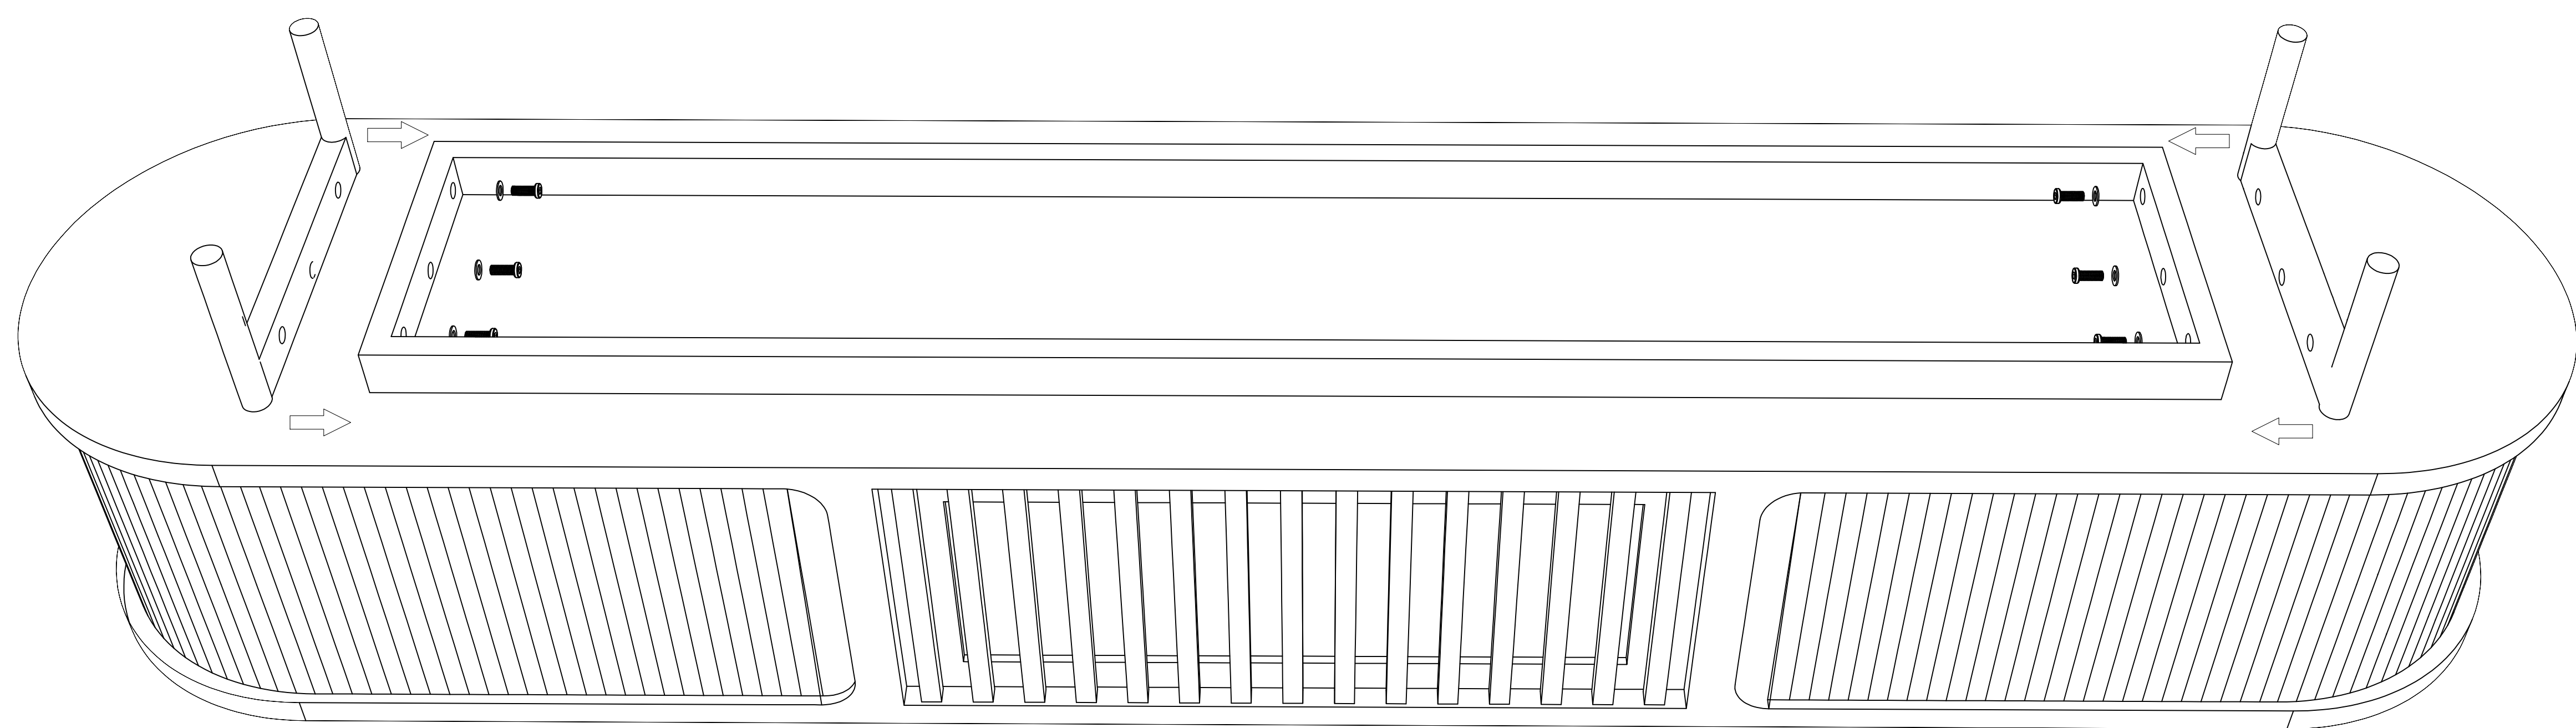


Hexagon Socket Machine Screws(M8*30mm)+Gasket

2. Installation completed.




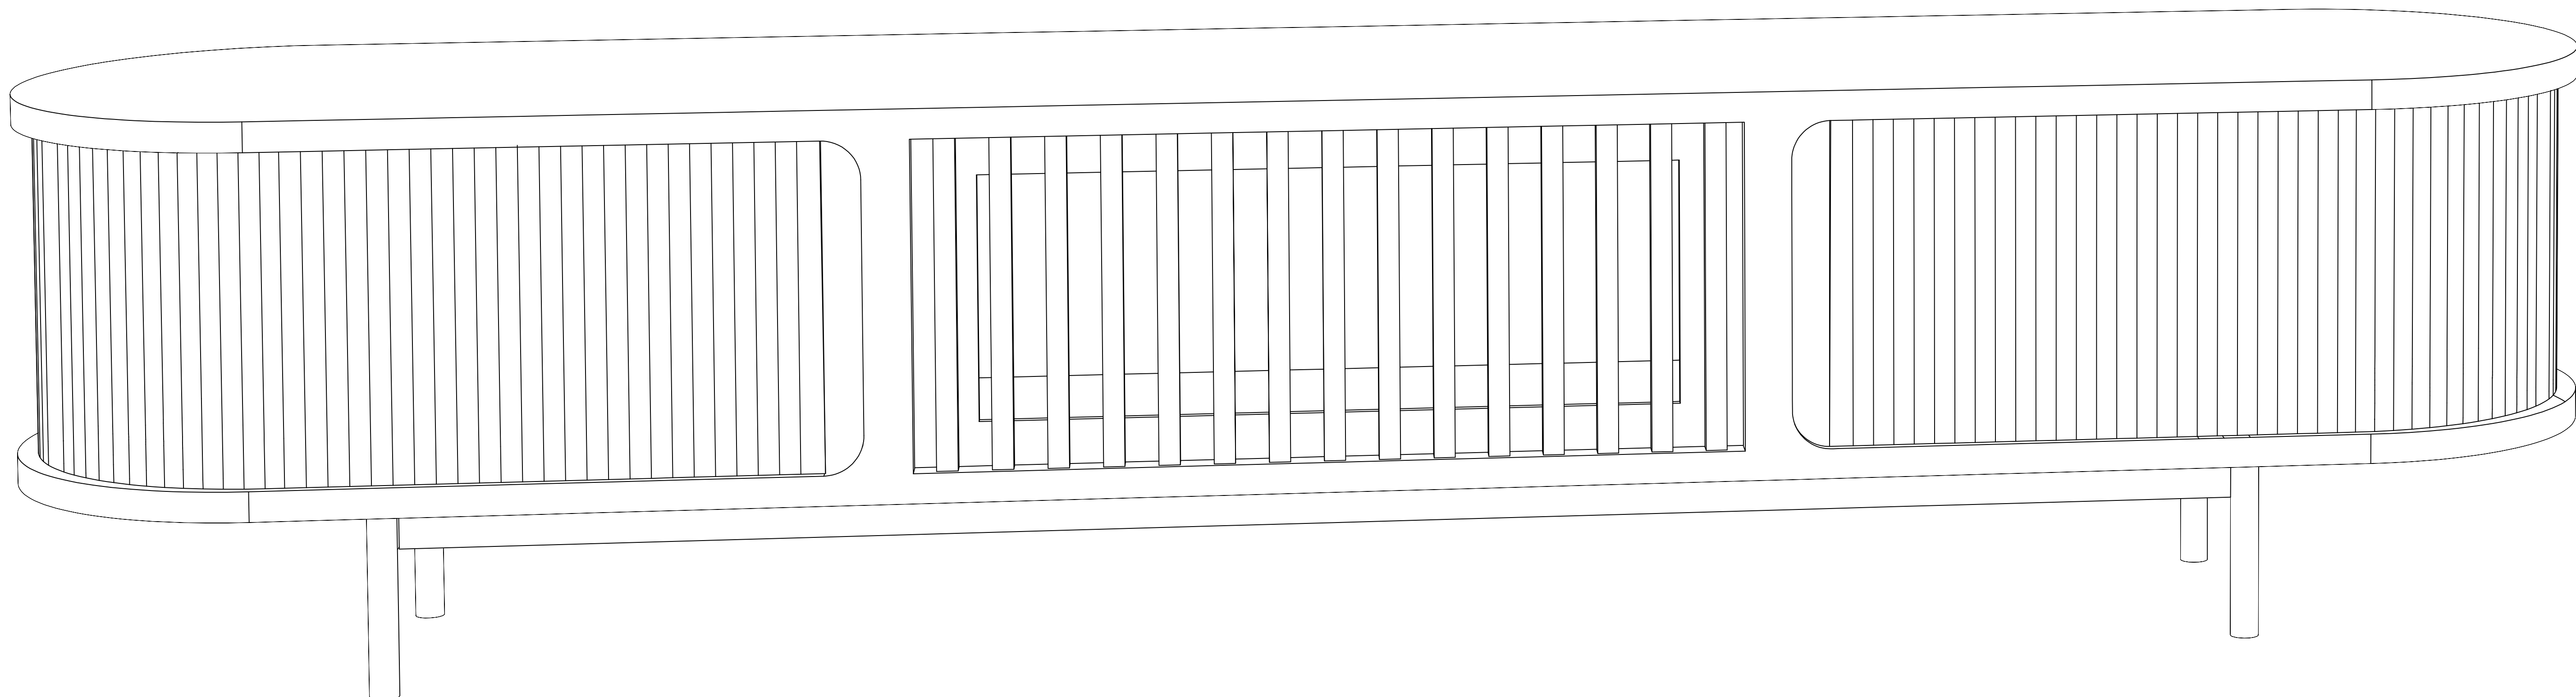


Assembly instructions

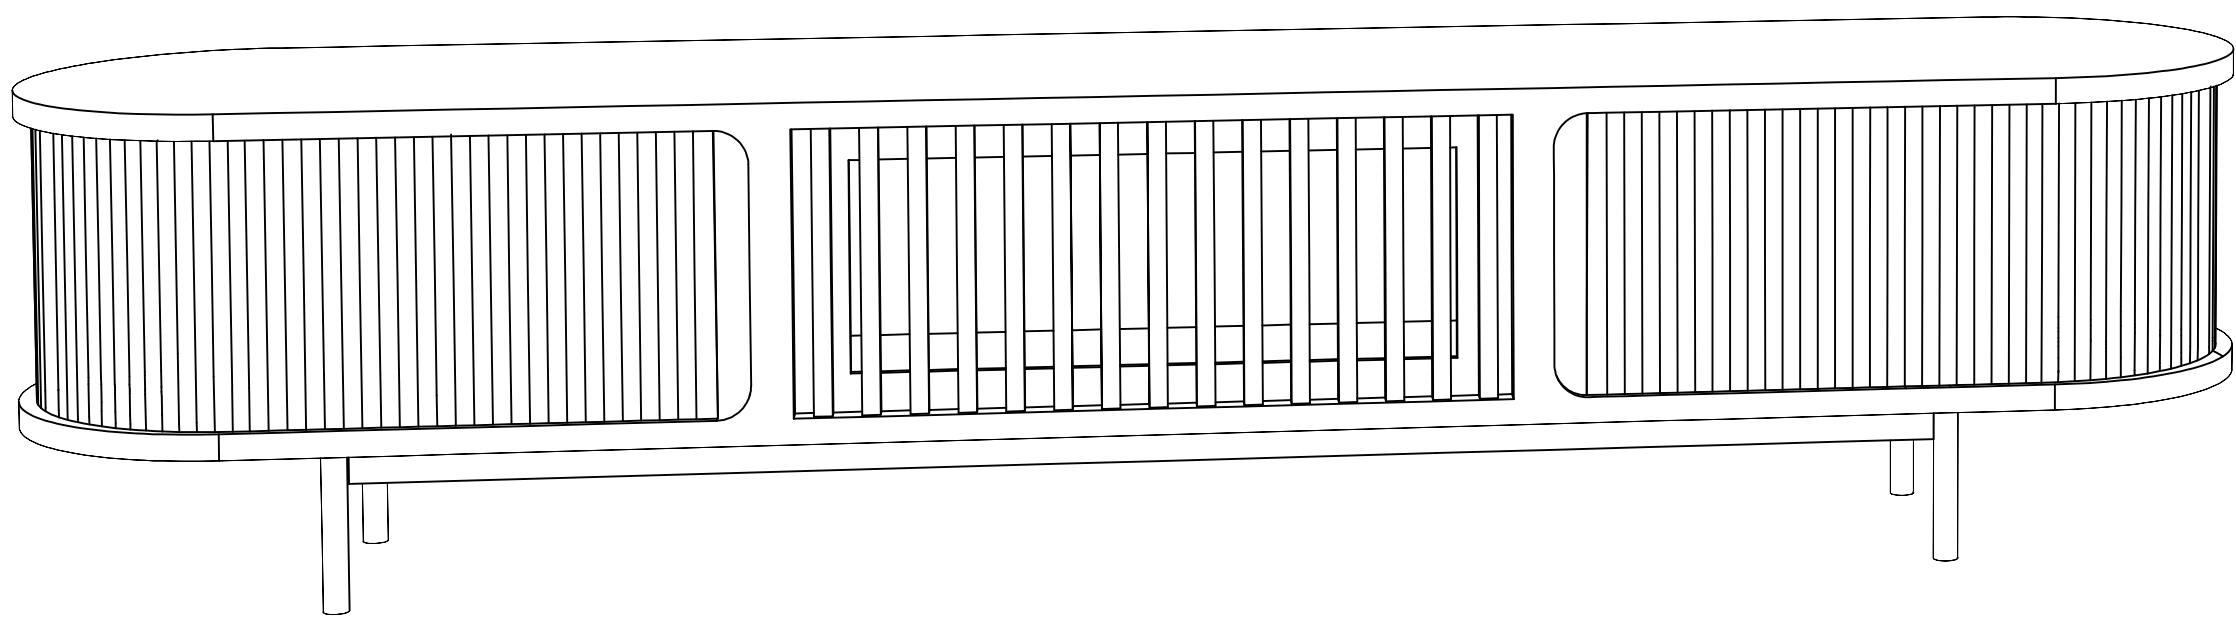

TS8136WC200 Installation
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

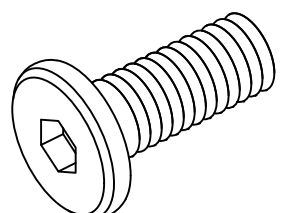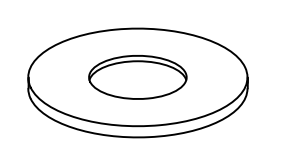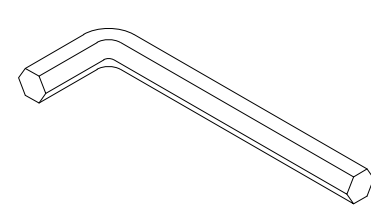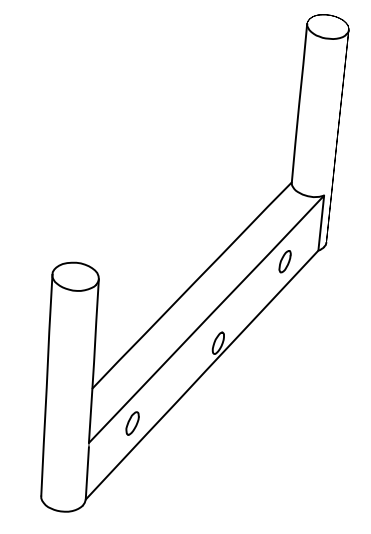Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon Socket Machine Screws (M8*30mm)	6	1
B		Gasket	6	1
C		Wrench	1	0
D		Furniture Feet	2	0
F				
G				