




1. Turn the cabinet over and insert the feet into the mounts on the bottom frame of the cabinet, then simply lock them in place with screws.

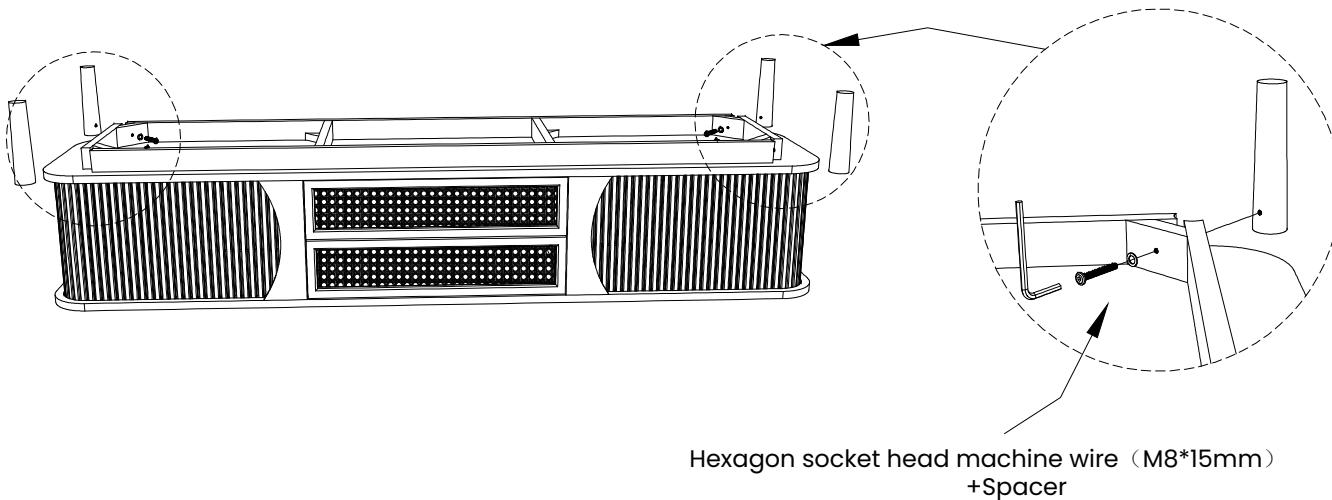

2. Installation complete.

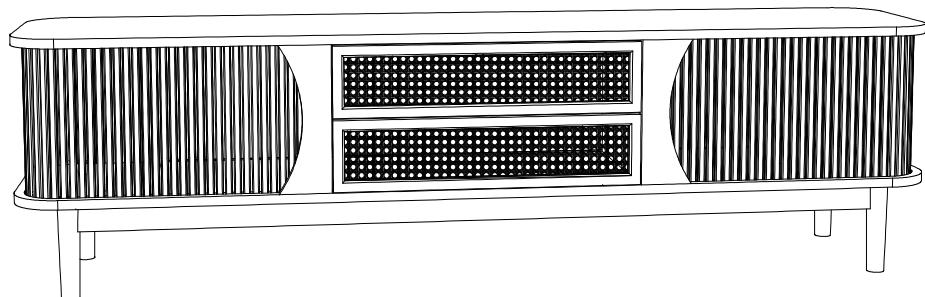

## Assembly instructions



TS8128WC180/200 Installation  
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket head machine wire (M8*15mm)	4	0
B		Spacer1	4	0
C		Allen wrench	1	0
D		Furniture Feet	4	0
E				
F				
G				