




1. Turn the cabinet over, align the mounting holes on the feet and bottom of the cabinet, and put in the screws to lock it in order.

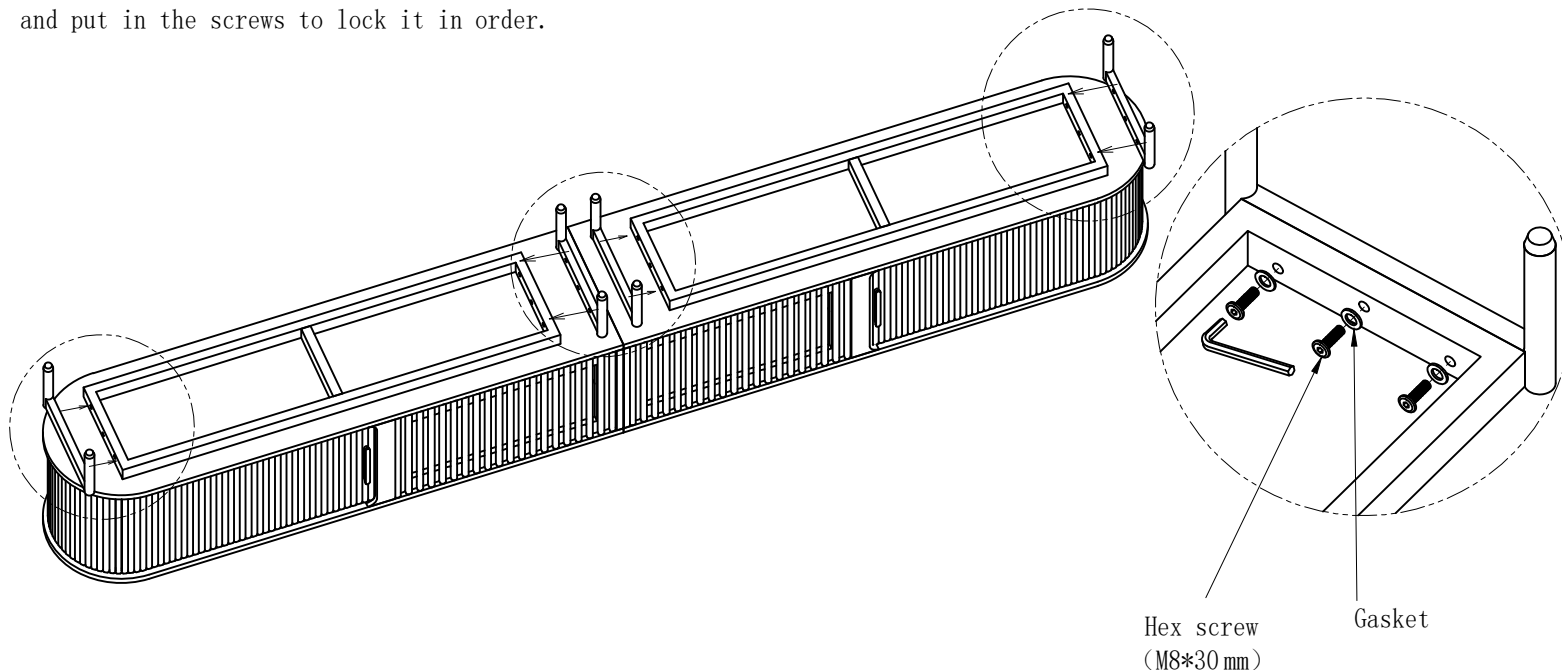

2. Installation completed

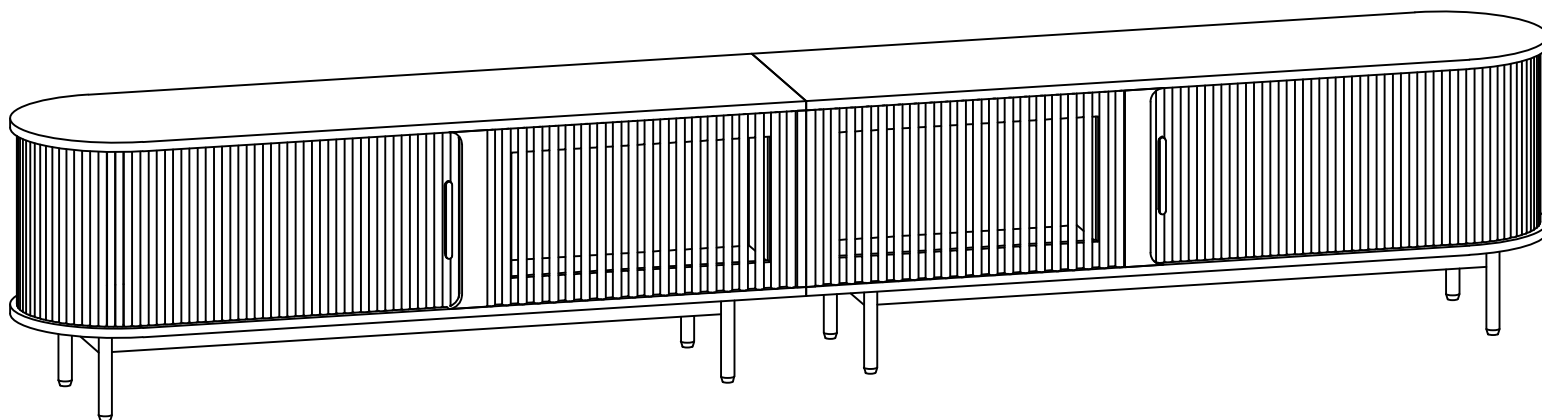



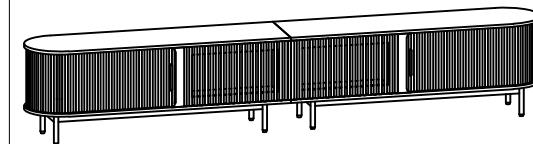

## Assembly instructions



### TS8136WC300 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hex screw (M8*30mm)	16	1
B		Gasket	16	1
C		Wrench	1	0
D		Support legs	4	0
E				
F				
G				