



1. Turn the cabinet upside down and install the cabinet legs.


Caution: Use Specific Screw Specifications!
Incorrect sizing may cause irreversible structural damage or safety hazards.

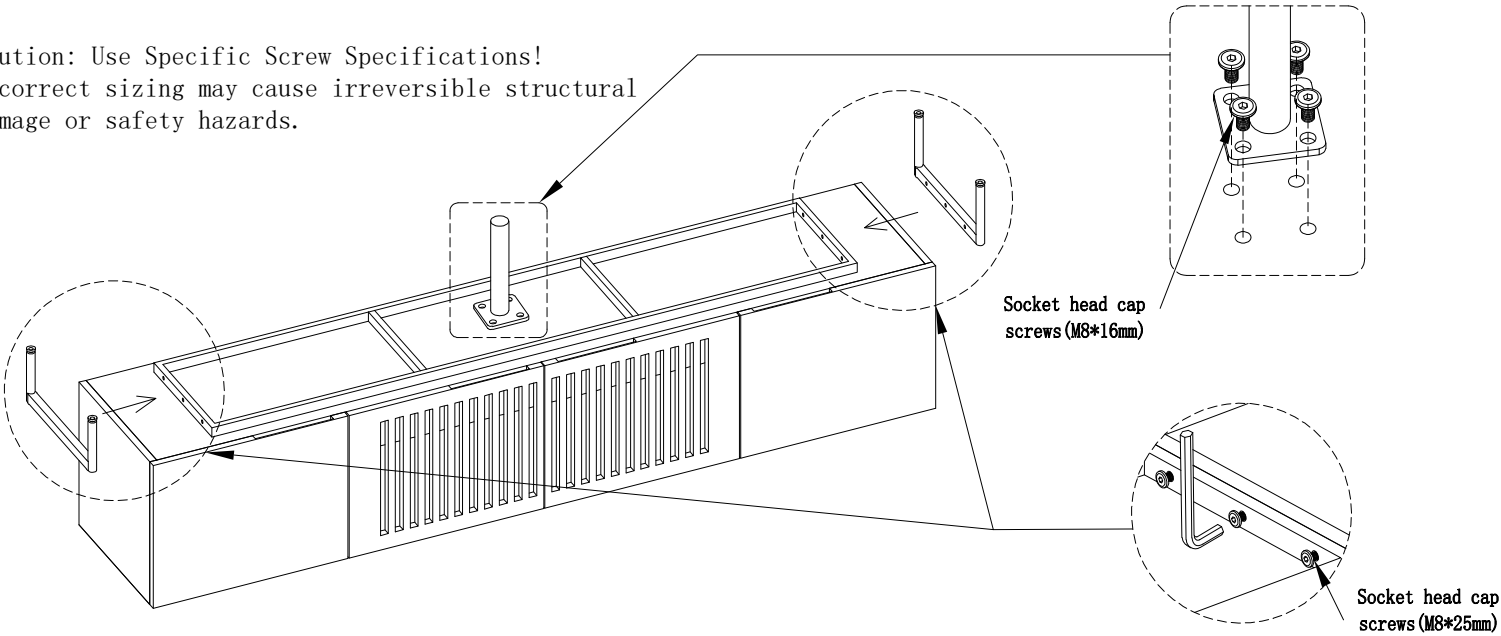

2. The installation is complete

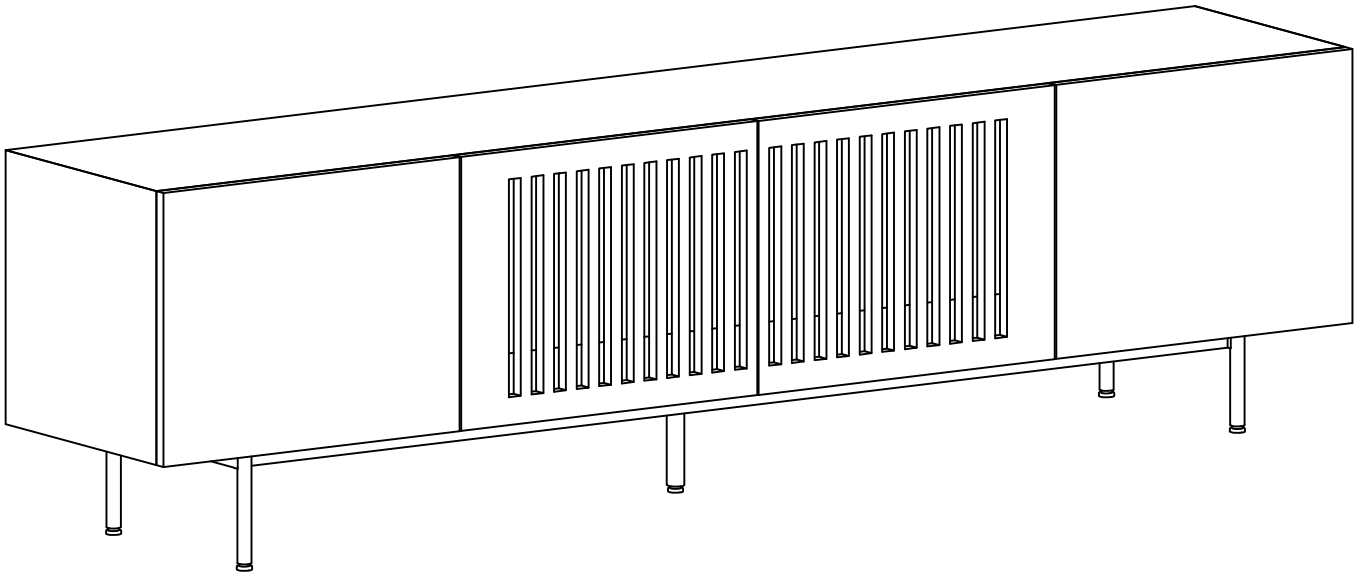

Installation instruction

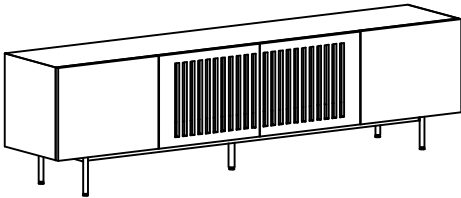

TS1010WD20/24 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Socket head cap screws (M8*25mm)	6	0
B		Cabinet Legs on Both Sides	2	0
C		Mid foot	1	0
D		Socket head cap screws (M8*16mm)	4	0
E				
F				
G				