

1. Place the cabinet at a suitable height and mark the holes with a marker.

(1) Insert the expansion screw plug into the drilled hole.

Drill with electric drill. (Drill to a depth of 70mm using a 12mm diameter drill)

(2) Use a hammer to drive the expansion screw into the rubber stopper.

expansion screws A

3. Put the support bracket at the corresponding position at the bottom of the TV cabinet, and mark the hole position with a marker.

Wall

Drill with electric drill.

(1)

Hammer the expansion screws B into drilled hole

(2)

Place the nut on the expansion screw stud and tighten it.

(3)


Tighten the self-tapping screw with a screwdriver.

expansion screws B

Self-tapping screws


(Drill to a depth of 60mm using a 10mm diameter drill)

2. Connect and hang cabinets. (Please note that this step requires one person on each side to support the two cabinets until the support brackets are installed.)

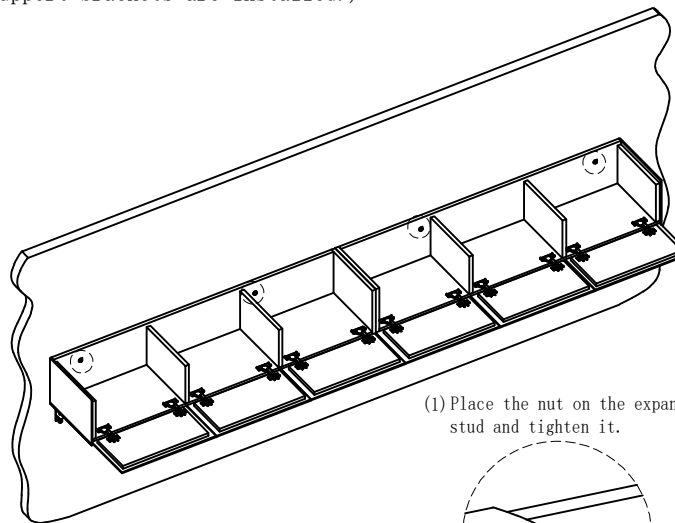


(1) Place the nut on the expansion screw stud and tighten it.

4. Complete the installation

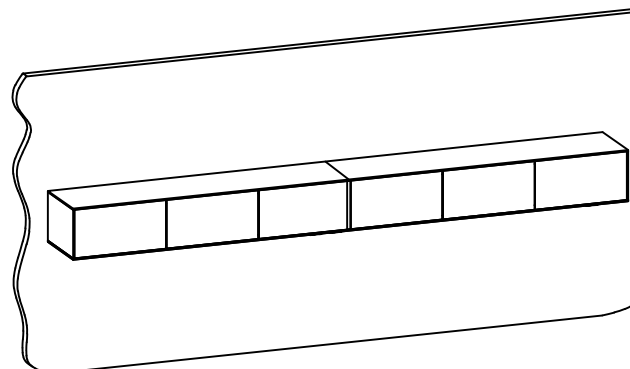

Assembly instructions

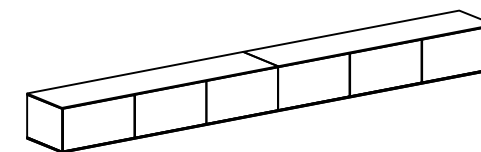

TS1050BL/WL Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list

On a red ribbon are furniture installation accessories

Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		expansion screws A (M8*70mm)	4	0
B		expansion screws B (M6*60mm)	8	0
C		Self-tapping screws	8	0
D		Support Bracket	4	0
E				
F				
G				