



1.Place the TV cabinet on its side or upside down, and screw the solid wooden feet into the corresponding holes on the bottom plate of the TV cabinet

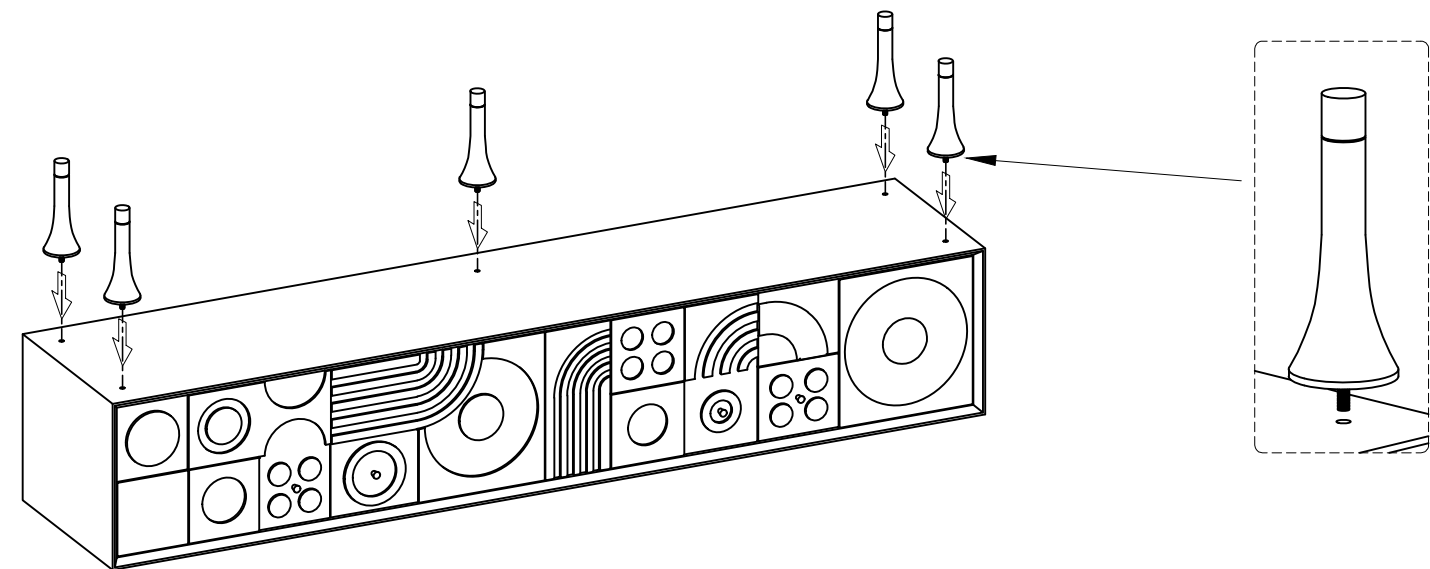

Installation instruction


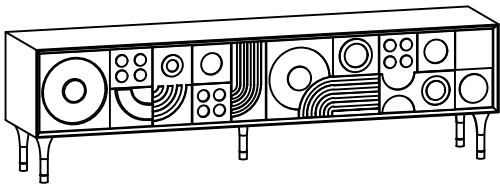


TS8089ADW Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

- 2.2. Installing the Cabinet Door Handle:
- 2.1 Open the cabinet door and remove the handle and screws from the inside.
- 2.2 Reverse the handle and screws, then install the handle on the outside of the cabinet door.

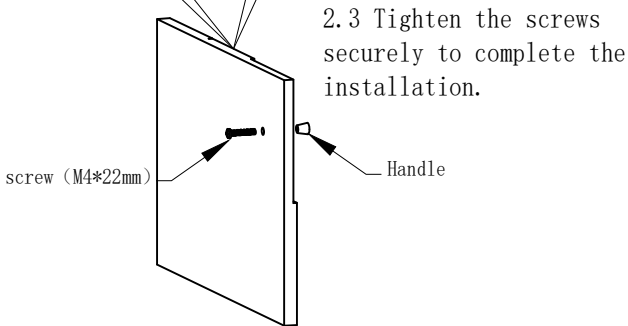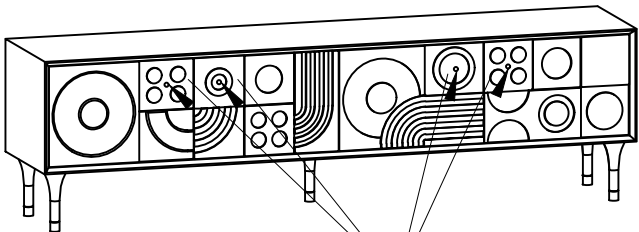

3. Installation completed

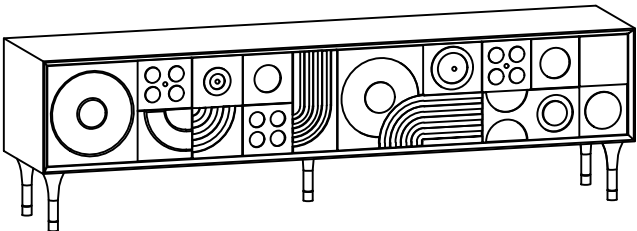

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Solid wood feet	5	0
B				
C				
D				
E				
F				
G				