




1. Turn the cabinet over, align the mounting holes on the feet and bottom of the cabinet, and put in the screws to lock it in order.

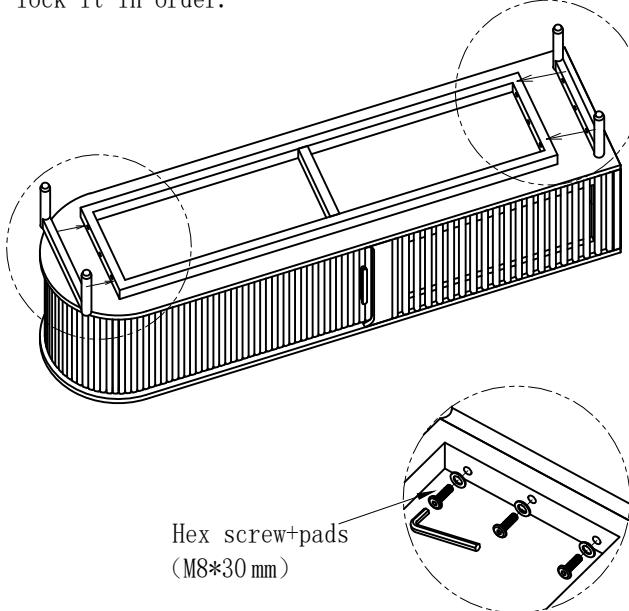


2. Assemble two TV cabinets

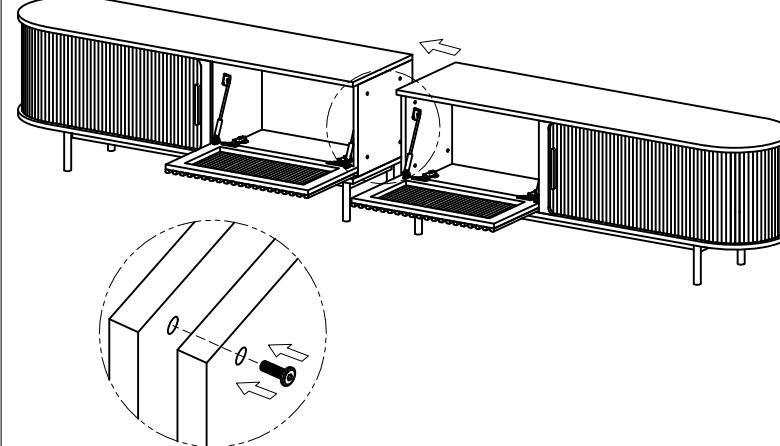

3. Installation completed

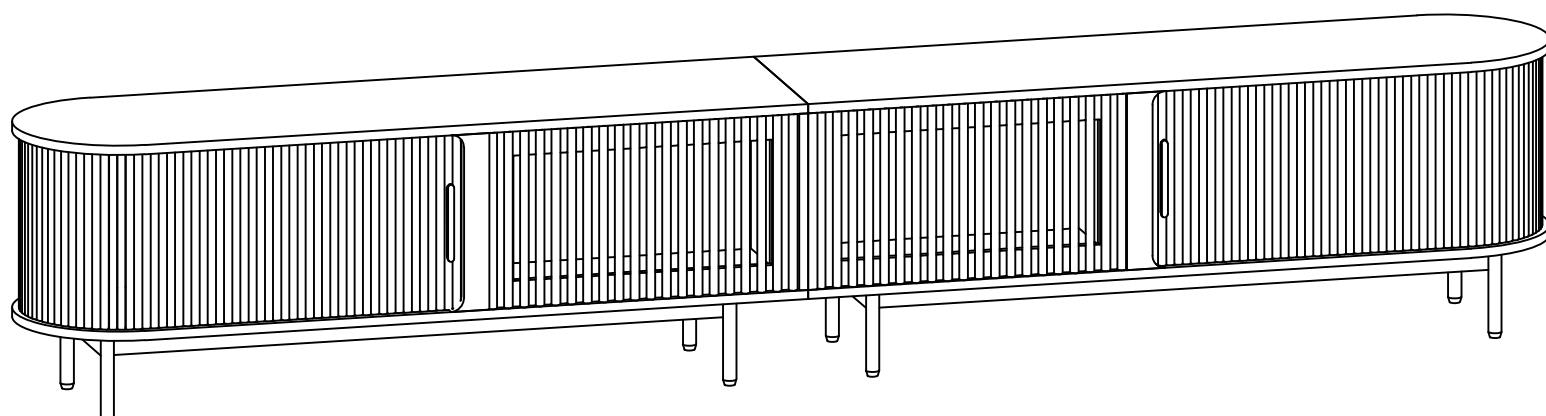

## Assembly instructions

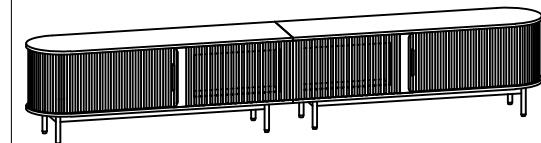

### TS8136WC300 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hex screw (M8*30mm)	16	1
B		pads	12	1
C		wrench	1	0
D				
E				
F				
G				