




1. Install the support feet to the bottom of the cabinet

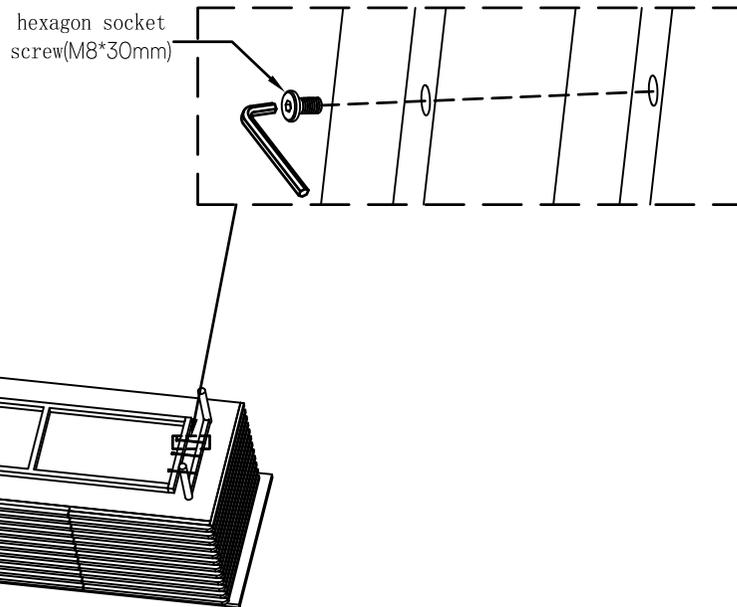

2. The installation is complete

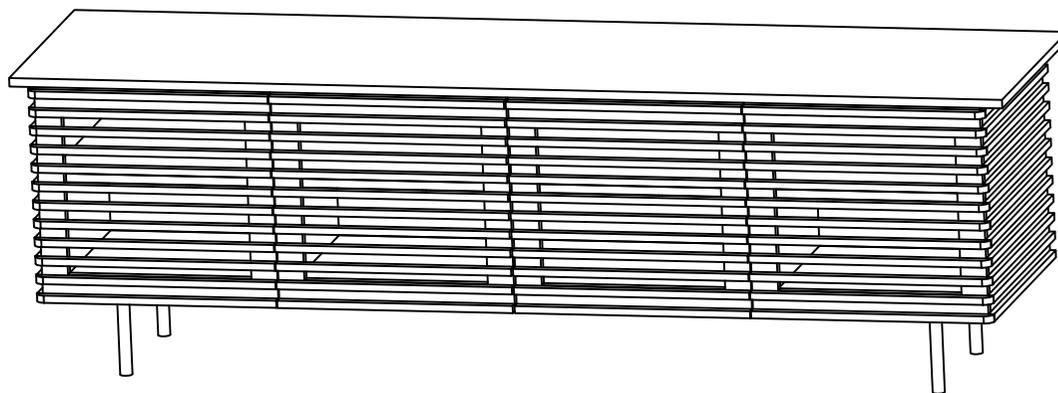

Assembly instructions

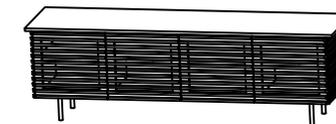

TS8309WC180 200 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Have a question? We're here to help:  
<https://www.povison.com/help-center/contact>  
 Customer Service Number: +1-669-208-1888  
 Customer Service Email: [supportingcenter@povison.com](mailto:supportingcenter@povison.com)  
 Customer Service Hours: EST 10 am - 5.30 pm

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		hexagon socket screw(M8*30mm)	6	0
B		hexagon socket screw(M8*16mm)	4	0
C		Wrench(6mm)	1	0
D		Wrench(8mm)	1	0
E				
F				
G				