


Assembly instructions

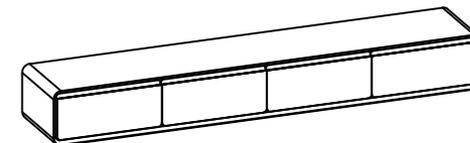

TS2001 240 Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.




Have a question? We're here to help:
<https://www.povison.com/help-center/contact>
 Customer Service Number: +1-669-208-1888
 Customer Service Email: supportingcenter@povison.com
 Customer Service Hours: EST 10 am - 5.30 pm

1. Place the wall-mounted backboard at a suitable position on the wall, mark the holes to be installed on the wall and the backboard with a marker, and then drill holes on the wall with an electric drill.

(Drill to a depth of 60mm using a 6mm diameter drill bit)

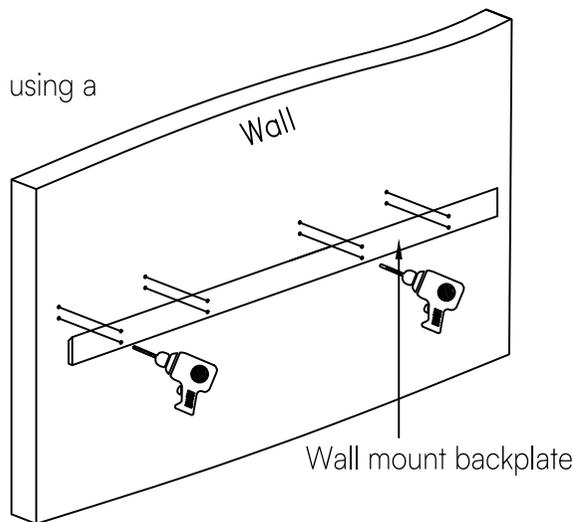


2. After the drilling is completed, insert the expansion plug into the wall hole, place the wall-mounted backboard, and insert the self-tapping screw into the position where the wall hole connects to the backboard hole. Tighten the screws with a screwdriver.

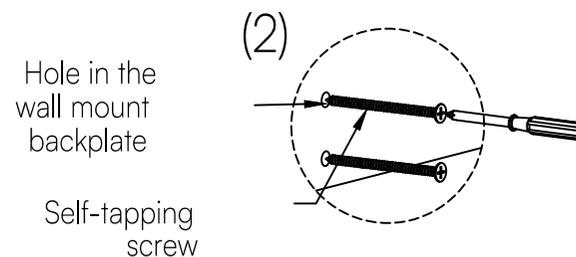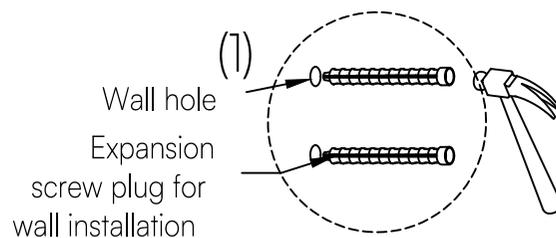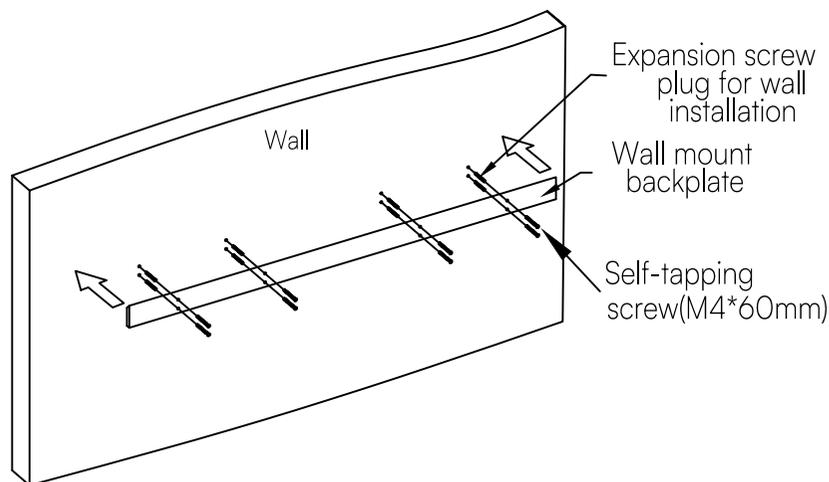

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Self-tapping screw (M4*60mm)	8	2
B		Expansion screw plug for wall installation	8	2
C		Self-tapping screw (M4*35mm)	4	2
D		Wrench	1	0
E				
F				
G				

Assembly instructions

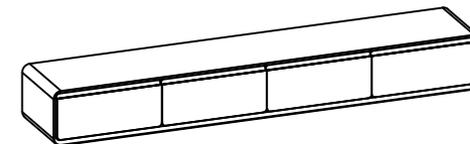


TS2001 240 Installation

The number of people needed for installation: 2


- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Have a question? We're here to help:
<https://www.povison.com/help-center/contact>
 Customer Service Number: +1-669-208-1888
 Customer Service Email: supportingcenter@povison.com
 Customer Service Hours: EST 10 am - 5.30 pm

3. Put the Ty cabinet on the wall-mounted backboard, open the downward door, insert the self-tapping screws into the holes of the cabinet body, and tighten them with a screwdriver or electric drill.

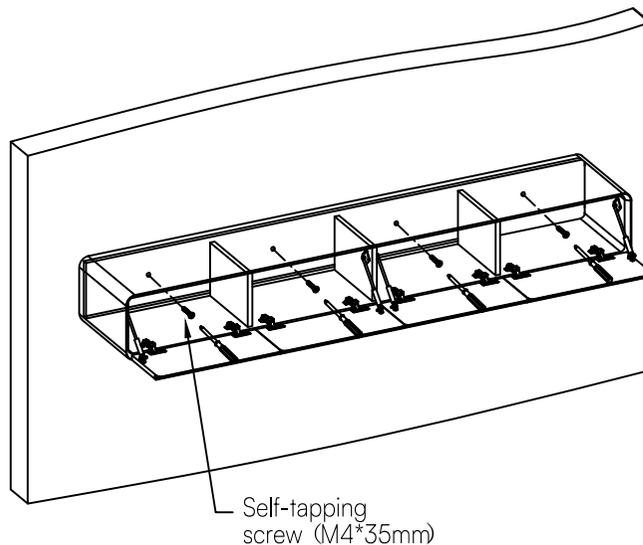

4. Installation complete.

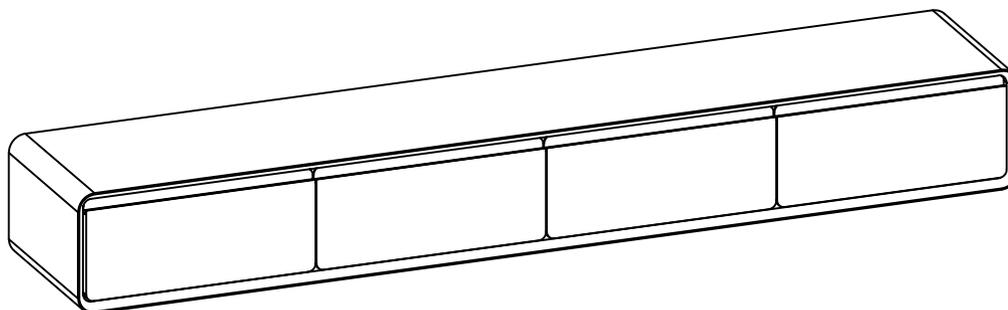

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Self-tapping screw (M4*60mm)	8	2
B		Expansion screw plug for wall installation	8	2
C		Self-tapping screw (M4*35mm)	4	2
D		Wrench	1	0
E				
F				
G				