



1.Insert the button battery into the remote control.

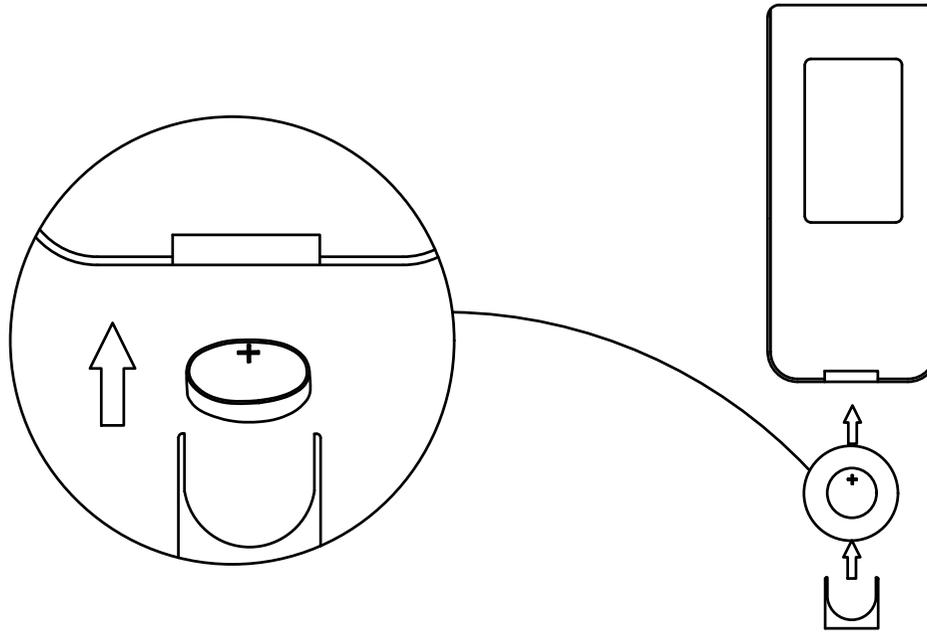


Assembly instructions

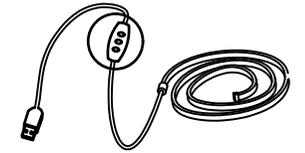

LED strip Installation

Have a question? We're here to help:
<https://www.povison.com/help-center/contact>
 Customer Service Number: +1-669-208-1888
 Customer Service Email: supportingcenter@povison.com
 Customer Service Hours:EST 10 am - 5.30 pm


2.Instructions for the remote control.

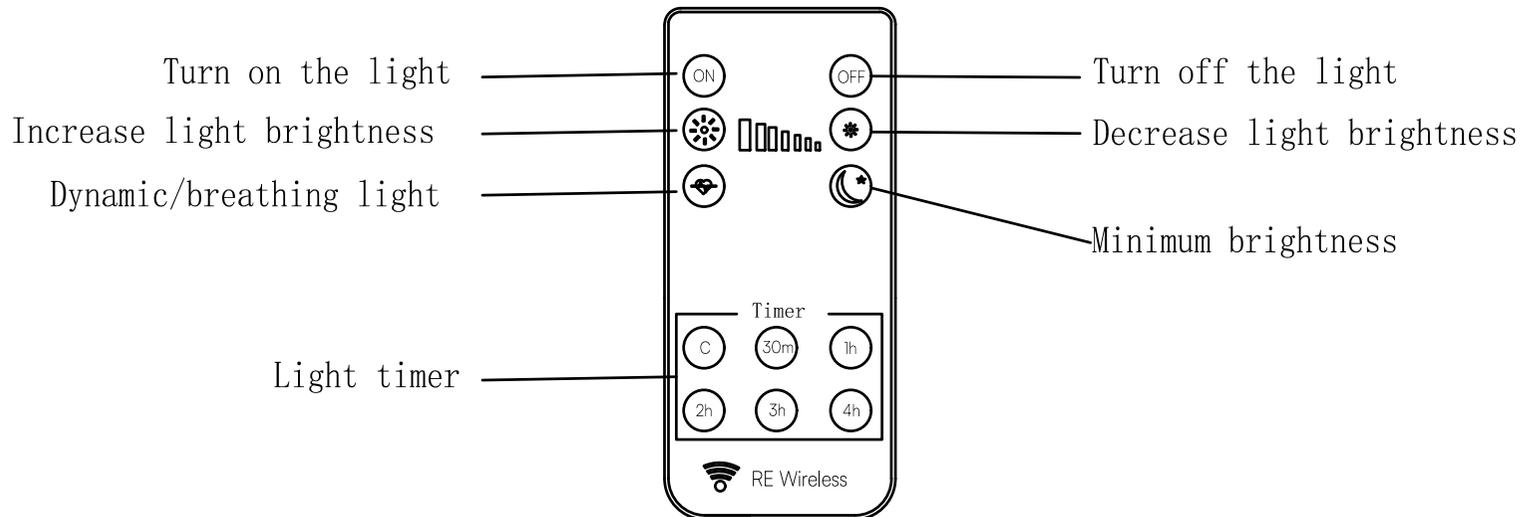


Remote Control/Instructions

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		remote control	1	0
B				
C				
D				
E				
F				
G				
H				
I				
J				
K				

3. Instructions for using the light strip.

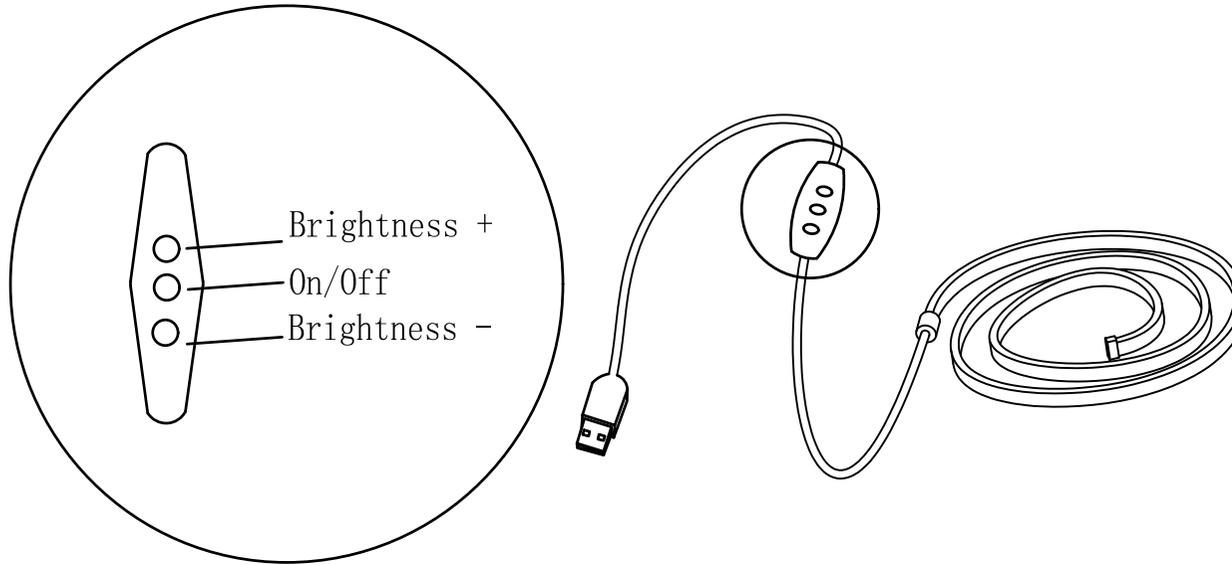



Assembly instructions

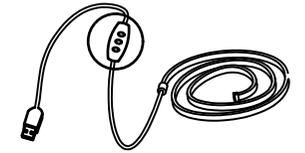

LED strip Installation


Have a question? We're here to help:
<https://www.povison.com/help-center/contact>
 Customer Service Number: +1-669-208-1888
 Customer Service Email: supportingcenter@povison.com
 Customer Service Hours: EST 10 am - 5.30 pm

4. The light strip assembly is completed.

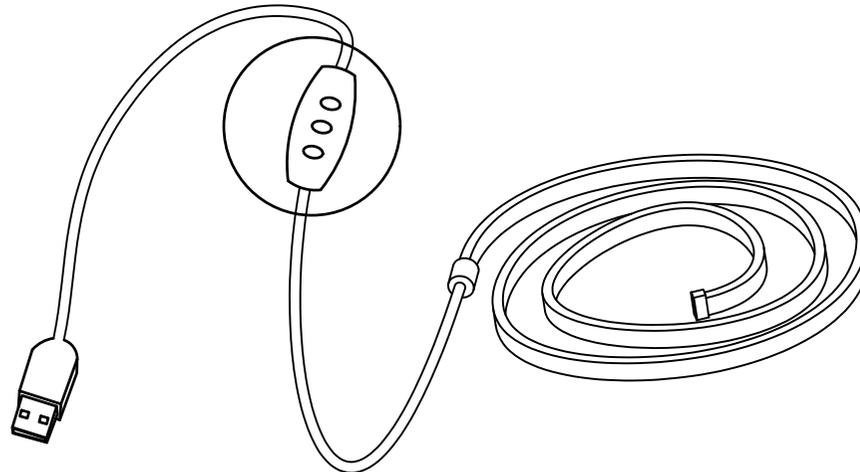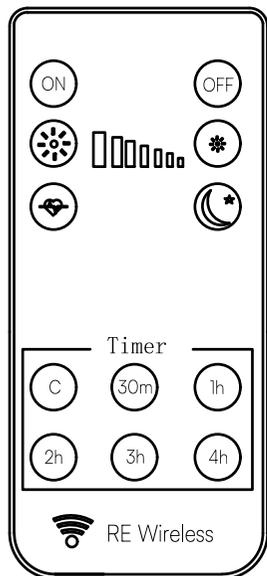

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		remote control	1	0
B				
C				
D				
E				
F				
G				
H				
I				
J				
K				

Assembly instructions




TS8299 Installation

The number of people needed for installation: 2


- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Have a question? We're here to help:
<https://www.povison.com/help-center/contact>
 Customer Service Number: +1-669-208-1888
 Customer Service Email: supportingcenter@povison.com
 Customer Service Hours: EST 10 am - 5.30 pm

1. Unfold the two tripods from the accessory pack, place and press them against the bottom of the cabinet as shown in the figure for measurement convenience, mark the hole positions on the cabinet bottom with a marker, and measure the distance between the hole positions of the two tripods

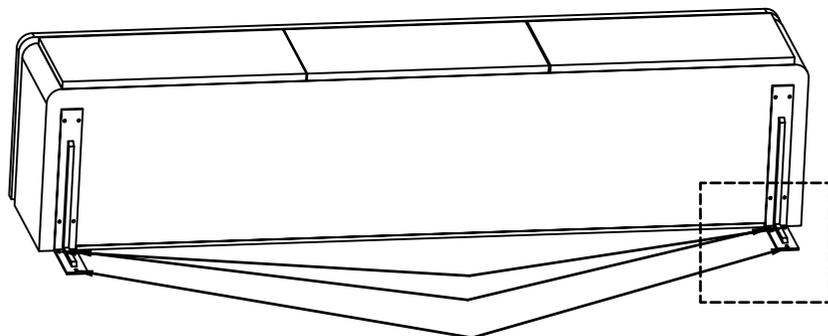

Measure the spacing dimensions of these hole positions. Be sure to take additional measurements to ensure accurate drilling in subsequent steps

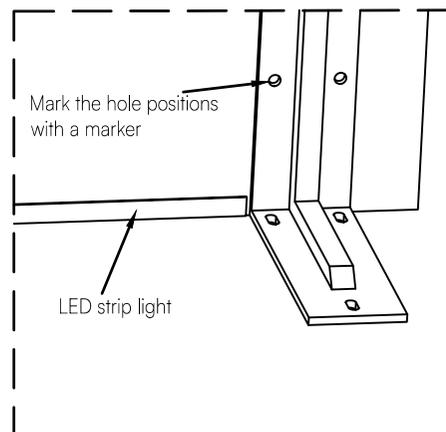


2. mark the holes to be installed on the wall and the backboard with a marker, and then drill holes on the wall with an electric drill.

(Drill to a depth of 60mm using a 6mm diameter drill bit)

The eight holes above are for mounting the back panel


The six holes below are for securing the tripod brackets

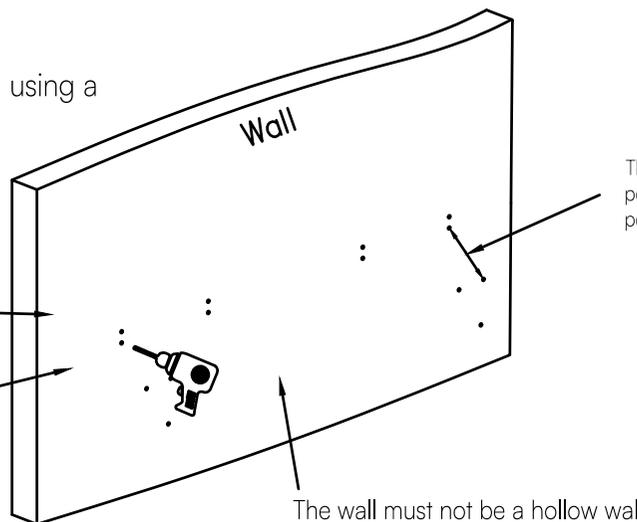

The vertical distance from the lowest hole position of the hanging plate to the highest hole position of the tripod is approximately 98.5 mm


Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Self-tapping screw (M4*75mm)	8	1
B		Self-tapping screw (M4*30mm)	2	1
C		Self-tapping screw (M3.5*15mm)	8	0
D		plastic anchor	6	0
E		Expansion screw plug for wall installation	8	1
F		power cord	1	0
G		remote control	1	0
H		triangular support bracket	2	0
I				

3.Remove the washers and nuts from the expansion bolts

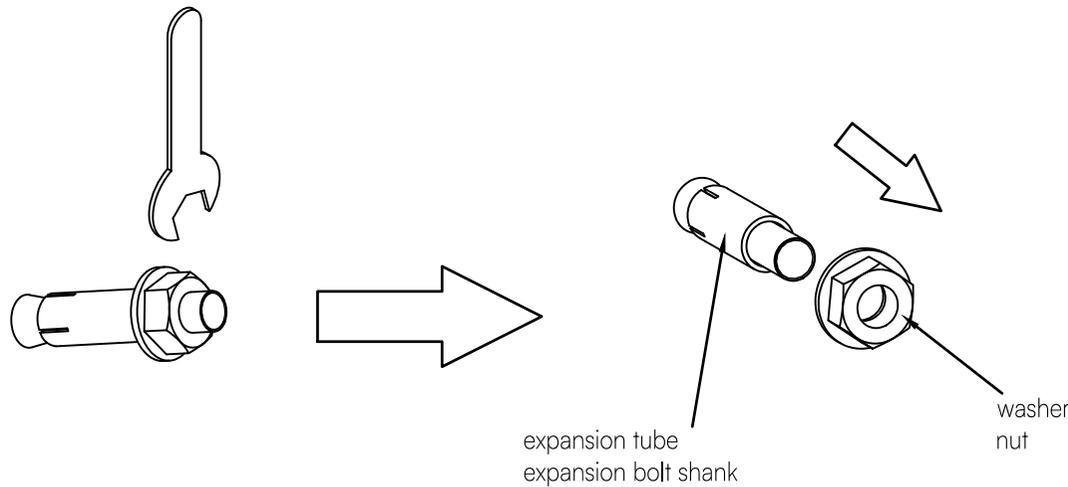

POVISON

Assembly instructions

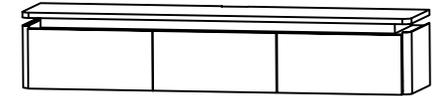


TS8299 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.



Have a question? We're here to help:
<https://www.povison.com/help-center/contact>
 Customer Service Number: +1-669-208-1888
 Customer Service Email: supportingcenter@povison.com
 Customer Service Hours: EST 10 am - 5.30 pm

4.After drilling is completed, insert the expansion tubes into the wall drill holes, place the wall-mounted backboard, then feed the self-tapping screws through the aligned positions of the wall drill holes and the backboard holes, and tighten the screws with a screwdriver. Drive the expansion tubes and shanks of the expansion bolts into the wall.


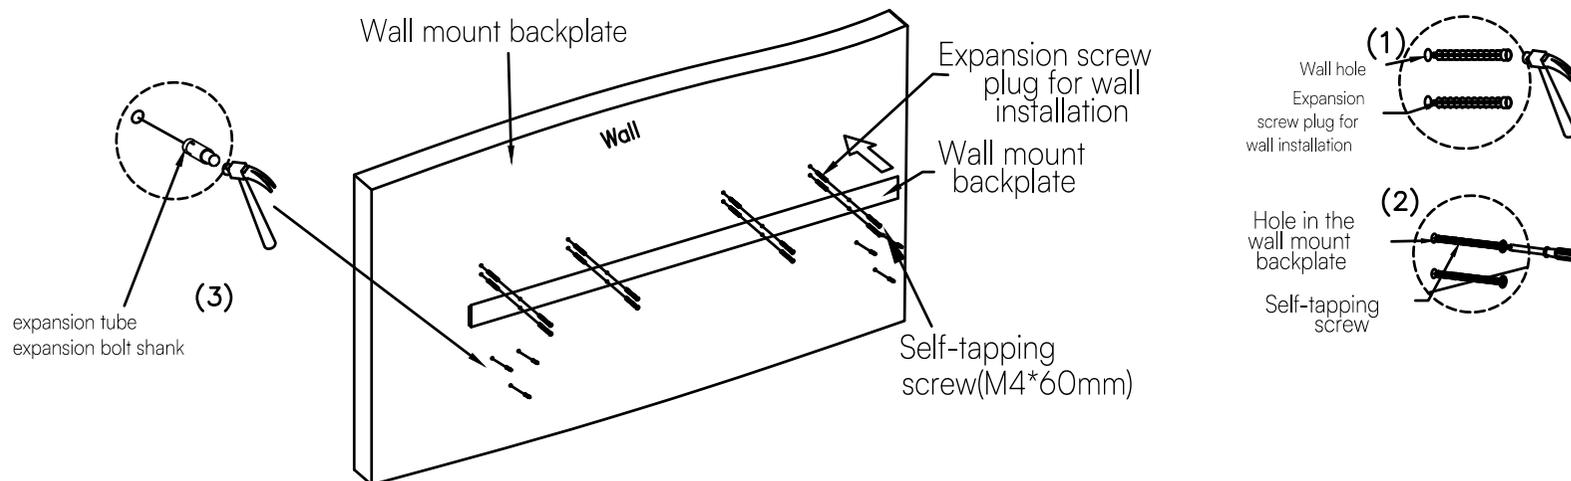


Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Self-tapping screw (M4*75mm)	8	1
B		Self-tapping screw (M4*30mm)	2	1
C		Self-tapping screw (M3.5*15mm)	8	0
D		plastic anchor	6	0
E		Expansion screw plug for wall installation	8	1
F		power cord	1	0
G		remote control	1	0
H		triangular support bracket	2	0
I				


5. Mount the two tripods on the wall, then secure them with the washers and nuts of the expansion bolts

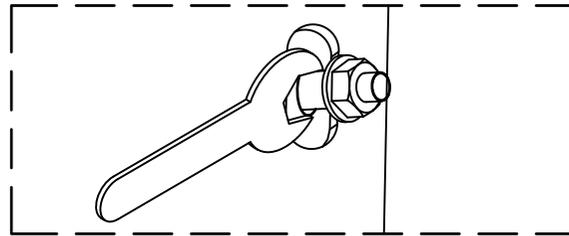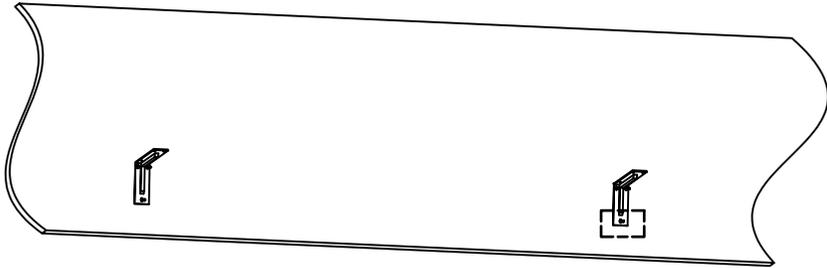

6. Mount the wall cabinet onto the hanging plate, then align with the originally marked hole positions at the cabinet base and secure the wall cabinet to the tripods with self-tapping screws

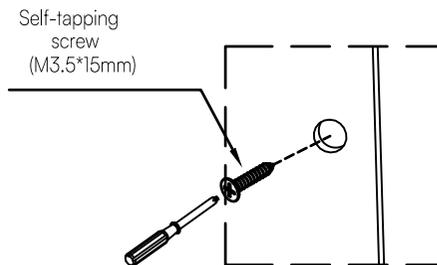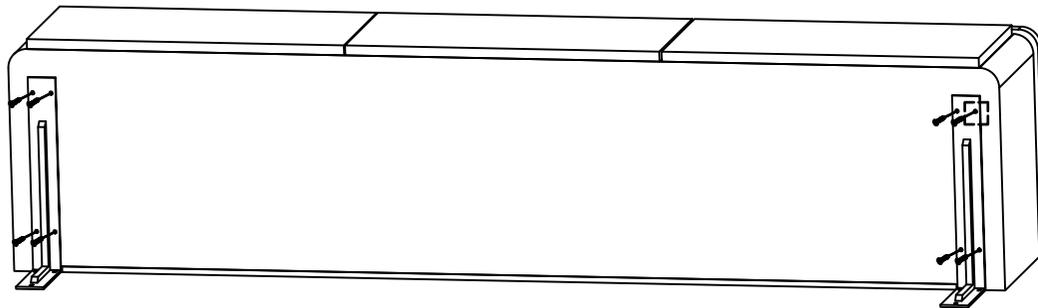

Assembly instructions

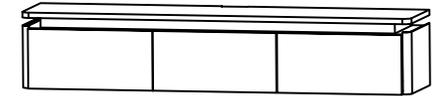

TS8299 Installation



The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Have a question? We're here to help:
<https://www.povison.com/help-center/contact>
 Customer Service Number: +1-669-208-1888
 Customer Service Email: supportingcenter@povison.com
 Customer Service Hours: EST 10 am - 5.30 pm

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Self-tapping screw (M4*75mm)	8	1
B		Self-tapping screw (M4*30mm)	2	1
C		Self-tapping screw (M3.5*15mm)	8	0
D		plastic anchor	6	0
E		Expansion screw plug for wall installation	8	1
F		power cord	1	0
G		remote control	1	0
H		triangular support bracket	2	0
I				

7. Open the downward door, insert the self-tapping screws into the holes of the cabinet body, and tighten them with a screwdriver or electric drill.

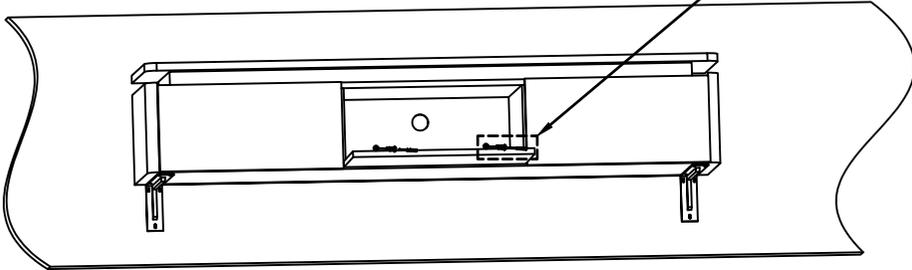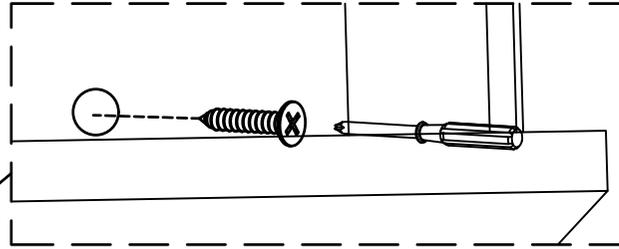

POVISON

Assembly instructions




TS8299 Installation

The number of people needed for installation: 2


- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Have a question? We're here to help:
<https://www.povison.com/help-center/contact>
 Customer Service Number: +1-669-208-1888
 Customer Service Email: supportingcenter@povison.com
 Customer Service Hours: EST 10 am - 5.30 pm

8. Connect the power cord

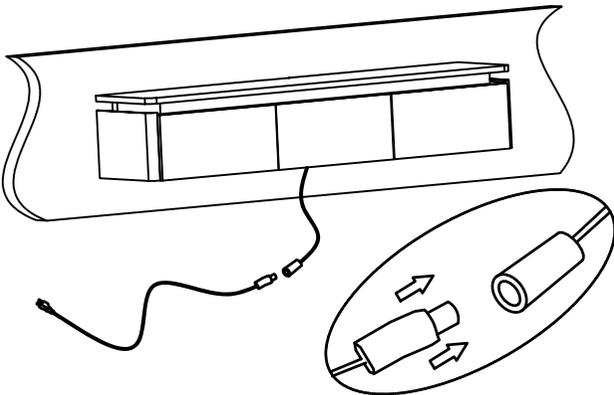

9. Installation completed

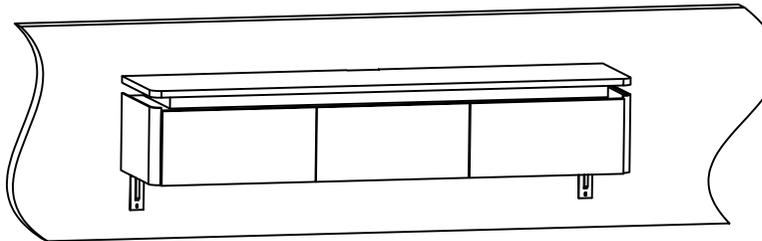

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Self-tapping screw (M4*75mm)	8	1
B		Self-tapping screw (M4*30mm)	2	1
C		Self-tapping screw (M3.5*15mm)	8	0
D		plastic anchor	6	0
E		Expansion screw plug for wall installation	8	1
F		power cord	1	0
G		remote control	1	0
H		triangular support bracket	2	0
I				