



1. Put the bedside table upside down, place the cabinet feet on the appropriate position on the bottom of the bedside table, put self-tapping screws on the small steel holes of the cabinet feet, and screw the self-tapping screws into the bottom of the bedside table with an electric drill (the bottom of the bedside table has no holes, it needs to be Make a hole after marking it with a marker)

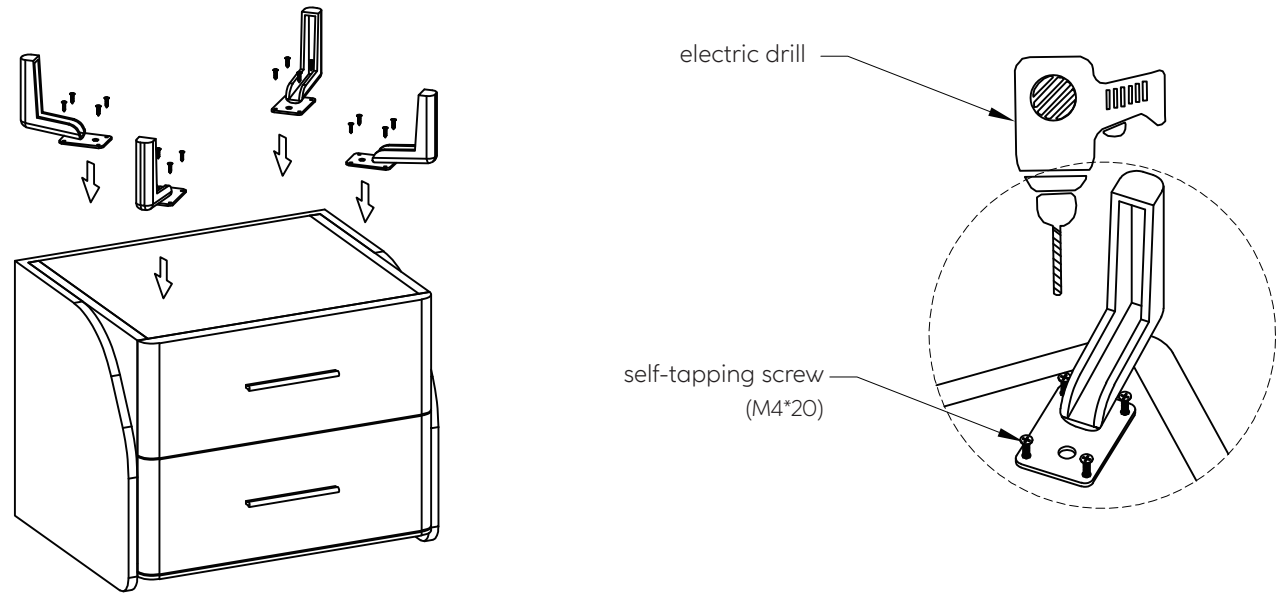

2 Installation complete

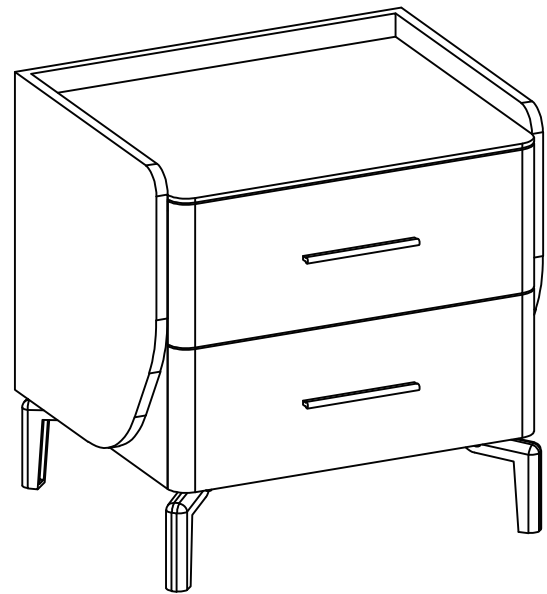

POVISON



Installation instruction



BS-13FCB Installation Suggested
Number of People for
Assembly: 1

- 1. Please read the manual carefully before installing this product. And strictly follow the installation process.
- 2. Please take good care of this manual for your next installation.

Parts list

NO.	Shape	Name	Quantity
A		Self-tapping screws (M4*20)	16
B		Cabinet feet	4