




1.Unwind the PP belt with the scissors.

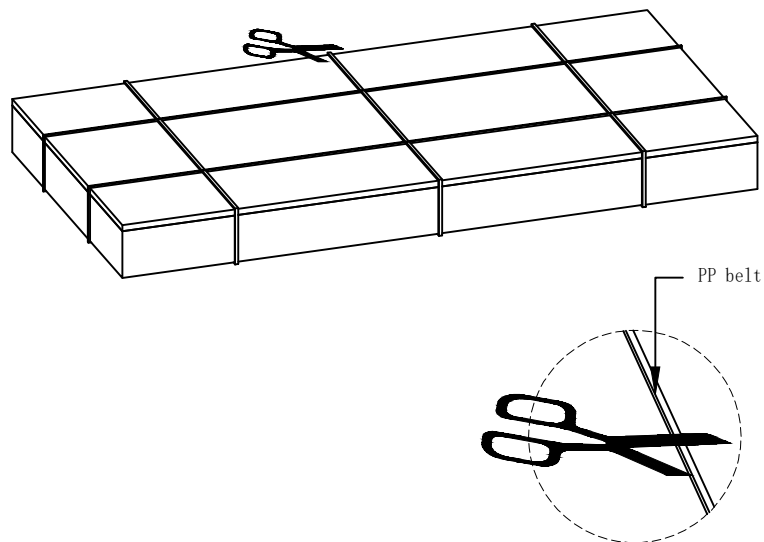

2.Take out the wooden box panel, remove the pearl cotton, and place it aside.

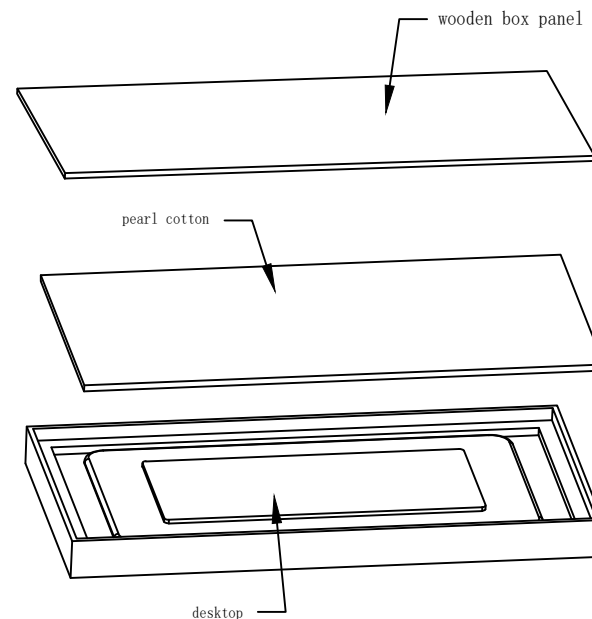

3.Place the desktop on the removed pearl cotton place (avoid collision and damage to the desktop).

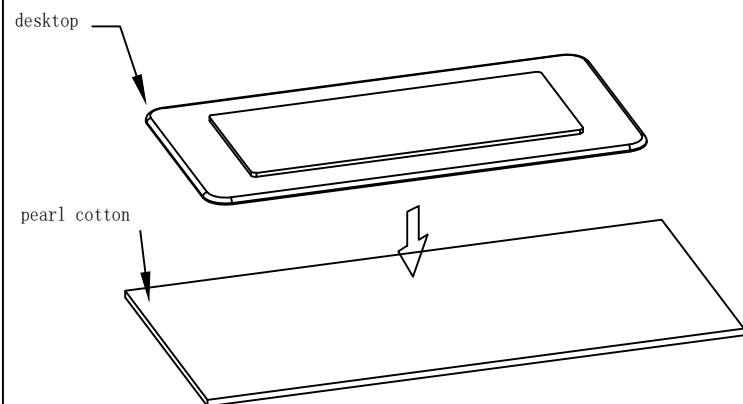

4.Four people need to place the dining table above the dining table base before installation.


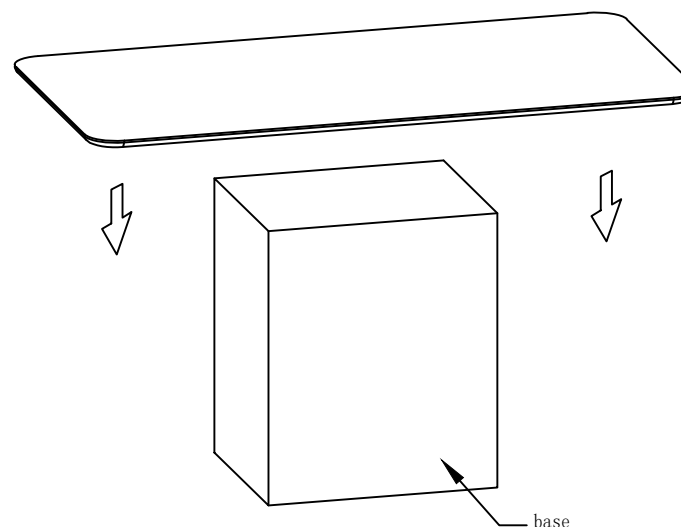


Table unpacking instructions

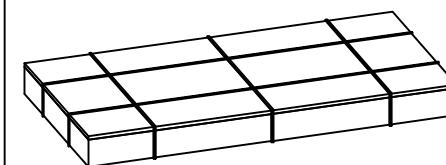


Number of people needed:4

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation

Parts list

Serial number	Shape	Name	Quantity

Installation instruction

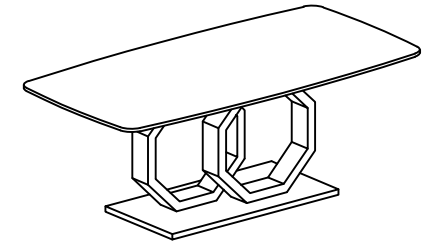

Product name:DT046AW14/16


RECOMMENDED NUMBER OF INSTALLERS: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.


Parts list

Serial number	Shape	Name	Quantity
A		Flathead machine screws (M8*60)	8
B		Flathead machine screws (M8*20)	8
C		Self-tapping screws (M4*16)	6
D		Gaskets	16


1. Confirm installation steps (please verify the list when unpacking)

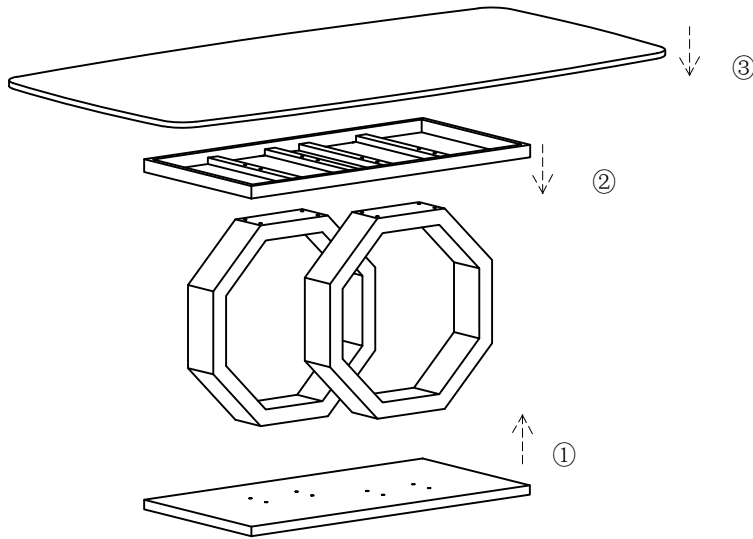


2. Upside down the stand and the base, connect with hexagonal machine wires and gasket.

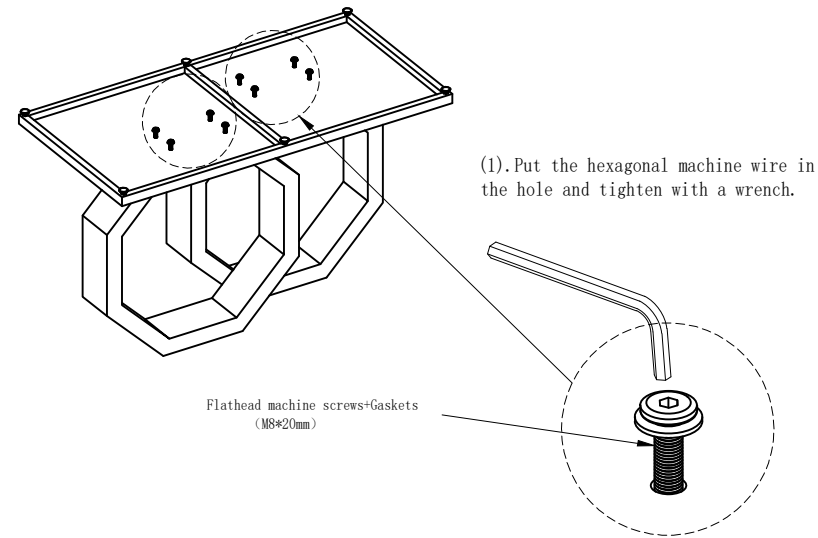


3. Connect the frame with table legs.

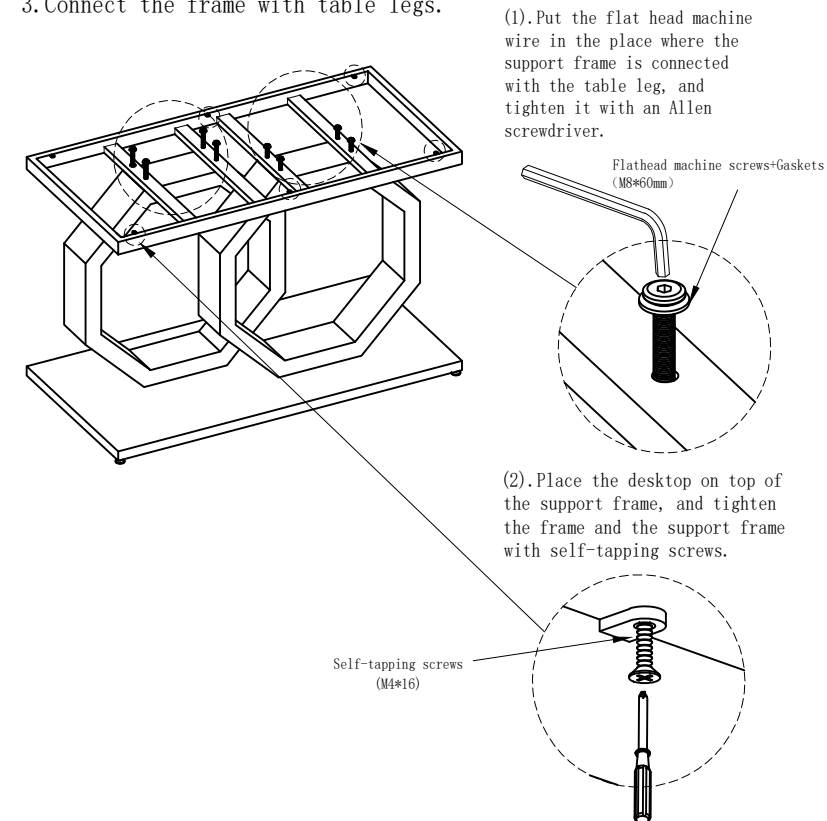


4. Installation finished.

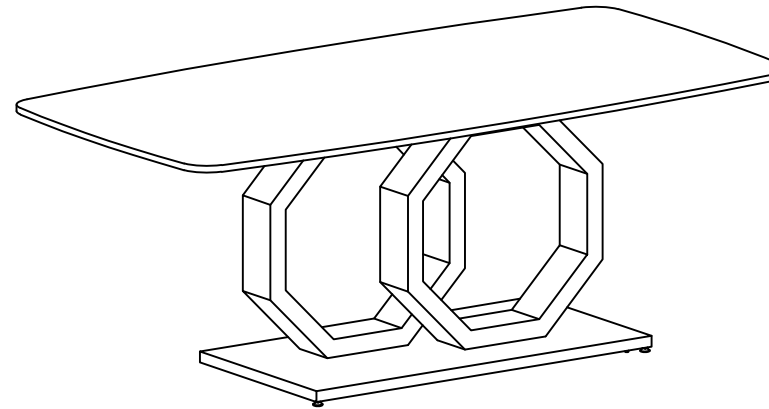


1. Connect the desktop frame and the table legs to each other, align the hexagonal wire with the holes and put it in (tighten the screws to 3/2 and wait for the base to be installed before tightening)

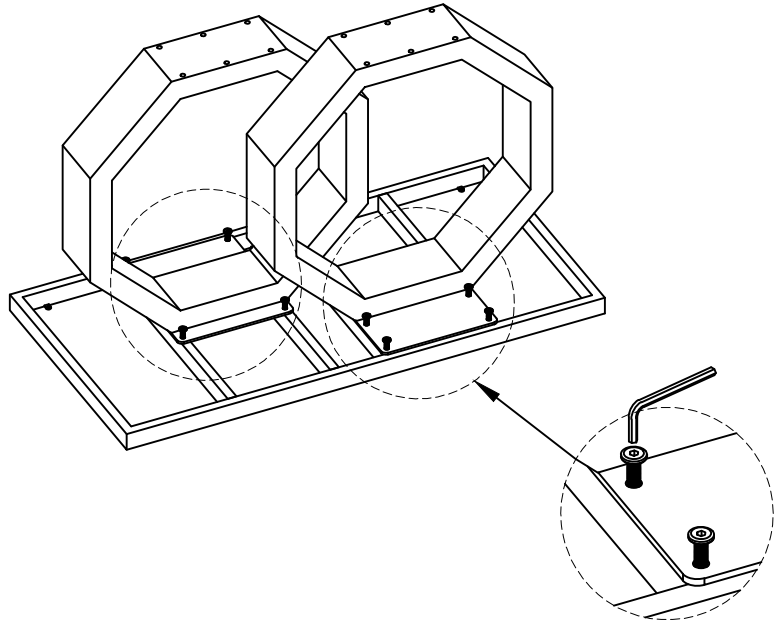


2. Place the base on the bottom of the table legs to adjust the alignment of the holes, then put in the hexagonal wire and tighten it with a wrench.

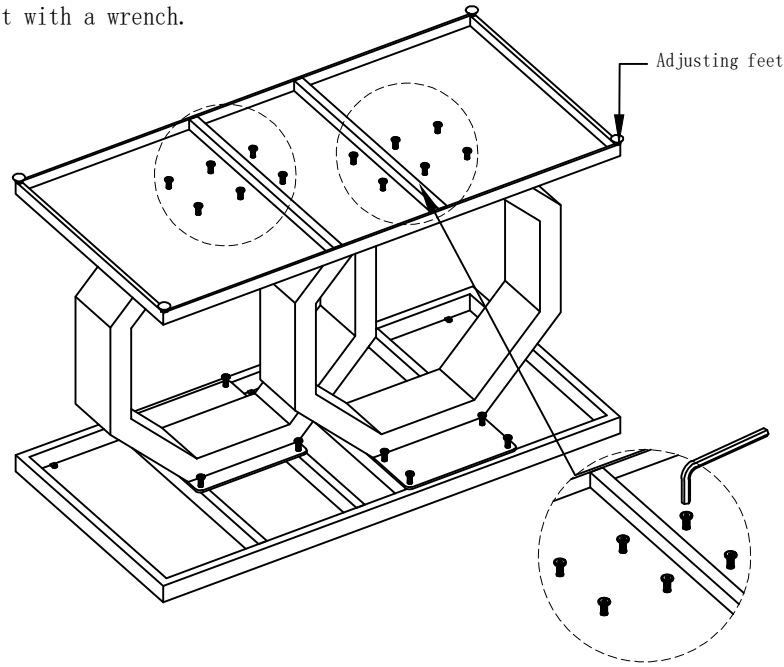


3. Put the desktop on the frame, put the self-tapping screws on the frame ears, and tighten them with a screwdriver or electric drill.

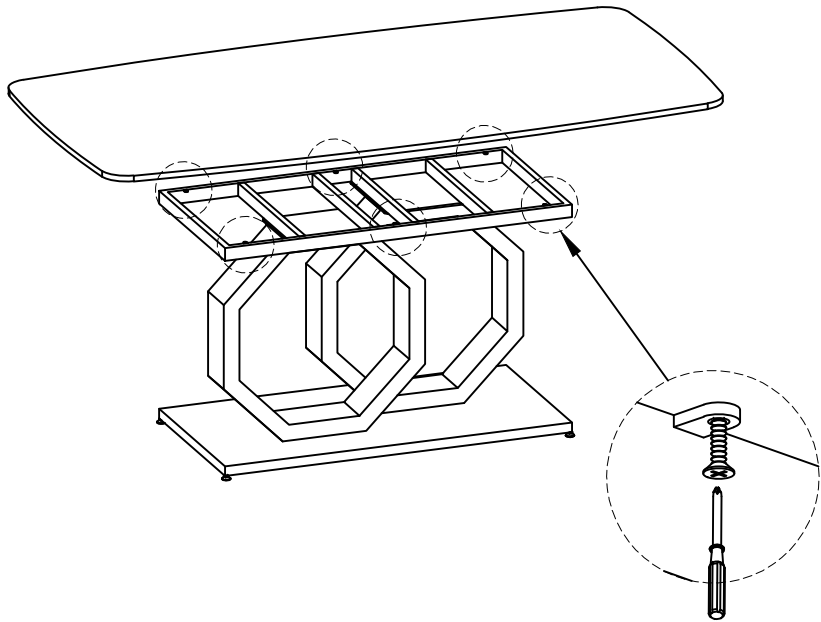

4. Installation complete

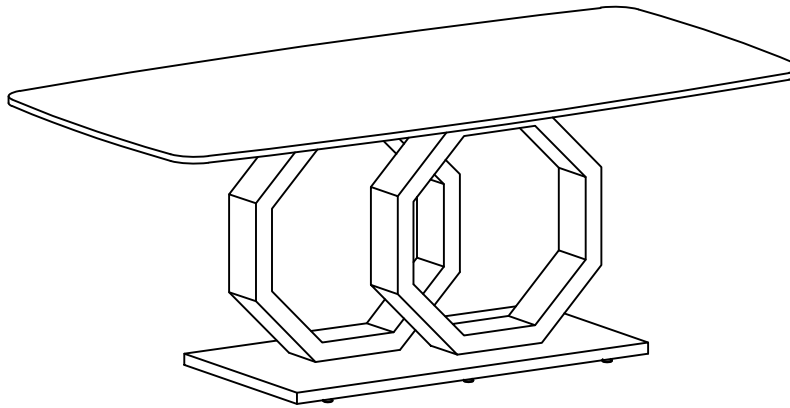

Installation instruction

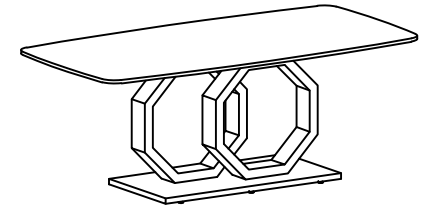

DT046AW18/20 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list

Serial number	Shape	Name	Quantity
A		Hexagonal wire (M8*20mm)	24
B		Self-tapping screws (M4*16mm)	6
C		Gasket	24