




1. Put the tempered glass on the table first and then put the auxiliary cabinet.

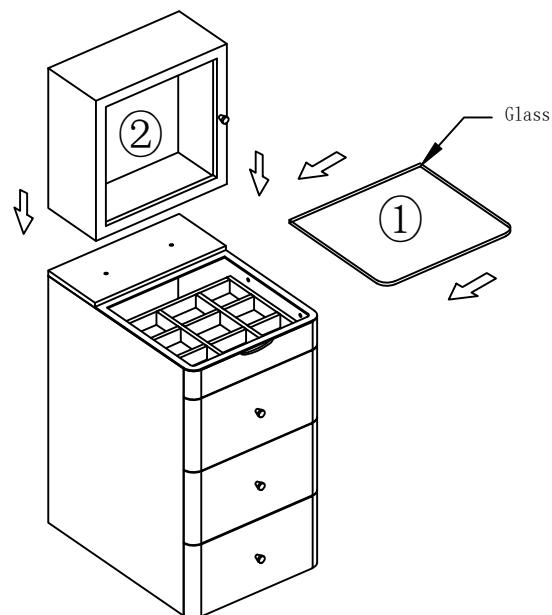


2. Align the hole position of the auxiliary cabinet, put the hexagon socket machine screws in the auxiliary cabinet and tighten it with a wrench (take out the drawer to facilitate the installation of the fourth step.)

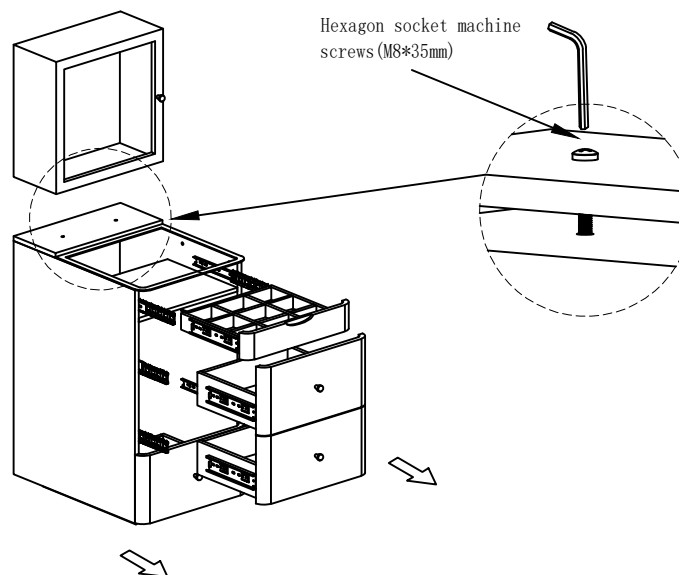


3. Place the foot of the table on the bottom plate of the dressing table, and tighten the hexagon socket machine screws with the wrench.

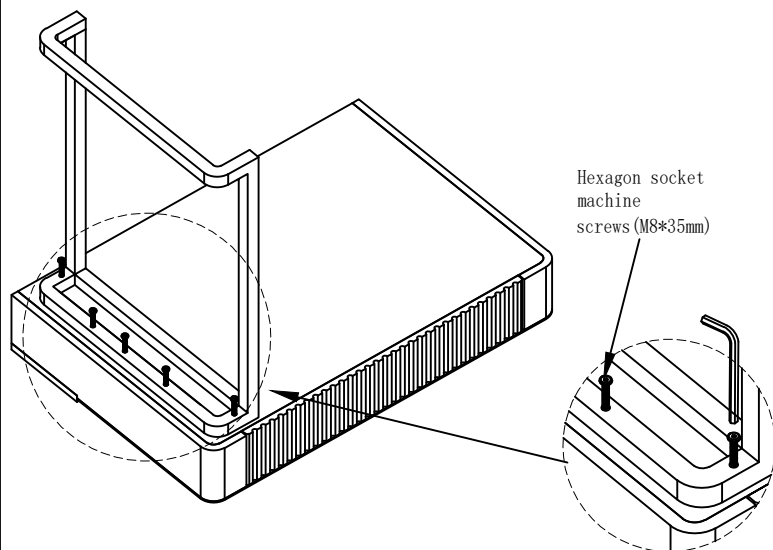

4. At the interconnected hole position between the two cabinets, put the hexagon socket machine screws in the hole position of the dressing cabinet and tighten the screw with a wrench. (The drawer can be installed in place after completing this step)

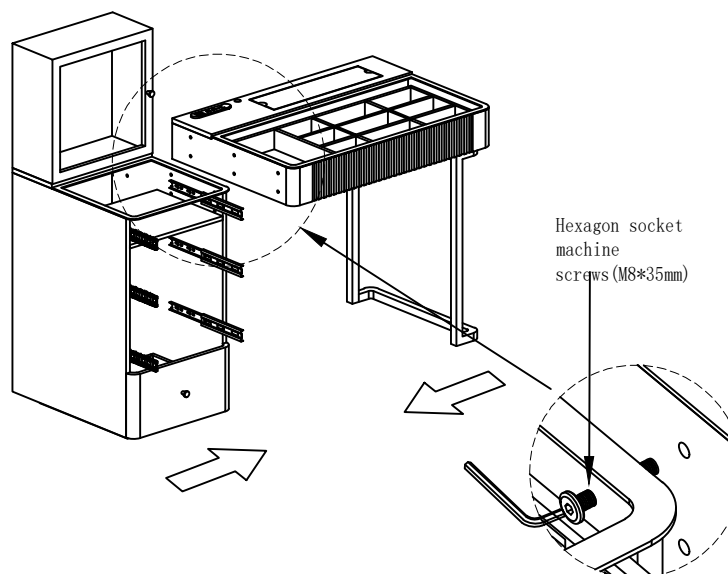

Installation instruction

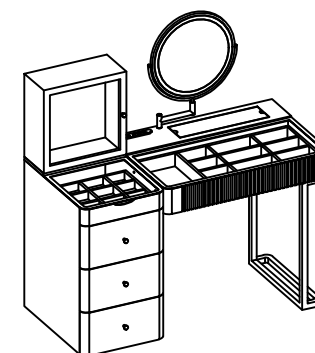

VB083-B Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation


Parts list

Serial number	Shape	Name	Quantity
A		table foot	1
B		Hexagon socket machine screws (M8*35mm)	13
C		Hexagon socket machine screws (M6*25mm)	2
D		Hexagon socket machine screws (M8*45mm)	8
E		Gasket	8


5. Insert the rod bar into the hole of the dressing table, and align the hole with the hexagon socket machine screws.

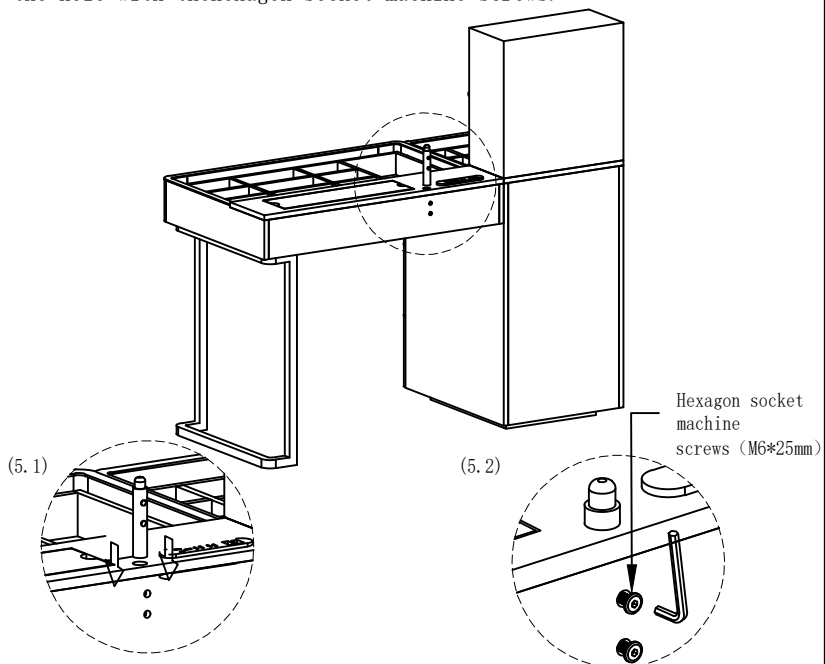


7. Stool installation

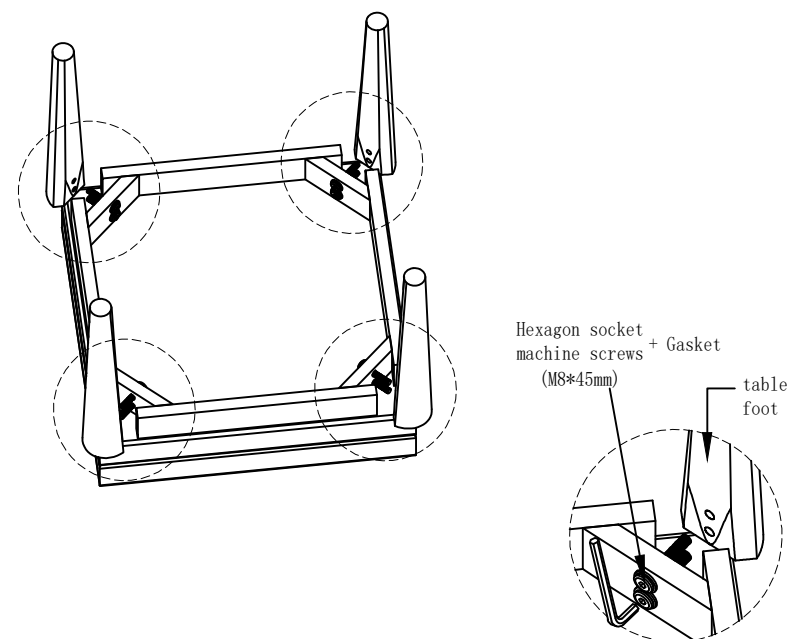


6. Mirror installation steps

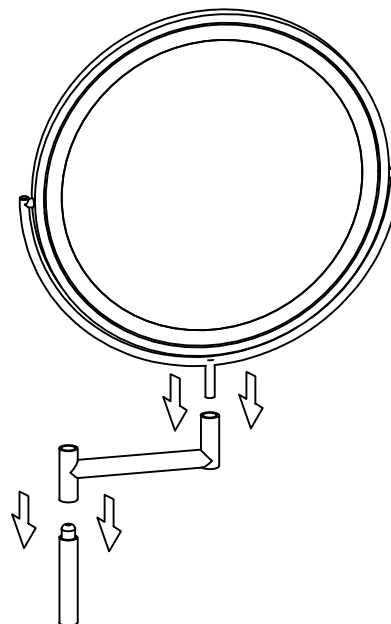

8. Put the drawer back in place and install the handle.

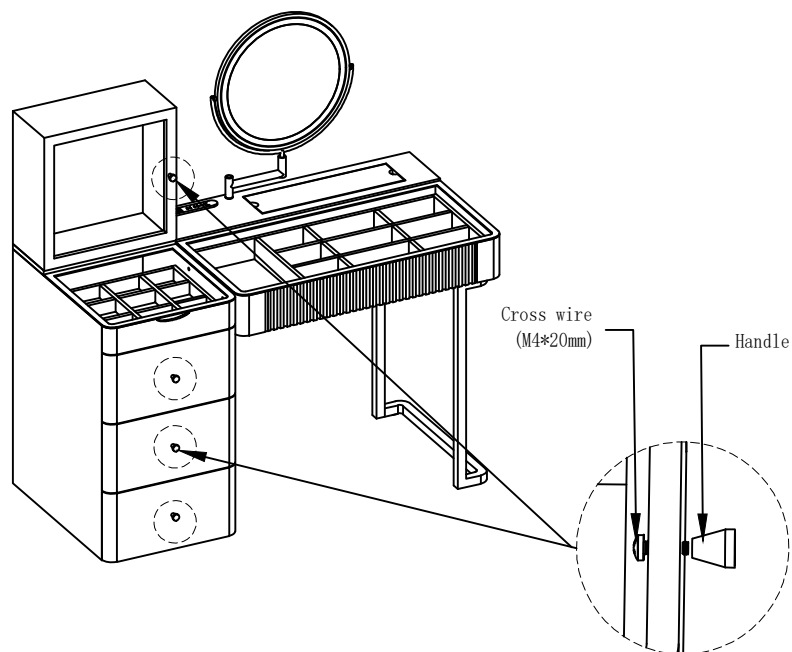

Installation instruction

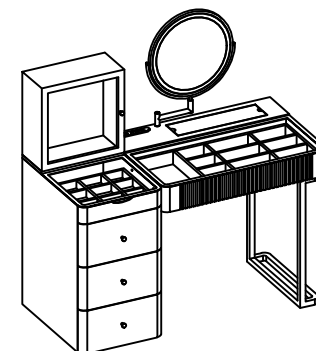

VB083-B Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation



Parts list

Serial number	Shape	Name	Quantity
A		table foot	1
B		Hexagon socket machine screws (M8*35mm)	13
C		Hexagon socket machine screws (M6*25mm)	2
D		Hexagon socket machine screws (M8*45mm)	8
E		Gasket	8


9.Shake the table glass to the table.

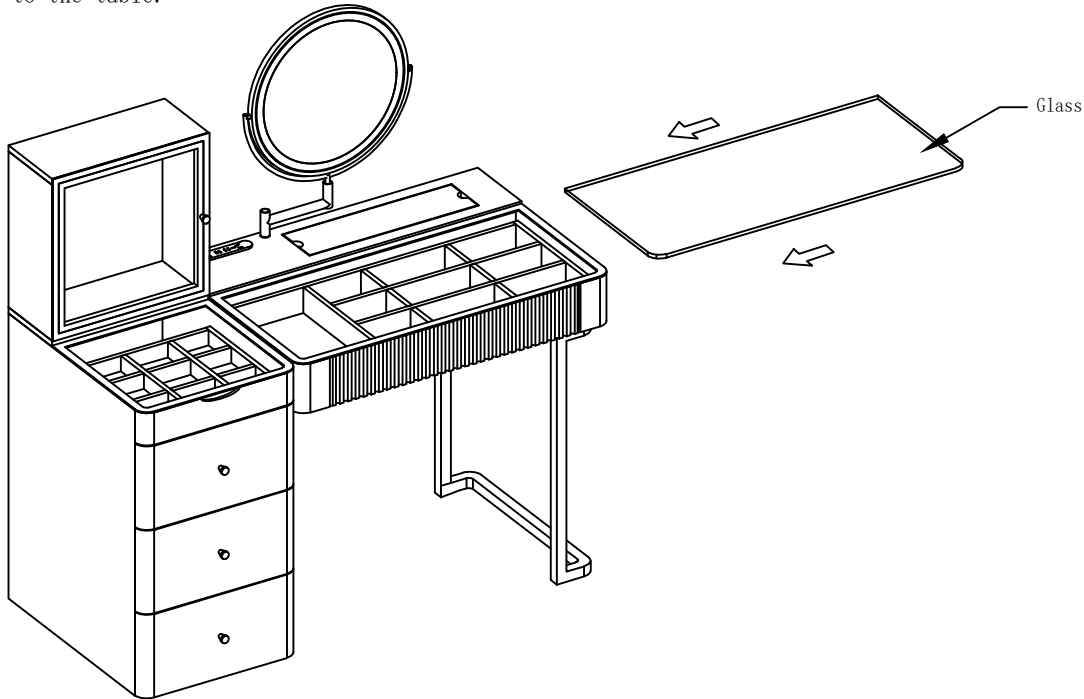

10. Installation complete.

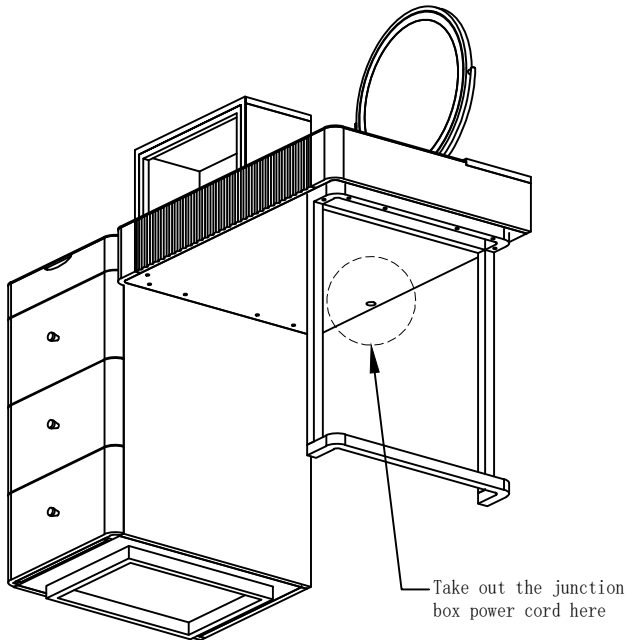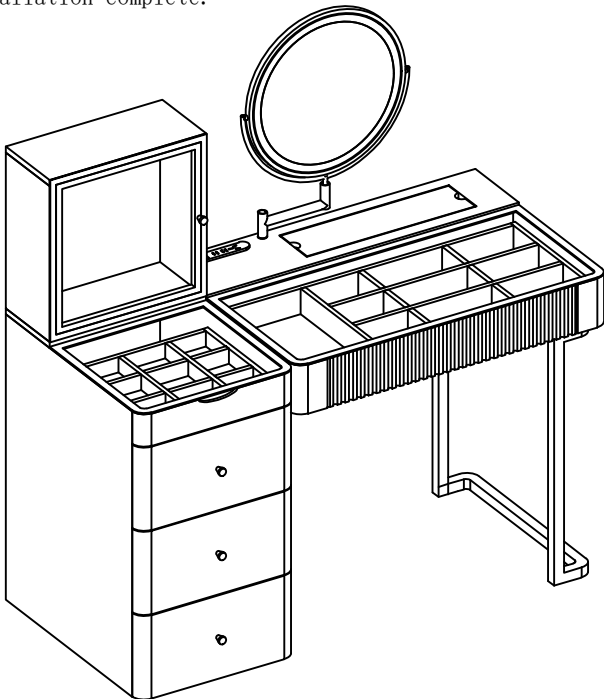

Installation instruction

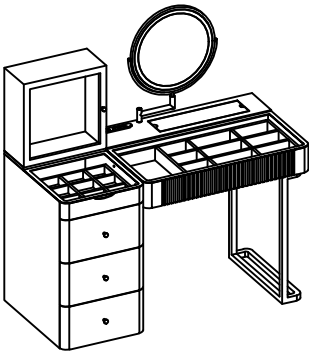

VB083-B Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation


Parts list

Serial number	Shape	Name	Quantity
A		table foot	1
B		Hexagon socket machine screws (M8*35mm)	13
C		Hexagon socket machine screws (M6*25mm)	2
D		Hexagon socket machine screws (M8*45mm)	8
E		Gasket	8


1.

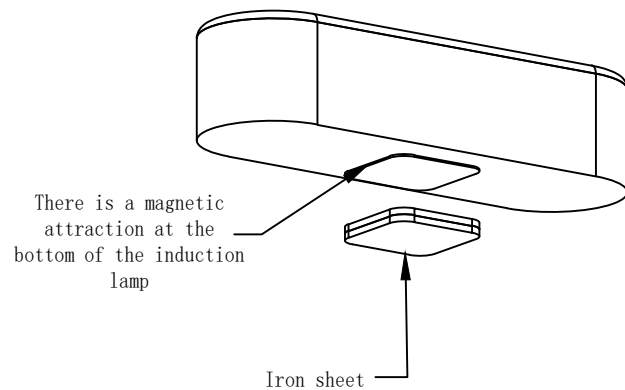


2. Tear off the adhesive on the iron sheet and paste it at the required position of the product

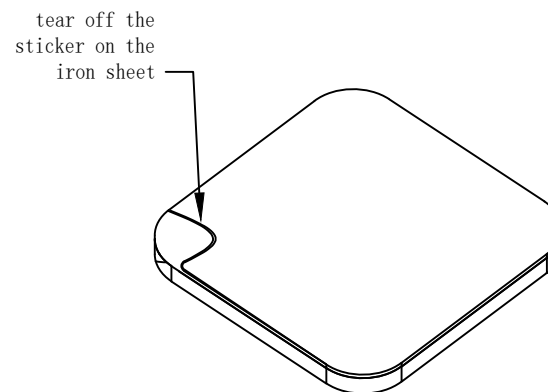

3. Just put the induction light on the sticky iron sheet

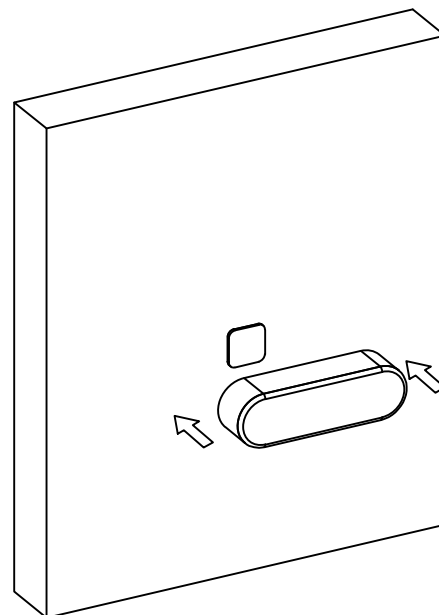

Installation Instructions for Induction Lamps

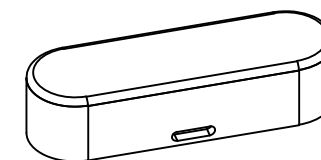

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation

Parts list

Serial number	Shape	Name	Quantity