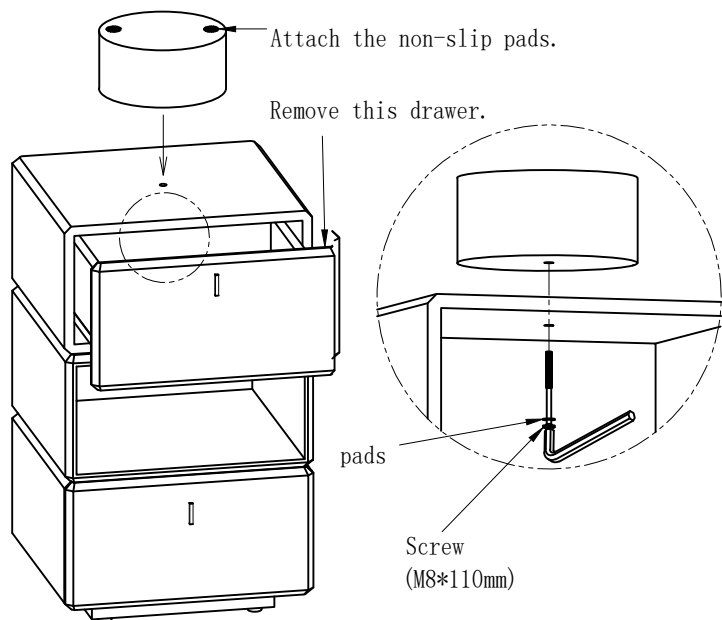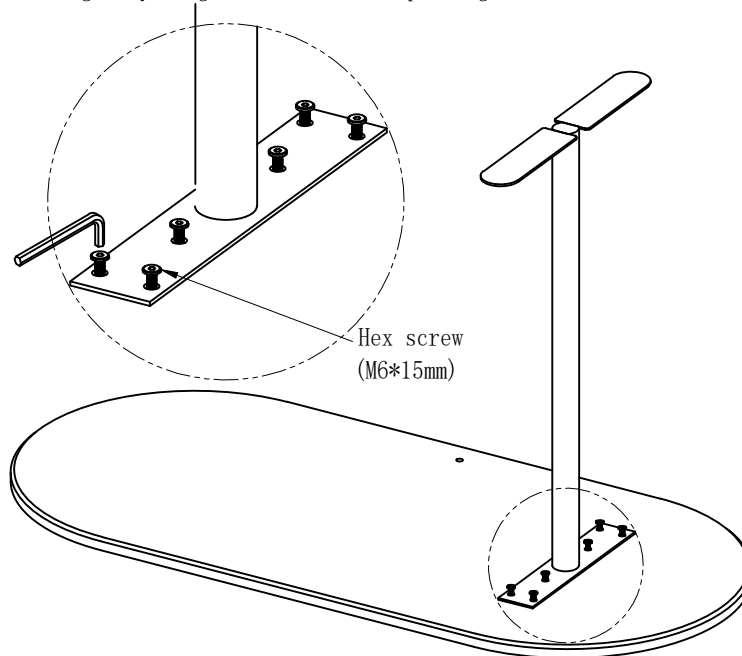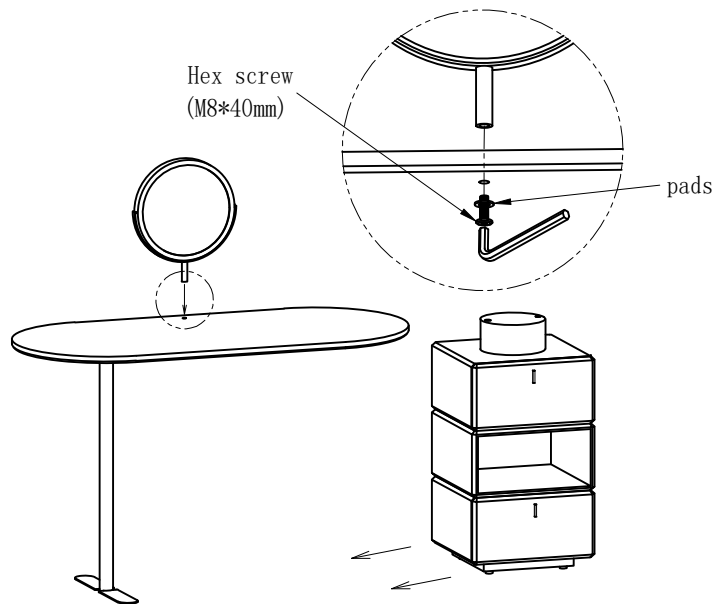1.Remove the drawer, Insert screws from the underside and tighten. After assembly, reattach the drawer. (Refer to the last page for drawer removal and reinstallation instructions.)
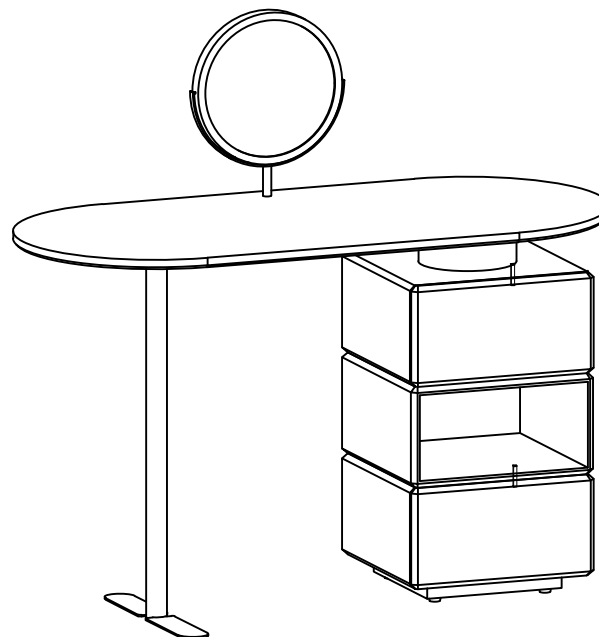
Attach the non-slip pads.

Remove this drawer.

pads

Screw
(M8*110mm)

2. Install the support legs on the underside of the tabletop, ensuring they align with the corresponding holes.

Hex screw
(M6*15mm)

VB8065 Installation
The number of people needed for installation: 2

① Please read the manual carefully before installing this product. And strictly follow the installation process

② Please take good care of this manual for your next installation

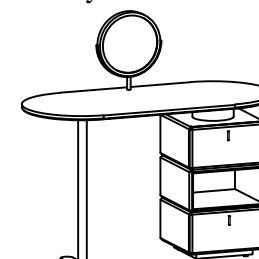③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

3. Place the vanity cabinet in the desired location, and secure the vanity mirror to the tabletop using screws.

Hex screw
(M8*40mm)

pads

4. Installation completed

Parts list	On a red ribbon are furniture installation accessories			
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Screw （M8*110mm）	1	0
B		Hex screw （M8*15mm）	6	0
C		Hex screw （M8*40mm）	1	0
D		Pads	2	0
E		Non-slip pads	2	2
F		Wrench	1	0
G				

POVISON

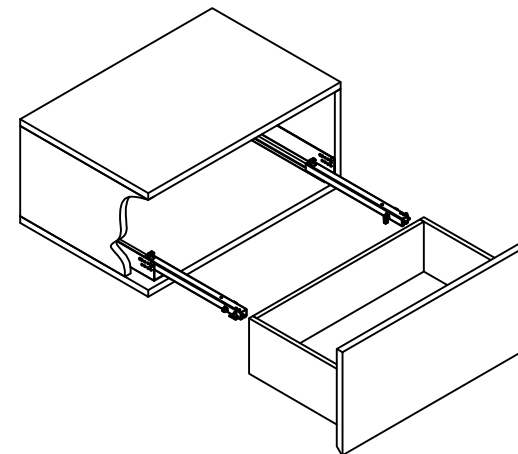1. Two-section bottom buffer guide rail.

—Disassembly buckle

The way to teardown drawer:
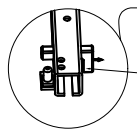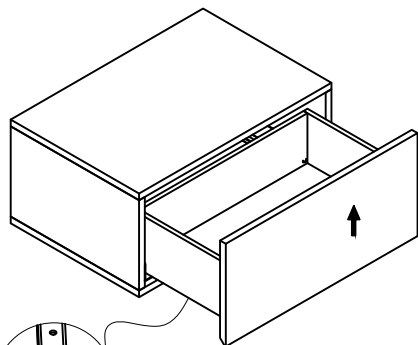
Pull out the disassembly buckles

Pull out the disassembly buckle of the two guide rails below the drawer at the same time. Gently pull the drawer up, and then you can take the drawer down.

Repeatedly push and pull the drawer (2-4 times) to check whether the drawer has been install on the guide rais properly. If not , remove the drawer and reinstall.
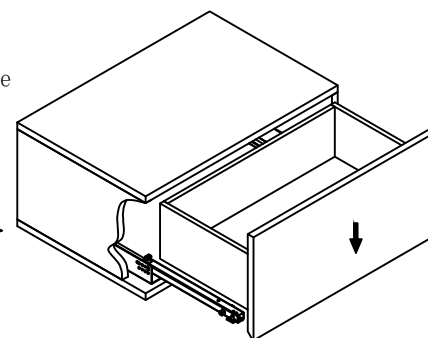
3. The way to install drawer:

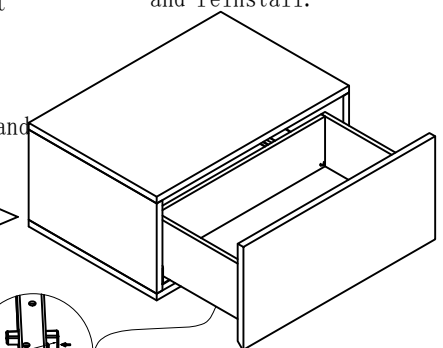Pull out the disassembly buckles

Bottom of drawer
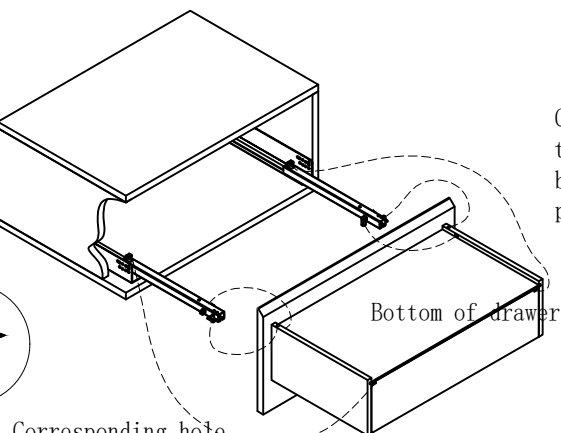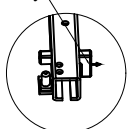
Corresponding hole location

Check and make sure the disassembly buckle has been pulled out.

Hold the drawer, put the holes on the drawers into the two-section bottom buffer guide rail, and then press down the buckle to remove it.

Pull out the disassembly buckles