




1.Remove the drawer (see the last page for specific disassembly and assembly methods)

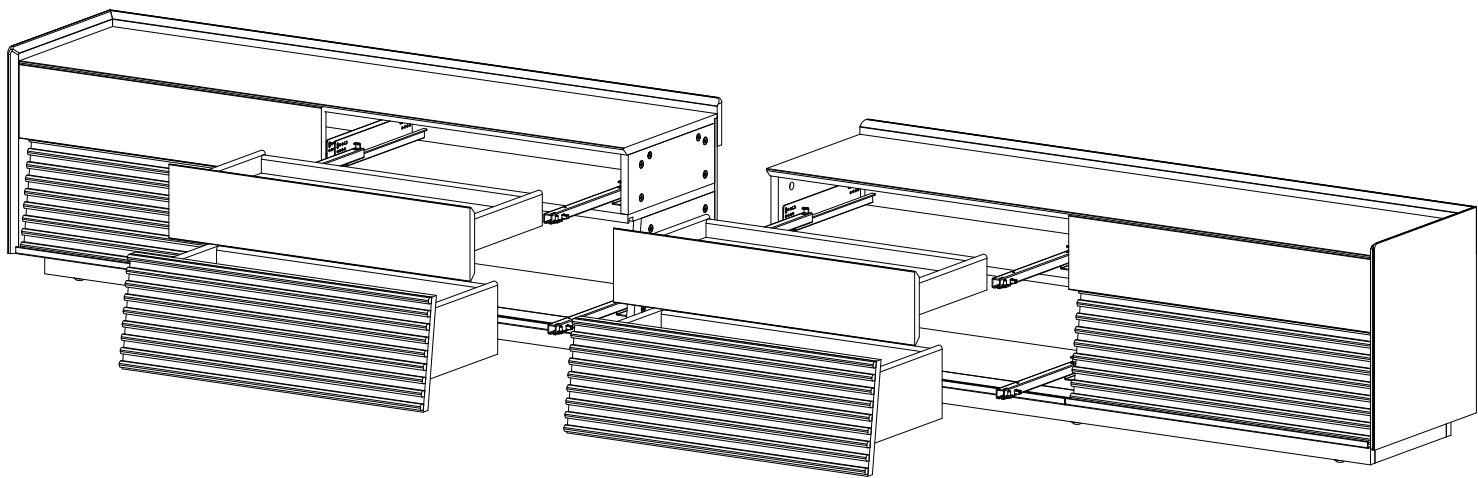


2. According to the corresponding screw holes to align the left and right cabinets.Then use the screws to secure the two cabinets.

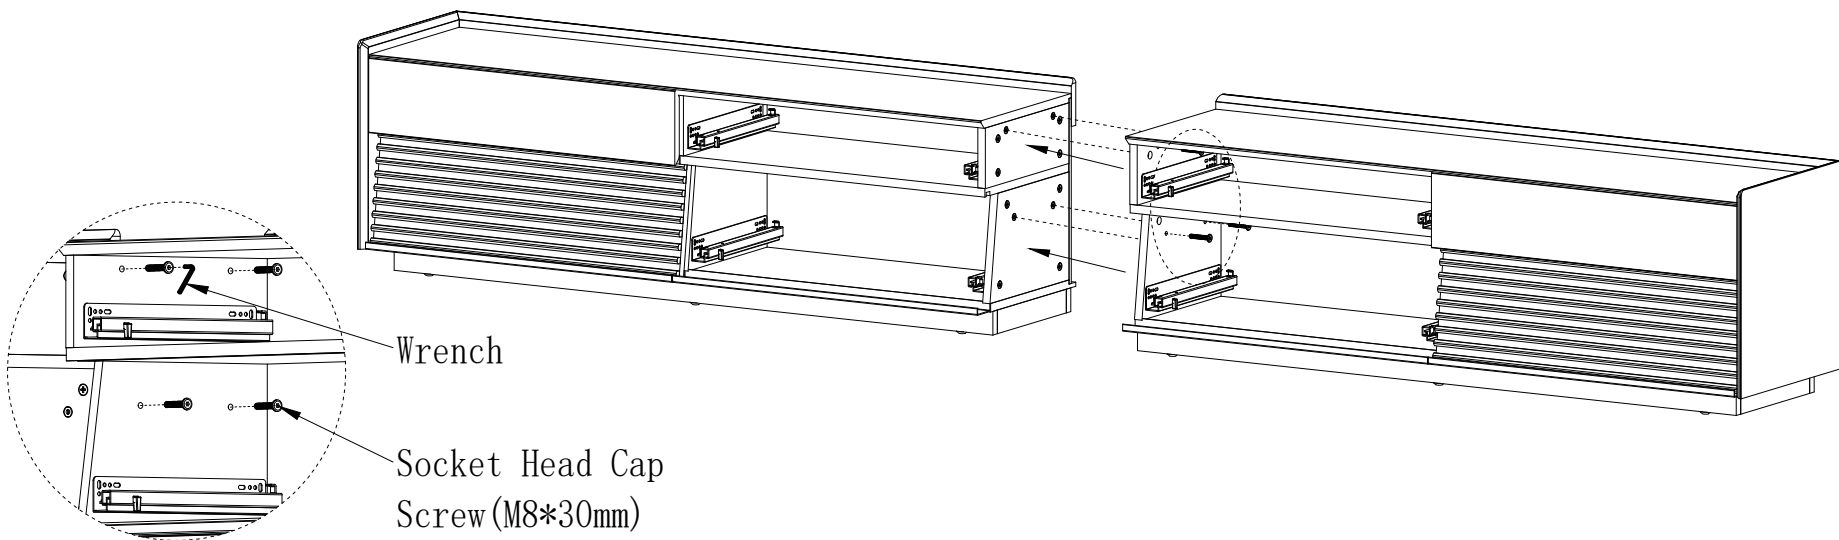

3.The installation is complete

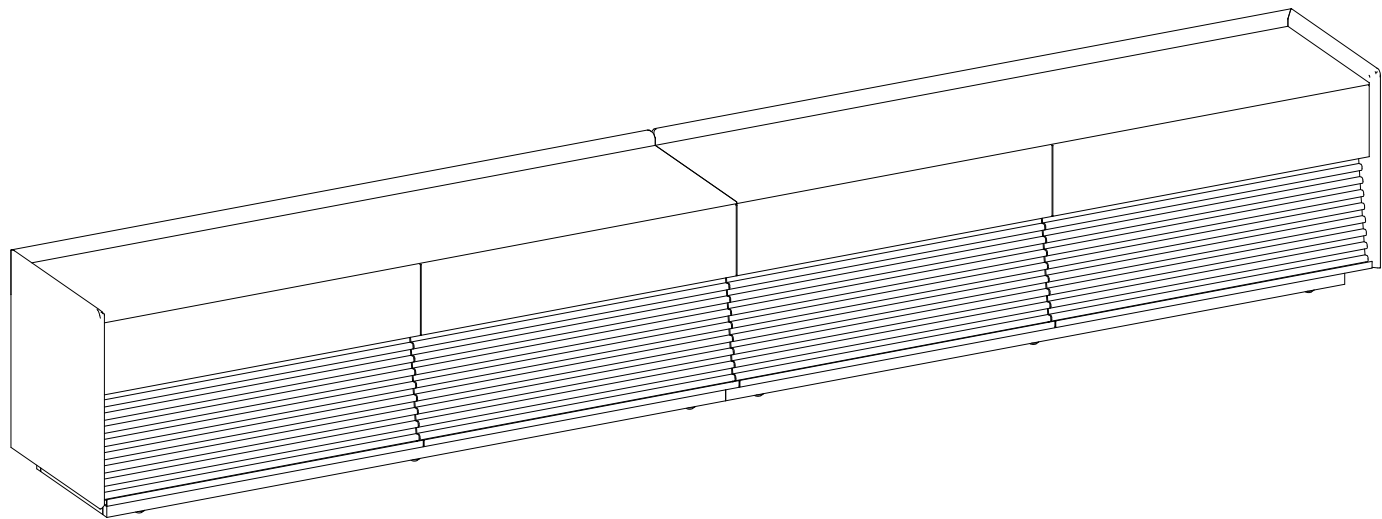

Assembly instructions

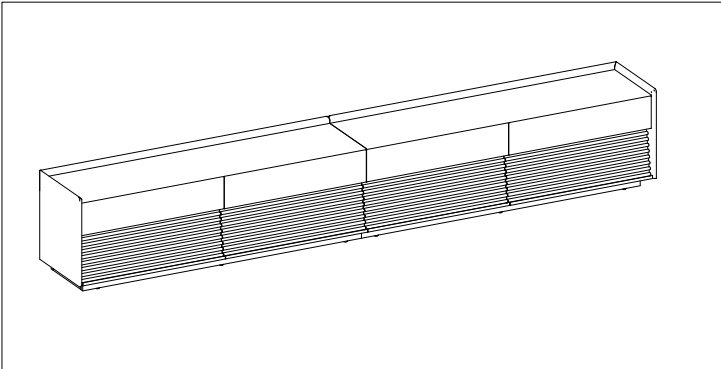

TS8125 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list On a red ribbon are furniture installation accessories

| Serial number | Shape | Name | Quantity required for installation | Spare quantity |
|---------------|-------|---------------------------------|------------------------------------|----------------|
| A | | Socket Head Cap Screw (M8*30mm) | 4 | 1 |
| B | | Wrench | 1 | |
| C | | | | |
| D | | | | |
| E | | | | |
| F | | | | |
| G | | | | |
| H | | | | |
| I | | | | |
| J | | | | |
| K | | | | |



Disassembly and assembly instructions for two bottom buffer rail drawers

1. Two-section bottom buffer guide rail.




Disassembly buckle

The way to teardown drawer:

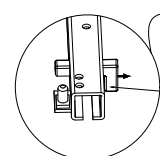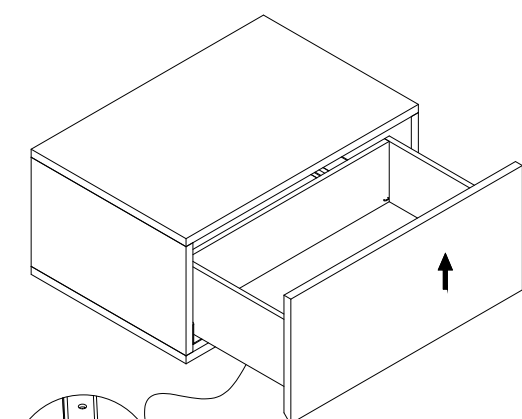


Pull out the
disassembly buckles

Pull out the
disassembly buckle of
the two guide rails
below the drawer at
the same time. Gently
pull the drawer up,
and then you can
take the drawer down.

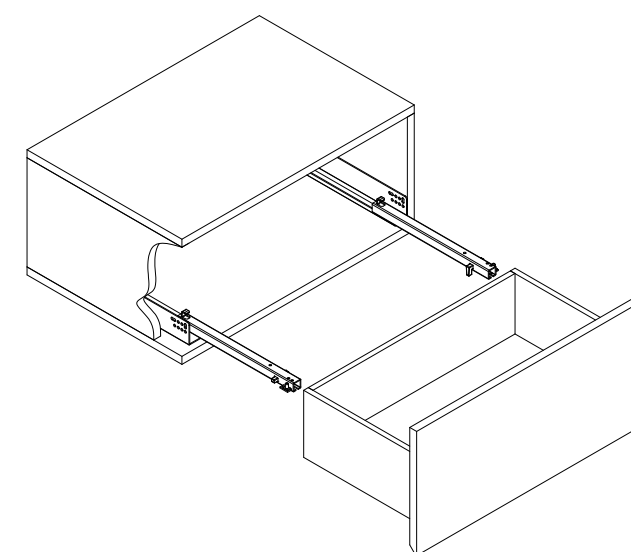

Repeatedly push and
pull the drawer
(2-4 times) to
check whether the
drawer has been
install on the guide
rais properly. If not
, remove the drawer
and reinstall.

3. The way to install drawer:

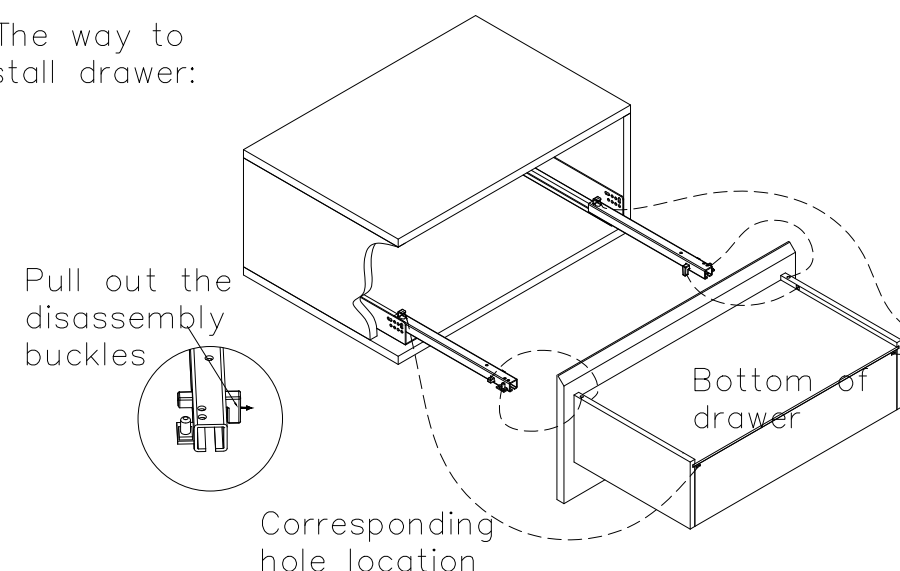


Pull out the
disassembly
buckles


Corresponding
hole location

Bottom of
drawer

Check and make
sure the
disassembly
buckle has been
pulled out.

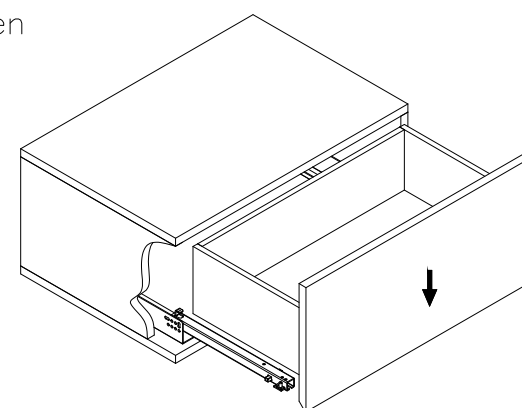

Hold the drawer,
put the holes on
the drawers into
the two-section
bottom buffer
guide rail, and
then press down
the buckle to
remove it.

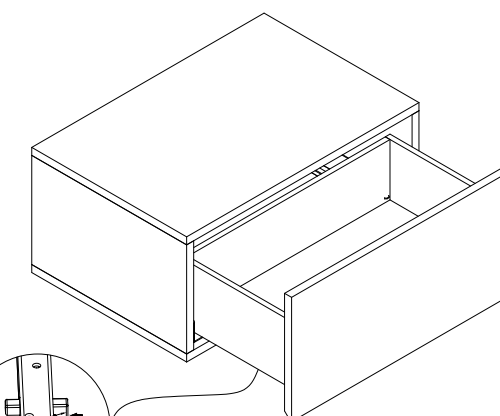

Pull out the
disassembly
buckles

